



# 12Gb/s MegaRAID<sup>®</sup> Tri-Mode Software

**User Guide  
Version 1.10**

---

Broadcom, the pulse logo, Connecting everything, Avago Technologies, Avago, the A logo, MegaRAID, LSI, CacheVault, SSD Guard, SafeStore, and CacheCade are among the trademarks of Broadcom and/or its affiliates in the United States, certain other countries and/or the EU.

Copyright © 2016–2021 Broadcom. All Rights Reserved.

The term "Broadcom" refers to Broadcom Inc. and/or its subsidiaries. For more information, please visit [www.broadcom.com](http://www.broadcom.com)

Broadcom reserves the right to make changes without further notice to any products or data herein to improve reliability, function, or design. Information furnished by Broadcom is believed to be accurate and reliable. However, Broadcom does not assume any liability arising out of the application or use of this information, nor the application or use of any product or circuit described herein, neither does it convey any license under its patent rights nor the rights of others.

# Table of Contents

|   |           |
|---|-----------|
| <b>Overview.....</b>                              | <b>10</b> |
| <b>Tri-Mode Technology.....</b>                   | <b>10</b> |
| <b>Serial-Attached SCSI Device Interface.....</b> | <b>10</b> |
| <b>Serial ATA III Features.....</b>               | <b>11</b> |
| <b>Nonvolatile Memory Express Technology.....</b> | <b>11</b> |
| <b>Solid State Drive Features.....</b>            | <b>11</b> |
| SSD Guard.....                                    | 12        |
| <b>Dimmer Switch Features.....</b>                | <b>12</b> |
| <b>UEFI 2.0 Support.....</b>                      | <b>12</b> |
| <b>Configuration Scenarios.....</b>               | <b>12</b> |
| <b>Technical Support.....</b>                     | <b>14</b> |
| SnapDump Feature.....                             | 14        |
| <b>Introduction to RAID.....</b>                  | <b>15</b> |
| <b>Components and Features.....</b>               | <b>15</b> |
| Drive Group.....                                  | 15        |
| Virtual Drive.....                                | 15        |
| Fault Tolerance.....                              | 16        |
| Multipathing.....                                 | 17        |
| Consistency Check.....                            | 17        |
| Replace.....                                      | 17        |
| Background Initialization.....                    | 18        |
| Profile Management.....                           | 19        |
| Patrol Read.....                                  | 19        |
| Disk Striping.....                                | 19        |
| Disk Mirroring.....                               | 20        |
| Parity.....                                       | 20        |
| Disk Spanning.....                                | 21        |
| Hot Spares.....                                   | 22        |
| Disk Rebuilds.....                                | 23        |
| Rebuild Rate.....                                 | 23        |
| Hot Swap.....                                     | 24        |
| Drive States.....                                 | 24        |
| Virtual Drive States.....                         | 24        |
| Beep Codes.....                                   | 25        |
| Enclosure Management.....                         | 25        |
| <b>RAID Levels.....</b>                           | <b>25</b> |

|  |           |
|--|-----------|
| Summary of RAID Levels.....                        | 25        |
| Selecting a RAID Level.....                        | 26        |
| RAID 0 Drive Groups.....                           | 26        |
| RAID 1 Drive Groups.....                           | 27        |
| RAID 5 Drive Groups.....                           | 28        |
| RAID 6 Drive Groups.....                           | 29        |
| RAID 00 Drive Groups.....                          | 30        |
| RAID 10 Drive Groups.....                          | 31        |
| RAID 50 Drive Groups.....                          | 32        |
| RAID 60 Drive Groups.....                          | 33        |
| <b>RAID Configuration Strategies.....</b>          | <b>34</b> |
| Maximizing Fault Tolerance.....                    | 34        |
| Maximizing Performance.....                        | 35        |
| Maximizing Storage Capacity.....                   | 37        |
| Configuration Planning.....                        | 38        |
| Number of Drives.....                              | 38        |
| <b>RAID Availability.....</b>                      | <b>39</b> |
| RAID Availability Concept.....                     | 39        |
| <b>SafeStore Disk Encryption.....</b>              | <b>40</b> |
| <b>Workflow.....</b>                               | <b>41</b> |
| Enable Security.....                               | 41        |
| Change Security.....                               | 42        |
| Create Secure Virtual Drives.....                  | 42        |
| autoSecureSED.....                                 | 43        |
| Import a Foreign Configuration.....                | 43        |
| <b>Instant Secure Erase.....</b>                   | <b>43</b> |
| <b>HII Configuration Utility.....</b>              | <b>45</b> |
| <b>Behavior of HII.....</b>                        | <b>45</b> |
| <b>Starting the HII Configuration Utility.....</b> | <b>46</b> |
| <b>HII Dashboard View.....</b>                     | <b>47</b> |
| Main Menu.....                                     | 47        |
| HELP.....  | 48        |
| PROPERTIES.....                                    | 49        |
| ACTIONS.....                                       | 50        |
| BACKGROUND OPERATIONS.....                         | 51        |
| MegaRAID ADVANCED SOFTWARE OPTIONS.....            | 51        |
| <b>Critical Boot Messages.....</b>                 | <b>52</b> |
| <b>Managing Configurations.....</b>                | <b>52</b> |
| Creating a Virtual Drive from a Profile.....       | 53        |



|   |           |
|---|-----------|
| Creating a RAID 10 Volume from the Database.....                    | 57        |
| Manually Creating a Virtual Drive.....                              | 59        |
| Viewing Drive Group Properties.....                                 | 64        |
| Viewing Global Hot Spare Drives.....                                | 65        |
| Clearing a Configuration.....                                       | 65        |
| Make Unconfigured Good, Make JBOD, and Enable Security on JBOD..... | 65        |
| Make Unconfigured Good.....   | 66        |
| Make JBOD.....  | 67        |
| Enabling Security on JBOD.....                                      | 67        |
| Managing Foreign Configurations.....                                | 68        |
| Previewing and Importing a Foreign Configuration.....               | 69        |
| Clearing a Foreign Configuration.....                               | 71        |
| <b>Managing Controllers.....</b>                                    | <b>72</b> |
| Viewing Advanced Controller Management Options.....                 | 73        |
| Viewing Advanced Controller Properties.....                         | 75        |
| Managing MegaRAID Advanced Software Options.....                    | 78        |
| Scheduling a Consistency Check.....                                 | 78        |
| Managing Personality Mode.....                                      | 79        |
| Saving or Clearing Controller Events.....                           | 80        |
| Enabling or Disabling Drive Security.....                           | 81        |
| Changing Security Settings.....                                     | 84        |
| Saving the TTY Log.....   | 85        |
| Managing SAS Storage Link Speeds.....                               | 86        |
| Managing PCIe Storage Interface.....                                | 87        |
| Managing Profiles.....  | 88        |
| Downgrading the Firmware When Profiles Are Selected.....            | 90        |
| Setting Cache and Memory Properties.....                            | 91        |
| Running a Patrol Read.....  | 92        |
| Changing Power Save Settings.....                                   | 94        |
| Setting Emergency Spare Properties.....                             | 95        |
| Changing Task Rates.....  | 96        |
| Upgrading the Firmware.....   | 97        |
| <b>Managing Virtual Drives.....</b>                                 | <b>99</b> |
| Selecting Virtual Drive Operations.....                             | 100       |
| Locating Physical Drives in a Virtual Drive.....                    | 101       |
| Deleting a Virtual Drive.....                                       | 101       |
| Hiding a Virtual Drive.....   | 102       |
| Unhiding a Virtual Drive.....                                       | 102       |
| Hiding a Drive Group.....   | 102       |
| Unhiding a Drive Group.....   | 103       |

|   |            |
|---|------------|
| Reconfiguring a Virtual Drive.....                                      | 103        |
| Initializing a Virtual Drive.....                                       | 105        |
| Erasing a Virtual Drive.....  | 105        |
| Securing a Virtual Drive.....   | 106        |
| Running a Consistency Check.....  | 106        |
| Expanding a Virtual Drive.....  | 107        |
| Viewing Associated Drives.....  | 107        |
| Viewing and Managing Virtual Drive Properties and Options.....          | 107        |
| <b>Managing Physical Drives.....</b>                                    | <b>109</b> |
| Performing Drive Operations.....  | 111        |
| Locating a Drive.....   | 111        |
| Making a Drive Unconfigured Bad, Unconfigured Good, or JBOD.....        | 112        |
| Enabling Security on JBOD.....  | 112        |
| Replacing a Drive.....  | 113        |
| Placing a Drive Offline.....  | 114        |
| Placing a Drive Online.....   | 114        |
| Marking a Drive Missing.....  | 114        |
| Replacing a Missing Drive.....  | 115        |
| Assigning a Global Hot Spare Drive.....                                 | 115        |
| Assigning a Dedicated Hot Spare Drive.....                              | 115        |
| Unassigning a Hot Spare Drive.....                                      | 116        |
| Initializing or Erasing a Drive.....                                    | 116        |
| Rebuilding a Drive.....   | 117        |
| Securely Erasing a Drive.....   | 117        |
| Removing a Physical Drive.....  | 118        |
| Making a JBOD.....  | 118        |
| Erasing a JBOD.....   | 118        |
| Viewing Advanced Drive Properties.....                                  | 119        |
| <b>Managing Hardware Components.....</b>                                | <b>120</b> |
| Managing Batteries.....   | 120        |
| Setting Automatic Learn Cycle Properties.....                           | 123        |
| Managing Enclosures.....  | 123        |
| <b>StorCLI.....</b>   | <b>125</b> |
| <b>Overview.....</b>  | <b>125</b> |
| <b>Controllers Supported by the StorCLI Tool.....</b>                   | <b>125</b> |
| <b>Supported Operating Systems.....</b>                                 | <b>125</b> |
| <b>Installing StorCLI on MegaRAID Controllers.....</b>                  | <b>127</b> |
| Installing the StorCLI Tool on Microsoft Windows Operating Systems..... | 127        |
| Installing the StorCLI Tool on the UEFI Environment.....                | 127        |
| Installing the StorCLI Tool on Linux Operating Systems.....             | 127        |

|  |            |
|--|------------|
| Installing the StorCLI Tool on VMware Operating Systems.....                   | 128        |
| <b>StorCLI Tool Command Syntax.....</b>  | <b>128</b> |
| <b>StorCLI Default Logging.....</b>  | <b>130</b> |
| <b>StorCLI Controller Commands.....</b>  | <b>130</b> |
| System Commands.....   | 131        |
| System Show Commands.....  | 131        |
| Controller Commands.....   | 131        |
| Show and Set Controller Properties Commands.....                               | 132        |
| Controller Show Commands.....  | 141        |
| Controller Debug Commands.....   | 142        |
| Controller Background Task Operation Commands.....                             | 143        |
| Premium Feature Key Commands.....  | 147        |
| Controller Security Commands.....  | 148        |
| Flashing Controller Firmware Command while the Firmware Is Operational.....    | 149        |
| Flashing Controller Firmware Command while the Firmware Is Nonoperational..... | 150        |
| Erase Command.....   | 151        |
| Controller Cache Command.....  | 151        |
| Controller Configuration Commands.....   | 151        |
| SnapDump Commands.....   | 151        |
| SPDM Commands.....   | 154        |
| Temperature Command.....   | 155        |
| Diagnostic Command.....  | 155        |
| Drive Commands.....  | 156        |
| Drive Show Commands.....   | 156        |
| Missing Drives Commands.....   | 157        |
| Set Drive State Commands.....  | 158        |
| Drive Initialization Commands.....   | 159        |
| NVMe Drive Commands.....   | 160        |
| Configuration Scenarios.....   | 161        |
| Drive Firmware Download Commands.....  | 163        |
| Drive Firmware Update through Parallel HDD Microcode.....                      | 164        |
| Locate Drives Commands.....  | 165        |
| Prepare to Remove Drives Commands.....   | 165        |
| Drive Security Command.....  | 166        |
| Drive Secure EraseCryptographic Erase Commands.....                            | 166        |
| Drive Sanitize Command.....  | 167        |
| Rebuild Drives Commands.....   | 168        |
| Drive Copyback Commands.....   | 169        |
| Hot Spare Drive Commands.....  | 171        |
| Drive Performance Monitoring Commands.....                                     | 171        |

|   |            |
|---|------------|
| Virtual Drive Commands.....                                   | 174        |
| Add Virtual Drives Commands.....                              | 174        |
| Delete Virtual Drives Commands.....                           | 177        |
| Virtual Drive Show Commands.....                              | 178        |
| Preserved Cache Commands.....                                 | 178        |
| Change Virtual Properties Commands.....                       | 179        |
| Virtual Drive Initialization Commands.....                    | 181        |
| Virtual Drive Erase Commands.....                             | 182        |
| Virtual Drive Migration Commands.....                         | 182        |
| Virtual Drive Consistency Check Commands.....                 | 184        |
| Background Initialization Commands.....                       | 185        |
| Virtual Drive Expansion Commands.....                         | 186        |
| Display the Bad Block Table.....                              | 186        |
| Clear the LDBBM Table Entries.....                            | 186        |
| JBOD Commands.....  | 187        |
| Create JBOD Manually.....                                     | 187        |
| JBOD Properties.....  | 187        |
| JBOD Operations.....  | 188        |
| Delete JBODs or Volumes.....                                  | 189        |
| Foreign Configuration Commands.....                           | 189        |
| BIOS-Related Commands.....                                    | 190        |
| OPROM BIOS Commands.....                                      | 190        |
| Drive Group Commands.....                                     | 191        |
| Drive Group Show Commands.....                                | 191        |
| Virtual Drive Power Settings Commands.....                    | 193        |
| Change Virtual Drive Power Settings Commands.....             | 193        |
| CacheVault Commands.....                                      | 194        |
| Enclosure Commands.....                                       | 194        |
| PHY Commands.....   | 197        |
| PCIe Storage Interface Commands.....                          | 197        |
| Lane Speed Commands.....                                      | 198        |
| Link Configuration Commands.....                              | 199        |
| Logging Commands.....   | 201        |
| Automated Physical Drive Configurations.....                  | 203        |
| Recovery Commands (UEFI Only).....                            | 204        |
| Switching Between I <sup>2</sup> C and PCIe Mode Command..... | 205        |
| <b>Frequently Used Tasks.....</b>                             | <b>206</b> |
| Displaying the Version of the StorCLI Utility.....            | 206        |
| Displaying the StorCLI Utility Help.....                      | 206        |
| Displaying System Summary Information.....                    | 206        |

|   |            |
|---|------------|
| Displaying Free Space in a Controller.....                        | 206        |
| Adding Virtual Drives.....  | 206        |
| Setting the Cache Policy in a Virtual Drive.....                  | 207        |
| Displaying Virtual Drive Information.....                         | 207        |
| Deleting Virtual Drives.....                                      | 208        |
| Flashing Controller Firmware.....                                 | 208        |
| Recovery Commands (UEFI Only).....                                | 208        |
| <b>Appendix A: Events, Messages, and Behaviors.....</b>           | <b>209</b> |
| <b>Error Levels.....</b>  | <b>209</b> |
| <b>Event Messages.....</b>  | <b>209</b> |
| <b>Appendix B: Unsupported Commands in Embedded MegaRAID.....</b> | <b>238</b> |
| <b>Appendix C: CLI Error Messages.....</b>                        | <b>240</b> |
| <b>Error Messages and Descriptions.....</b>                       | <b>240</b> |
| <b>Appendix D: 240 Virtual Drive Feature Limitations.....</b>     | <b>244</b> |
| <b>Host Software Utility.....</b>                                 | <b>244</b> |
| <b>BIOS Known Limitations.....</b>                                | <b>244</b> |
| <b>JBOD Converting to UGOOD.....</b>                              | <b>244</b> |
| <b>Virtual Drives Converting to UGOOD.....</b>                    | <b>245</b> |
| <b>Appendix E: Online Firmware Upgrade and Downgrade.....</b>     | <b>246</b> |
| <b>Appendix F: Boot Messages and BIOS Error Messages.....</b>     | <b>247</b> |
| <b>Displaying Boot Messages.....</b>                              | <b>247</b> |
| <b>Differences in the System Boot Mode.....</b>                   | <b>248</b> |
| <b>Appendix G: Glossary.....</b>                                  | <b>274</b> |
| <b>Appendix H: Revision History.....</b>                          | <b>282</b> |

## Overview

---

This chapter provides an overview of this guide, which documents the utilities used to configure, monitor, and maintain Tri-Mode MegaRAID® Serial-Attached SCSI (SAS) RAID controllers with RAID control capabilities and the storage-related devices connected to them.

This guide describes how to use the Storage Command Line Interface (StorCLI) tool software and the MegaRAID Human Interface Infrastructure (HII) configuration utility.

This chapter documents the SAS technology, Serial ATA (SATA) technology, SSD Guard™, Dimmer Switch, UEFI 2.0, configuration scenarios, and drive types. Other features such as Fast Path and SafeStore™ are described in other chapters of this guide.

## Tri-Mode Technology

The MegaRAID 12Gb/s Tri-Mode RAID controllers are high-performance intelligent SAS/SATA/PCIe (NVMe) devices with RAID control capabilities. The MegaRAID 12Gb/s Tri-Mode RAID controllers provide reliability, high performance, and fault-tolerant disk subsystem management. They are an ideal RAID solution for the internal storage of workgroup, departmental, and enterprise systems. The MegaRAID 12Gb/s Tri-Mode RAID controllers offer a cost-effective way to implement RAID in a server.

Tri-Mode technology brings a wealth of options and flexibility with the use of SAS devices, Serial ATA (SATA) III, SATA III devices, and PCIe (NVMe) within the same storage infrastructure. These devices bring individual characteristics that make each of these more suitable choices depending on your storage needs. MegaRAID gives you the flexibility to combine these three similar technologies on the same controller, within the same enclosure, and in the same virtual drive.

### NOTE

Carefully assess any decision to combine SAS drives, SATA drives, and PCIe (NVMe) within the same virtual drives. Avoid mixing HDD drive types.

The MegaRAID 12Gb/s Tri-Mode RAID controllers are based on the Broadcom® first-to-market SAS IC technology and proven MegaRAID technology. As third-generation PCI Express RAID controllers, the MegaRAID Tri-Mode RAID controllers address the growing demand for increased data throughput and scalability requirements across midrange and enterprise-class server platforms. Broadcom offers a family of MegaRAID Tri-Mode RAID controllers addressing the needs for both internal and external solutions.

The Tri-Mode controllers support the ANSI *Serial Attached SCSI standard, version 2.1*. In addition, the controller supports the SATA II protocol defined by the *Serial ATA specification, version 3.0* and *PCIe Gen 4.0 specification*. Supporting the SAS/SATA/PCIe (NVMe), the tri-mode controller is a versatile controller that provides the backbone of both server environments and high-end workstation environments.

Each port on the Tri-Mode RAID controller supports SAS/SATA/PCIe (NVMe) devices using the following protocols:

- SAS Serial SCSI Protocol (SSP), which enables communication with other SAS devices
- SATA III, which enables communication with other SATA II and SATA III devices
- Serial Management Protocol (SMP), which communicates topology management information directly with an attached SAS expander device
- Serial Tunneling Protocol (STP), which enables communication with a SATA III device through an attached expander
- NVMe, which accesses storage media attached by means of a PCIe bus

## Serial-Attached SCSI Device Interface

SAS is a serial, point-to-point, enterprise-level device interface that leverages the proven SCSI protocol set. SAS is a convergence of the advantages of SATA, SCSI, and Fibre Channel, and is the future mainstay of the enterprise and high-

end workstation storage markets. SAS offers a higher bandwidth per pin than parallel SCSI, and it improves the signal and data integrity.

The SAS interface uses the proven SCSI command set to ensure reliable data transfers, while providing the connectivity and flexibility of point-to-point serial data transfers. The serial transmission of SCSI commands eliminates clock-skew challenges. The SAS interface provides improved performance, simplified cabling, smaller connectors, lower pin count, and lower power requirements when compared to parallel SCSI.

SAS controllers leverage a common electrical and physical connection interface that is compatible with Serial ATA technology. The SAS and SATA protocols use a thin, 7-wire connector instead of the 68-wire SCSI cable or 26-wire ATA cable. The SAS/SATA connector and cable are easier to manipulate, allow connections to smaller devices, and do not inhibit airflow. The point-to-point SATA architecture eliminates inherent difficulties created by the legacy ATA master-slave architecture, while maintaining compatibility with existing ATA firmware.

## Serial ATA III Features

The SATA bus is a high-speed, internal bus that provides a low pin count (LPC), low voltage level bus for device connections between a host controller and a SATA device.

The following list describes the SATA III features of the RAID controllers:

- Supports SATA III data transfers of 12Gb/s
- Supports STP data transfers of 12Gb/s
- Provides a serial, point-to-point storage interface
- Simplifies cabling between devices
- Eliminates the master-slave construction used in parallel ATA
- Allows addressing of multiple SATA II targets through an expander
- Allows multiple initiators to address a single target (in a failover configuration) through an expander

## Nonvolatile Memory Express Technology

Nonvolatile memory express (NVMe) is a logical device interface specification for accessing NVMe storage media attached by means of a PCI Express (PCIe) bus, which removes SCSI from the I/O stack. By its design, NVMe allows host hardware and software to utilize the parallelism found in SSDs. As a result, NVMe reduces I/O overhead and brings performance improvements to the logical device interfaces. These improvements include multiple command queues and reduced latency.

The NVMe interface is designed with following key attributes:

- Support for up to 64K I/O queues with minimal command overhead
- Each I/O queue supports 64K I/O operations
- Each I/O queue is designed for simultaneous multi-threaded processing
- NVMe protocol enables hardware automated queues
- NVMe commands and structures are transferred end-to-end
- The NVMe protocol can be transported across multiple network fabric types

## Solid State Drive Features

The MegaRAID firmware supports the use of SSDs as standard drives. SSD drives are expected to behave like SATA or SAS HDDs except for the following:

- High random read speed (because there is no read-write head to move)
- High performance-to-power ratio, as these drives have very low power consumption compared to HDDs
- Low latency
- High mechanical reliability
- Lower weight and size

**NOTE**

Support for SATA SSD drives applies only to those drives that support ATA-8 ACS compliance.

## SSD Guard

SSD Guard, a feature that is unique to MegaRAID, increases the reliability of SSDs by automatically copying data from a drive with potential to fail to a designated hot spare or newly inserted drive. Because SSDs are more reliable than hard disk drives (HDDs), nonredundant RAID 0 configurations are much more common than in the past. SSD Guard offers added data protection for RAID 0 configurations.

SSD Guard works by looking for a predictive failure while monitoring the SSD Self-Monitoring, Analysis, and Reporting Technology (SMART) error log. If errors indicate that an SSD failure is imminent, the MegaRAID software starts a rebuild to preserve the data on the SSD and sends appropriate warning event notifications.

## Dimmer Switch Features

Powering drives and cooling drives represent a major cost for data centers. The MegaRAID Dimmer Switch feature set reduces the power consumption of the devices connected to a MegaRAID controller, which helps to share resources more efficiently and lowers the cost.

- Dimmer Switch 1 – Spin down unconfigured disks. This feature is configurable and can be disabled.
- Dimmer Switch 2 – Spin down Hot Spares. This feature is configurable and can be disabled.

## UEFI 2.0 Support

UEFI 2.0 provides MegaRAID customers with expanded platform support. The MegaRAID UEFI 2.0 driver, a boot service device driver, handles block I/O requests and SCSI pass-through (SPT) commands, and offers the ability to launch pre-boot MegaRAID management applications through a driver configuration protocol (DCP). The UEFI driver also supports driver diagnostic protocol, which allows administrators to access pre-boot diagnostics.

## Configuration Scenarios

You can use the SAS RAID controllers in three scenarios:

- **Low-end, Internal SATA Configurations**  
In these configurations, use the RAID controller as a high-end SATA II-compatible controller that connects up to eight disks. These configurations are mostly for low-end or entry servers. Enclosure management is provided through out-of-band Inter-IC (I<sup>2</sup>C) bus. Side bands of both types of internal SAS connectors support the SFF-8485 (SGPIO) interface.
- **Midrange Internal SAS Configurations**  
These configurations are like the internal SATA configurations but with high-end disks. These configurations are more suitable for low-range to midrange servers.
- **High-end External SAS/SATA Configurations**  
These configurations are for both internal connectivity and external connectivity, using SATA drives, SAS drives, or both. External enclosure management is supported through in-band, SCSI-enclosed storage. The configuration must support STP and SMP.
- **NVMe Configurations**




These configurations are for internal connectivity only, using NVMe, either direct connect or switch attached. NVMe configurations are suitable for low latency and high performance environments.

The following figure shows a direct-connect configuration. The I<sup>2</sup>C interface communicates with peripherals. The external memory bus provides a 32-bit memory bus, parity checking, and chip select signals for pipelined burst static random access memory (PBSRAM), nonvolatile static random access memory (NVSRAM), and Flash ROM.

**NOTE**


The external memory bus is 32-bit for the SAS 8704ELP and the SAS 8708ELP, and 64-bit for the SAS 8708EM2, the SAS 8880EM2, and the SAS 8888ELP.

**Figure 1: Example of SAS Direct-Connect Application**

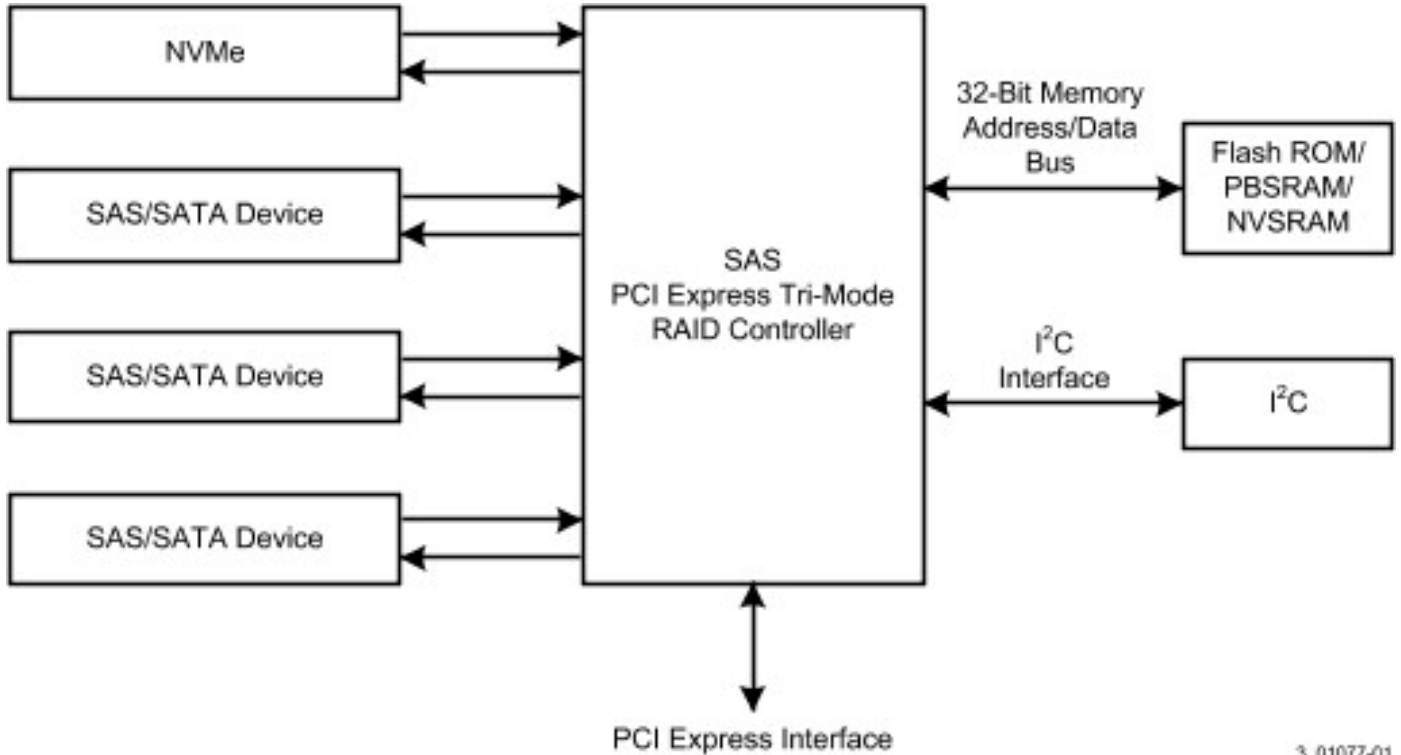

3\_01077-01

The following figure shows an example of a SAS RAID controller configured with an LSI SASx12 expander that is connected to SAS disks, SATA II disks, or both.

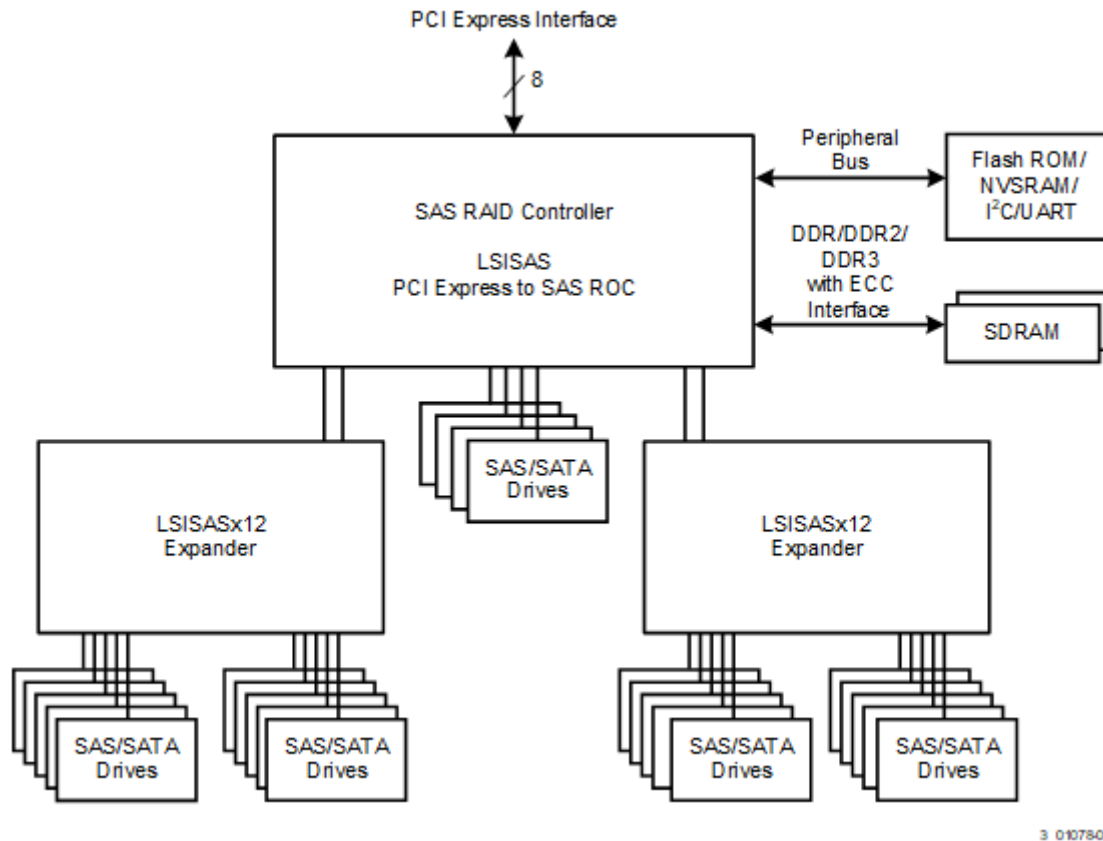**Figure 2: Example of SAS RAID Controller Configured with an LSISASx12 Expander**

## Technical Support

For assistance with installing, configuring, or running your Tri-Mode MegaRAID SAS RAID controllers, contact a Broadcom Technical Support representative. Click the following link to access the Broadcom Technical Support page for storage and board support:

[REQUEST TECHNICAL SUPPORT](#)

From this page, you can call a Technical Support representative, or submit a new service request and view its status.

### Phone Support:

[Call Us For Storage Support](#)

1-800-633-4545 (North America)

00-800-5745-6442 (International)

+ 49 (0) 8941 352 0123 (Germany)

## SnapDump Feature

SnapDump collects critical debug data such as firmware logs, events, and hardware register dumps during an initial unexpected failure. SnapDump data can be saved on the host using the Broadcom APIs, avoiding the need for an external USB-UART Dongle at customer environments.

# Introduction to RAID

---

This chapter describes a Redundant Array of Independent Disks (RAID), RAID functions and benefits, RAID components, RAID levels, and configuration strategies. In addition, it defines the RAID availability concept, and offers tips for configuration planning.

## **RAID Description**

A Redundant Array of Independent Disks is an array, or group, of multiple independent physical drives that provide high performance and fault tolerance. A RAID drive group improves I/O (input/output) performance and reliability. The RAID drive group appears to the host computer as a single storage unit or as multiple virtual units. An I/O transaction is expedited because several drives can be accessed simultaneously.

## **RAID Benefits**

RAID drive groups improve data storage reliability and fault tolerance compared to single-drive storage systems. Data loss resulting from a drive failure can be prevented by reconstructing missing data from the remaining drives. RAID has gained popularity because it improves I/O performance and increases storage subsystem reliability.

## **RAID Functions**

Virtual drives are drive groups or spanned drive groups that are available to the operating system. The storage space in a virtual drive is spread across all of the drives in the drive group.

Your drives must be organized into virtual drives in a drive group, and they must be able to support the RAID level that you select. Some common RAID functions follow:

- Creating hot spare drives
- Configuring drive groups and virtual drives
- Initializing one or more virtual drives
- Accessing controllers, virtual drives, and drives individually
- Rebuilding failed drives
- Verifying that the redundancy data in virtual drives using RAID level 1, 5, 6, 10, 50, or 60 is correct
- Reconstructing virtual drives after changing RAID levels or adding a drive to a drive group
- Selecting a host controller on which to work

# Components and Features

RAID levels describe a system for ensuring the availability and redundancy of data stored on large disk subsystems. See [RAID Levels](#) for detailed information about RAID levels. The following subsections describe the components of RAID drive groups and RAID levels.

## **Drive Group**

A drive group is a group of physical drives. These drives are managed in partitions known as virtual drives.

## **Virtual Drive**

A virtual drive is a partition in a drive group that is made up of contiguous data segments on the drives. A virtual drive can consist of these components:

- An entire drive group
- More than one entire drive group
- A part of a drive group
- Parts of more than one drive group
- A combination of any two of these conditions

**Table 1: MegaRAID Array Limitations**

| Description                            | IMR Board | MR Board                                   | MR Board               |
|--|-----------|--|------------------------|
| Specification                          | 9440-8i   | 9560-16i<br>9560-8i<br>9460-16i<br>9460-8i | 9580-8i8e<br>9480-8i8e |
| Maximum drives per controller          | 63        | 240  | 240                    |
| Maximum drive groups per controller    | 32        | 128  | 128                    |
| Maximum virtual drives per controller  | 32        | 240  | 240                    |
| Maximum hot spares per controller      | 32        | 240  | 240                    |
| Maximum drives per drive group         | 32        | 32   | 32                     |
| Maximum virtual drives per drive group | 16        | 16   | 16                     |
| Maximum spans per virtual drive        | 8         | 8  | 8                      |
| Maximum enclosures per controller      | 2         | 20   | 20                     |
| Maximum enclosures per port            | 2         | 10   | 10                     |
| Maximum drives per enclosure           | 64        | 64   | 64                     |

## Fault Tolerance

Fault tolerance is the capability of the subsystem to undergo a drive failure or failures without compromising data integrity, and processing capability. The RAID controller provides this support through redundant drive groups in RAID levels 1, 5, 6, 10, 50, and 60. The system can still work properly even with drive failure in a drive group, though performance can be degraded to some extent.

In a span of RAID 1 drive groups, each RAID 1 drive group has two drives and can tolerate one drive failure. The span of RAID 1 drive groups can contain up to 32 drives, and tolerate up to 16 drive failures—one in each drive group. A RAID 5 drive group can tolerate one drive failure in each RAID 5 drive group. A RAID 6 drive group can tolerate up to two drive failures.

Each spanned RAID 10 virtual drive can tolerate multiple drive failures, as long as each failure is in a separate drive group. A RAID 50 virtual drive can tolerate two drive failures, as long as each failure is in a separate drive group. RAID 60 drive groups can tolerate up to two drive failures in each drive group.

### NOTE

RAID level 0 is not fault tolerant. If a drive in a RAID 0 drive group fails, the entire virtual drive (all drives associated with the virtual drive) fails.

Fault tolerance is often associated with system availability because it allows the system to be available during the failures. However, fault tolerance means that it is also important for the system to be available during the repair of the problem.

A hot spare is an unused drive. You can use a hot spare to rebuild the data and re-establish redundancy in case of a disk failure in a redundant RAID drive group. After the hot spare is automatically moved into the RAID drive group, the data is automatically rebuilt on the hot spare drive. The RAID drive group continues to handle requests while the rebuild occurs.

Auto-rebuild allows a failed drive to be replaced and the data automatically rebuilt by hot-swapping the drive in the same drive bay. The RAID drive group continues to handle requests while the rebuild occurs.

## Multipathing

The firmware provides support for detecting and using multiple paths from the RAID controllers to the SAS devices that are in enclosures. Devices connected to enclosures have multiple paths to them. With redundant paths to the same port of a device, if one path fails, another path can be used to communicate between the controller and the device. Using multiple paths with load balancing, instead of a single path, can increase reliability through redundancy.

Applications show the enclosures and the drives connected to the enclosures. The firmware dynamically recognizes new enclosures added to a configuration along with their contents (new drives). In addition, the firmware dynamically adds the enclosure and its contents to the management entity currently in use.

Multipathing provides the following features:

- Support for failover, in the event of path failure
- Auto-discovery of new or restored paths while the system is online, and reversion to system load-balancing policy
- Measurable bandwidth improvement to the multi-path device
- Support for changing the load-balancing path while the system is online

The firmware determines whether enclosure modules (ESMs) are part of the same enclosure. When a new enclosure module is added (allowing multi-path) or removed (going single path), an Asynchronous Event Notification (AEN) is generated. AENs about drives contain correct information about the enclosure, when the drives are connected by multiple paths. The enclosure module detects partner ESMs and issues events appropriately.

In a system with two ESMs, you can replace one of the ESMs without affecting the virtual drive availability. For example, the controller can run heavy I/Os, and when you replace one of the ESMs, I/Os should not stop. The controller uses different paths to balance the load on the entire system.

In the LSI® Storage Authority (LSA) utility, when multiple paths are available to a drive, the drive information shows only one enclosure. The utility shows that a redundant path is available to a drive. All drives with a redundant path display this information. The firmware supports online replacement of enclosure modules.

## Consistency Check

The consistency check operation verifies correctness of the data in virtual drives that use RAID levels 1, 5, 6, 10, 50, and 60. RAID 0 does not provide data redundancy. For example, in a system with parity, checking consistency means calculating the data on one drive and comparing the results to the contents of the parity drive.

### NOTE

You should perform a consistency check at least once a month.

## Replace

The Replace operation lets you copy data from a source drive into a destination drive that is not a part of the virtual drive. The Replace operation often creates or restores a specific physical configuration for a drive group (for example, a specific arrangement of drive group members on the device I/O buses). You can run a Replace operation automatically or manually.

Typically, when a drive fails or is expected to fail, the data is rebuilt on a hot spare. The failed drive is replaced with a new disk. Then the data is copied from the hot spare to the new drive, and the hot spare reverts from a rebuild drive to its

original hot spare status. The Replace operation runs as a background activity, and the virtual drive is still available online to the host.

A Replace operation is also initiated when the first SMART error occurs on a drive that is part of a virtual drive. The destination drive is a hot spare that qualifies as a rebuild drive. The drive that has the SMART error is marked as *failed* only after the successful completion of the Replace operation. This situation avoids putting the drive group in Degraded status.

The Replace operation runs as a background activity, and the virtual drive is still available online to the host.

**NOTE**

During a Replace operation, if the drive group involved in the Replace operation is deleted because of a virtual drive deletion, the destination drive reverts to an Unconfigured Good state or Hot Spare state.

**NOTE**

When a Replace operation is enabled, the alarm continues to beep even after a rebuild is complete; the alarm stops beeping only when the Replace operation is completed.

**Order of Precedence**

In the following scenarios, a rebuild takes precedence over a Replace operation:

- If a Replace operation is already taking place to a hot spare drive, and any virtual drive on the controller degrades, the Replace operation aborts, and a rebuild starts. A Rebuild operation changes the virtual drive to the Optimal state.
- The Rebuild operation takes precedence over the Replace operation when the conditions exist to start both operations. Consider the following examples:
  - Hot spare is not configured (or unavailable) in the system.
  - Two drives (both members of virtual drives) exist, with one drive exceeding the SMART error threshold, and the other failed.
  - If you add a hot spare (assume a global hot spare) during a Replace operation, the Replace operation is ended abruptly, and a Rebuild operation starts on the hot spare.

**Background Initialization**

Background initialization is a check for media errors on the drives when you create a virtual drive. It is an automatic operation that starts five minutes after you create the virtual drive. This check ensures that striped data segments are the same on all of the drives in the drive group.

Background initialization is similar to a consistency check. The difference between the two is that a background initialization is forced on new virtual drives and a consistency check is not.

RAID 5 virtual drives and RAID 6 virtual drives require a minimum number of drives for a background initialization to start. If fewer drives exist, the background initialization does not start. The background initialization needs to be started manually. The following number of drives are required:

- RAID1 virtual drives must have at least two drives to start initialization.
- RAID 5 virtual drives must have at least five drives for background initialization to start.
- RAID 6 virtual drives must have at least seven drives for background initialization to start.

The default and recommended background initialization rate is 30 percent. Before you change the Rebuild rate, you must stop the background initialization or the rate change will not affect the background initialization rate. After you stop background initialization and change the Rebuild rate, the rate change takes effect when you restart background initialization.

## Profile Management

Profile Management allows you to have multiple configurations supported under each personality mode. Profiles are used to customize the controller to deliver the best performance for that configuration. For example, a profile with no PCI device support can support a higher Queue Depth than a profile that supports 32 PCI devices.

When you choose profile management either through HII, StorCLI, or LSA, the firmware provides a list of profiles that you can select for the current personality.

### Compatibility Check

Applications may sometime fail the profile change request for the following reasons:

- When the devices in the storage environment exceeds the maximum profile count.
- When a particular profile does not support the type of device that is discovered. For example, the storage topology has SAS/SATA devices, but the user requests an NVMe-only profile.
- When pinned cache is present.
- When critical background operations such as Rebuild, Copyback, Reconstruction, Initialization of Logical Drives, Consistency Check, Patrol Read are running.

## Patrol Read

Patrol read involves the review of your system for possible drive errors that could lead to drive failure and then action to correct errors. The goal is to protect data integrity by detecting drive failure before the failure can damage data. The corrective actions depend on the drive group configuration and the type of errors.


Patrol read starts only when the controller is idle for a defined period of time and no other background tasks are active, though it can continue to run during heavy I/O processes.

## Disk Striping

Disk striping lets you write data across multiple drives instead of just one drive. Disk striping involves partitioning each drive storage space into stripes that can vary in size from a minimum of 64 KB to 1 MB for MegaRAID controllers and 64 KB for Integrated MegaRAID controllers. These stripes are interleaved in a repeated sequential manner. The combined storage space is composed of stripes from each drive. You should keep stripe sizes the same across RAID drive groups.

For example, in a four-disk system using only disk striping (used in RAID level 0), segment 1 is written to disk 1, segment 2 is written to disk 2, and so on. Disk striping enhances performance because multiple drives are accessed simultaneously, but disk striping does not provide data redundancy.

**Figure 3: Example of Disk Striping (RAID 0)**

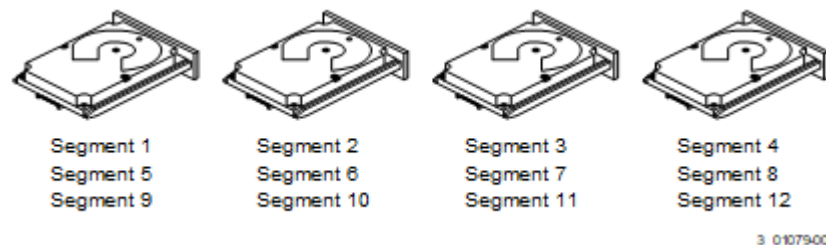

### Stripe Width

Stripe width is the number of drives involved in a drive group where striping is implemented. For example, a four-disk drive group with disk striping has a stripe width of four.

## Stripe Size

The stripe size is the length of the interleaved data segments that the RAID controller writes across multiple drives, not including parity drives. For example, consider a stripe that contains 1 MB of drive space and has 64 KB of data residing on each drive in the stripe. In this case, the stripe size is 1 MB and the strip size is 64 KB.

## Strip Size


The strip size is the portion of a stripe that resides on a single drive.

## Disk Mirroring

With disk mirroring (used in RAID 1 and RAID 10), data written to one drive is simultaneously written to another drive. The primary advantage of disk mirroring is that it provides 100 percent data redundancy. Because the contents of the disk are completely written to a second disk, data is not lost if one disk fails. In addition, both drives contain the same data at all times, so either disk can act as the operational disk. If one disk fails, the contents of the other disk can run the system and reconstruct the failed disk.

Disk mirroring provides 100 percent redundancy, but it is expensive because each drive in the system must be duplicated. The following figure shows an example of disk mirroring.

**Figure 4: Example of Disk Mirroring (RAID 1)**

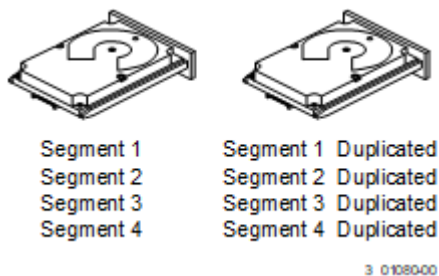

## Parity

Parity generates a set of redundancy data from two or more parent data sets. The redundancy data can be used to reconstruct one of the parent data sets in the event of a drive failure. Parity data does not fully duplicate the parent data sets, but parity generation can slow the write process. In a RAID drive group, this method is applied to entire drives or stripes across all of the drives in a drive group. The types of parity are described in the following table.


**Table 2: Types of Parity**

| Parity Type | Description  |
|-------------|--|
| Dedicated   | The parity data on two or more drives is stored on an additional disk.   |
| Distributed | The parity data is distributed across more than one drive in the system. |

A RAID 5 drive group combines distributed parity with disk striping. If a single drive fails, it can be rebuilt from the parity and the data on the remaining drives. An example of a RAID 5 drive group is shown in the following figure. A RAID 5 drive group uses parity to provide redundancy for one drive failure without duplicating the contents of entire drives. A RAID 6 drive group also uses distributed parity and disk striping, but adds a second set of parity data so that it can survive up to two drive failures.



**Figure 5: Example of Distributed Parity (RAID 5 Drive Group)**

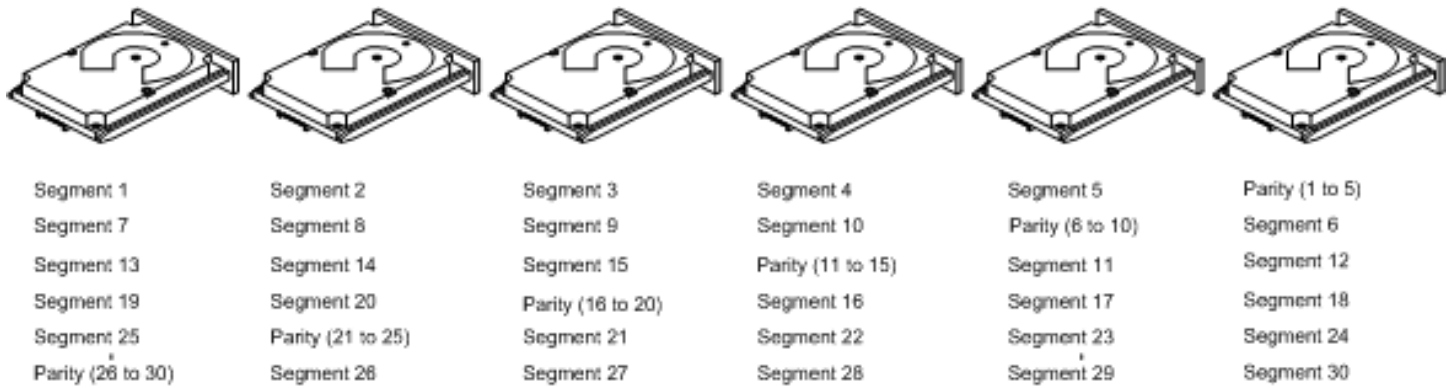

Note: Parity is distributed across all drives in the drive group.


3\_01081-00

## Disk Spanning

Disk spanning allows multiple drives to function like one big drive. Spanning overcomes lack of disk space and simplifies storage management by combining existing resources or adding relatively inexpensive resources. For example, four 20-GB drives can be combined to appear to the operating system as a single 80-GB drive.

Spanning alone does not provide reliability or performance enhancements. Spanned virtual drives must have the same stripe size and must be contiguous. In the following figure, RAID 1 drive groups are turned into a RAID 10 drive group.

**Figure 6: Example of Disk Spanning**

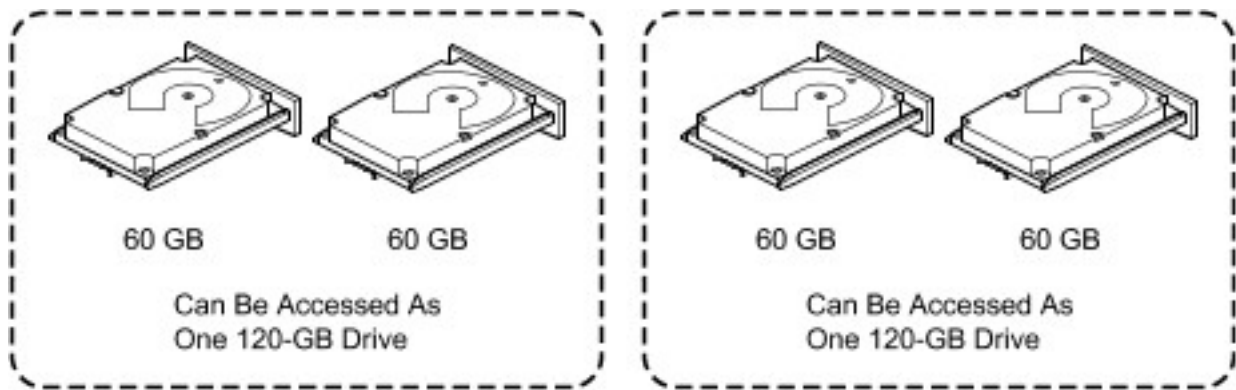

3\_01082-00

Spanning two contiguous RAID 0 virtual drives does not produce a new RAID level or add fault tolerance. It does increase the capacity of the virtual drive and improves performance by doubling the number of spindles.

### Spanning for RAID 00, RAID 10, RAID 50, and RAID 60 Drive Groups

The following table describes how to configure RAID 00, RAID 10, RAID 50, and RAID 60 drive groups by spanning. The virtual drives must have the same stripe size and the maximum number of spans is 8. The full drive capacity is used when you span virtual drives; you cannot specify a smaller drive capacity.

**Table 3: Spanning for RAID 10, RAID 50, and RAID 60 Drive Groups**

| Level | Description  |
|-------|--|
| 00    | Configure a RAID 00 by spanning two or more contiguous RAID 0 virtual drives, up to the maximum number of supported devices for the controller.  |
| 10    | Configure RAID 10 by spanning two or more contiguous RAID 1 virtual drives, up to the maximum number of supported devices for the controller. A RAID 10 drive group supports a maximum of 8 spans. You must use an even number of drives in each RAID virtual drive in the span. The RAID 1 virtual drives must have the same stripe size. |
| 50    | Configure a RAID 50 drive group by spanning two or more contiguous RAID 5 virtual drives. The RAID 5 virtual drives must have the same stripe size.  |
| 60    | Configure a RAID 60 drive group by spanning two or more contiguous RAID 6 virtual drives. The RAID 6 virtual drives must have the same stripe size.  |

**NOTE**

In a spanned virtual drive (RAID 10, RAID 50, RAID 60) the span numbering starts from Span 0, Span 1, Span 2, and so on.

## Hot Spares

A hot spare is an extra, unused drive that is part of the disk subsystem. A hot spare is usually in Standby mode, ready for service if a drive fails. Hot spares let you replace failed drives without a system shutdown or user intervention. The MegaRAID RAID controllers can implement automatic and transparent rebuilds of failed drives using hot spare drives, which provide a high degree of fault tolerance and zero downtime.

The RAID management software lets you specify drives as hot spares. When a hot spare is needed, the RAID controller assigns the hot spare that has a capacity closest to and at least as great as the failed drive to take the place of the failed drive. The failed drive is removed from the virtual drive and marked *ready awaiting removal* after the rebuild to a hot spare begins. You can make hot spares of the drives that are not in a RAID virtual drive.

You can use the RAID management software to designate the hot spare to have enclosure affinity, which means that if drive failures are present on a split backplane configuration, the hot spare will be used first on the backplane side in which it resides.

If the hot spare is designated as having enclosure affinity, it tries to rebuild any failed drives on the backplane in which it resides before rebuilding any other drives on other backplanes.

**NOTE**

If a Rebuild operation to a hot spare fails for any reason, the hot spare drive is marked as failed. If the source drive fails, both the source drive and the hot spare drive are marked as *failed*.

The hot spare can be of two types:

- Global hot spare
- Dedicated hot spare

### Global Hot Spare

Use a global hot spare drive to replace any failed drive in a redundant drive group as long as its capacity is equal to or larger than the coerced capacity of the failed drive. A global hot spare defined on any channel should be available to replace a failed drive on both channels.

Global hot spares can be created without first creating a logical drive. If all logical drives are deleted, global hot spares become unconfigured good.

## Dedicated Hot Spare

Use a dedicated hot spare to replace a failed drive only in a selected drive group. One or more drives can be designated as a member of a spare drive pool. The most suitable drive from the pool is selected for failover. A dedicated hot spare is used before one from the global hot spare pool.

Hot spare drives can be located on any RAID channel. Standby hot spares (not being used in RAID drive group) are polled every 60 seconds at a minimum, and their status made available in the drive group management software. RAID controllers offer the ability to rebuild with a disk that is in a system but not initially set to be a hot spare.

Observe the following parameters when using hot spares:

- Hot spares are used only in drive groups with redundancy: RAID levels 1, 5, 6, 10, 50, and 60.
- A hot spare connected to a specific RAID controller can be used to rebuild a drive that is connected only to the same controller.
- You must assign the hot spare to one or more drives through the controller BIOS or use drive group management software to place it in the hot spare pool.
- A hot spare must have free space equal to or greater than the drive it replaces.  
For example, to replace a 500-GB drive, the hot spare must be 500-GB or larger.
- A dedicated hot spare becomes a global hot spare if all the logical drives in the drive group that the hot spare is dedicated to are deleted (the drive group is deleted).

## Disk Rebuilds

When a drive in a RAID drive group fails, you can rebuild the drive by re-creating the data that was stored on the drive before it failed. The RAID controller re-creates the data using the data stored on the other drives in the drive group. Rebuilding can be performed only in drive groups with data redundancy, which includes RAID 1, 5, 6, 10, 50, and 60 drive groups.

The RAID controller uses hot spares to rebuild failed drives automatically and transparently, at user-defined rebuild rates. If a hot spare is available, the Rebuild operation can start automatically when a drive fails. If a hot spare is not available, the failed drive must be replaced with a new drive so that the data on the failed drive can be rebuilt.

The failed drive is removed from the virtual drive and marked *ready awaiting removal* when the Rebuild operation to a hot spare begins. If the system goes down during a Rebuild operation, the RAID controller automatically resumes the rebuild after the system reboots.

### NOTE

When the Rebuild operation to a hot spare begins, the failed drive is often removed from the virtual drive before management applications detect the failed drive. When this removal occurs, the event logs show the drive rebuilding to the hot spare without showing the failed drive. The formerly failed drive will be marked as *ready* after a Rebuild operation begins to a hot spare. If a source drive fails during a rebuild to a hot spare, the Rebuild operation fails, and the failed source drive is marked as *offline*. In addition, the rebuilding hot spare drive is changed back to a hot spare. After a Rebuild operation fails because of a source drive failure, the dedicated hot spare is still dedicated and assigned to the correct drive group, and the global hot spare is still global.

An automatic drive Rebuild operation will not start if you replace a drive during a RAID-level migration. The Rebuild operation must be started manually after the expansion or migration procedure is complete. (RAID-level migration changes a virtual drive from one RAID level to another.)

## Rebuild Rate

The rebuild rate is the percentage of the compute cycles dedicated to rebuilding failed drives. A rebuild rate of 100 percent means that the system assigns priority to rebuilding the failed drives.

The rebuild rate can be configured between 0 percent and 100 percent. At 0 percent, the Rebuild operation is performed only if the system is not doing anything else. At 100 percent, the Rebuild operation has a higher priority than any other system activity. Using 0 percent or 100 percent is not recommended. The default rebuild rate is 30 percent.

## Hot Swap

A hot swap is the manual replacement of a defective drive unit while the computer is still running. When a new drive has been installed, a Rebuild operation occurs automatically if these situation occurs:

- The newly inserted drive is the same capacity as or larger than the failed drive.
- The newly inserted drive is placed in the same drive bay as the failed drive it is replacing.

The RAID controller can be configured to detect the new drives and rebuild the contents of the drive automatically.

## Drive States

A drive state is a property indicating the status of the drive. The drive states are described in the following table.

**Table 4: Drive States**

| State             | Description  |
|-------------------|--|
| Online            | A drive that can be accessed by the RAID controller and is part of the virtual drive.  |
| Unconfigured Good | A drive that is functioning normally but is not configured as a part of a virtual drive or as a hot spare.                           |
| Hot Spare         | A drive that is powered up and ready for use as a spare in case an online drive fails.   |
| Failed            | A drive that was originally configured as Online or Hot Spare, but on which the firmware detects an unrecoverable error.             |
| Rebuild           | A drive to which data is being written to restore full redundancy for a virtual drive.   |
| Unconfigured Bad  | A drive on which the firmware detects an unrecoverable error; the drive was Unconfigured Good or the drive could not be initialized. |
| Missing           | A drive that was Online but which has been removed from its location.  |
| Offline           | A drive that is part of a virtual drive but which has invalid data as far as the RAID configuration is concerned.                    |
| Shield State      | An interim state of physical drive for diagnostic operations.  |
| Copyback          | A drive that has replaced the failed drive in the RAID configuration.  |

## Virtual Drive States

The virtual drive states are described in the following table.

**Table 5: Virtual Drive States**

| State            | Description  |
|------------------|--|
| Optimal          | The virtual drive operating condition is good. All configured drives are online.   |
| Degraded         | The virtual drive operating condition is not optimal. One of the configured drives has failed or is offline.   |
| Partial Degraded | The operating condition in a RAID 6 virtual drive is not optimal. One of the configured drives has failed or is offline. A RAID 6 drive group can tolerate up to two drive failures. |
| Offline          | The virtual drive is not available to the RAID controller.   |

## Beep Codes

An alarm sounds on the controller when a virtual drive changes from an optimal state to another state, when a hot spare rebuilds, and for test purposes.

**Table 6: Beep Codes, Events, and Virtual Drive States**

| Event   | Virtual Drive State | Beep Code                     |
|---|---------------------|-------------------------------|
| RAID 0 virtual drive loses a virtual drive                                  | Offline             | 3 seconds on and 1 second off |
| RAID 1 virtual drive loses a mirror drive                                   | Degraded            | 1 second on and 1 second off  |
| RAID 1 virtual drive loses both drives                                      | Offline             | 3 seconds on and 1 second off |
| RAID 5 virtual drive loses one drive  | Degraded            | 1 second on and 1 second off  |
| RAID 5 virtual drive loses two or more drives                               | Offline             | 3 seconds on and 1 second off |
| RAID 6 virtual drive loses one drive  | Partially Degraded  | 1 second on and 1 second off  |
| RAID 6 virtual drive loses two drives                                       | Degraded            | 1 second on and 1 second off  |
| RAID 6 virtual drive loses more than two drives                             | Offline             | 3 seconds on and 1 second off |
| A hot spare completes the Rebuild process and is brought into a drive group | N/A                 | 1 second on and 3 seconds off |
| A copy back occurs after a Rebuild operation completes                      | Optimal             | 1 second on and 3 seconds off |

## Enclosure Management

Enclosure management is the intelligent monitoring of the disk subsystem by software, hardware, or both. The disk subsystem can be part of the host computer or can reside in an external disk enclosure. Enclosure management helps you stay informed of events in the disk subsystem, such as a drive or power supply failure. Enclosure management increases the fault tolerance of the disk subsystem.

## RAID Levels

The RAID controller supports RAID levels 0, 00, 1, 5, 6, 10, 50, and 60. The supported RAID levels are summarized in the following section.

In addition, the RAID controller supports independent drives (configured as RAID 0 and RAID 00 drive groups) The following sections describe the RAID levels in detail.

### Summary of RAID Levels

A RAID 0 drive group uses striping to provide high data throughput, especially for large files in an environment that does not require fault tolerance.

A RAID 1 drive group uses mirroring so that data written to one drive is simultaneously written to another drive. The RAID 1 drive group is good for small databases or other applications that require small capacity but complete data redundancy.

A RAID 5 drive group uses disk striping and parity data across all drives (distributed parity) to provide high data throughput, especially for small random access.

A RAID 6 drive group uses distributed parity, with two independent parity blocks per stripe, and disk striping. A RAID 6 virtual drive can survive the loss of any two drives without losing data. A RAID 6 drive group, which requires a minimum of three drives, is similar to a RAID 5 drive group. Blocks of data and parity information are written across all drives. The parity information is used to recover the data if one or two drives fail in the drive group.

A RAID 00 drive group is a spanned drive group that creates a striped set from a series of RAID 0 drive groups.

A RAID 10 drive group, a combination of RAID 0 and RAID 1 drive groups, consists of striped data across mirrored spans. A RAID 10 drive group is a spanned drive group that creates a striped set from a series of mirrored drives. A RAID 10 drive group allows a maximum of 8 spans. You must use an even number of drives in each RAID virtual drive in the span. The RAID 1 virtual drives must have the same stripe size. A RAID 10 drive group provides high data throughput and complete data redundancy but uses a larger number of spans.

A RAID 50 drive group, a combination of RAID 0 and RAID 5 drive groups, uses distributed parity and disk striping. A RAID 50 drive group is a spanned drive group in which data is striped across multiple RAID 5 drive groups. A RAID 50 drive group works best with data that requires high reliability, high request rates, high data transfers, and medium-to-large capacity.

**NOTE**

Having virtual drives of different RAID levels, such as RAID level 0 and RAID level 5, in the same drive group is not allowed. For example, if an existing RAID 5 virtual drive is created out of partial space in an array, the next virtual drive in the array has to be RAID level 5 only.

A RAID 60 drive group, a combination of RAID level 0 and RAID level 6, uses distributed parity, with two independent parity blocks per stripe in each RAID set, and disk striping. A RAID 60 virtual drive can survive the loss of two drives in each of the RAID 6 sets without losing data. A RAID 60 drive group works best with data that requires high reliability, high request rates, high data transfers, and medium-to-large capacity.

**NOTE**

The MegaSR controller supports the standard RAID levels – RAID 0, RAID 1, RAID 5, and RAID 10. The MegaSR controller comes in two variants, SCU and AHCI, both supporting a maximum of eight physical drives. A maximum of eight virtual drives can be created (using RAID 0, RAID 1, RAID 5, and RAID 10 only) and controlled by the MegaSR controller. One virtual drive can be created on an array (a maximum of eight if no other virtual drives are already created on the MegaSR controller), or you can create eight arrays with one virtual drive each. However, on a RAID 10 drive group, you can create only one virtual drive on a particular array.

## Selecting a RAID Level

Select the optimal RAID level when you create a system drive. The optimal RAID level for your drive group depends on a number of factors:

- The number of drives in the drive group
- The capacity of the drives in the drive group
- The need for data redundancy
- The disk performance requirements

## RAID 0 Drive Groups

A RAID 0 drive group provides disk striping across all drives in the RAID drive group. A RAID 0 drive group does not provide any data redundancy, but the RAID 0 drive group offers the best performance of any RAID level. The RAID 0 drive group breaks up data into smaller segments, and then stripes the data segments across each drive in the drive group. The size of each data segment is determined by the stripe size. A RAID 0 drive group offers high bandwidth.


**NOTE**

RAID level 0 is not fault tolerant. If a drive in a RAID 0 drive group fails, the entire virtual drive (all drives associated with the virtual drive) fails.

By breaking up a large file into smaller segments, the RAID controller can use both SAS drives and SATA drives to read or write the file faster. A RAID 0 drive group involves no parity calculations to complicate the write operation. This situation makes the RAID 0 drive group ideal for applications that require high bandwidth but do not require fault tolerance. The following table provides an overview of the RAID 0 drive group. The following figure provides a graphic example of a RAID 0 drive group.

**Table 7: RAID 0 Drive Group Overview**

|               |  |
|---------------|--|
| Uses          | Provides high data throughput, especially for large files.<br>Any environment that does not require fault tolerance. |
| Strong points | Provides increased data throughput for large files.<br>No capacity loss penalty for parity.                          |
| Weak points   | Does not provide fault tolerance or high bandwidth.<br>All data is lost if any drive fails.                          |
| Drives        | 1 to 32  |

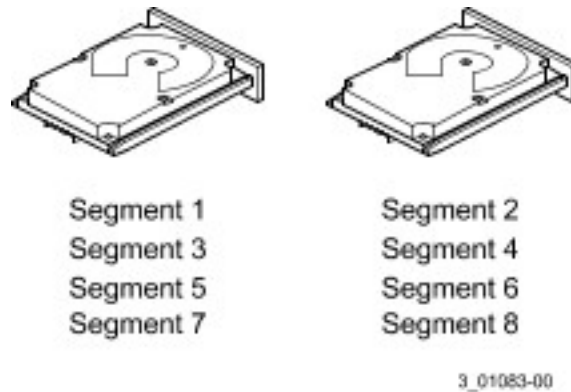**Figure 7: RAID 0 Drive Group Example with Two Drives**

## RAID 1 Drive Groups


In RAID 1 drive groups, the RAID controller duplicates all data from one drive to a second drive in the drive group. A RAID 1 drive group supports an even number of drives from 2 through 32 in a single span. The RAID 1 drive group provides complete data redundancy, but at the cost of doubling the required data storage capacity. The following table provides an overview of a RAID 1 drive group. The following figure provides a graphic example of a RAID 1 drive group.

**Table 8: RAID 1 Drive Group Overview**

|               |   |
|---------------|---|
| Uses          | Use RAID 1 drive groups for small databases or any other environment that requires fault tolerance but small capacity.                      |
| Strong points | Provides complete data redundancy.<br>A RAID 1 drive group is ideal for any application that requires fault tolerance and minimal capacity. |
| Weak points   | Requires twice as many drives.<br>Performance is impaired during drive rebuilds.  |
| Drives        | 2 through 32 (must be an even number of drives)   |



**Figure 8: RAID 1 Drive Group**

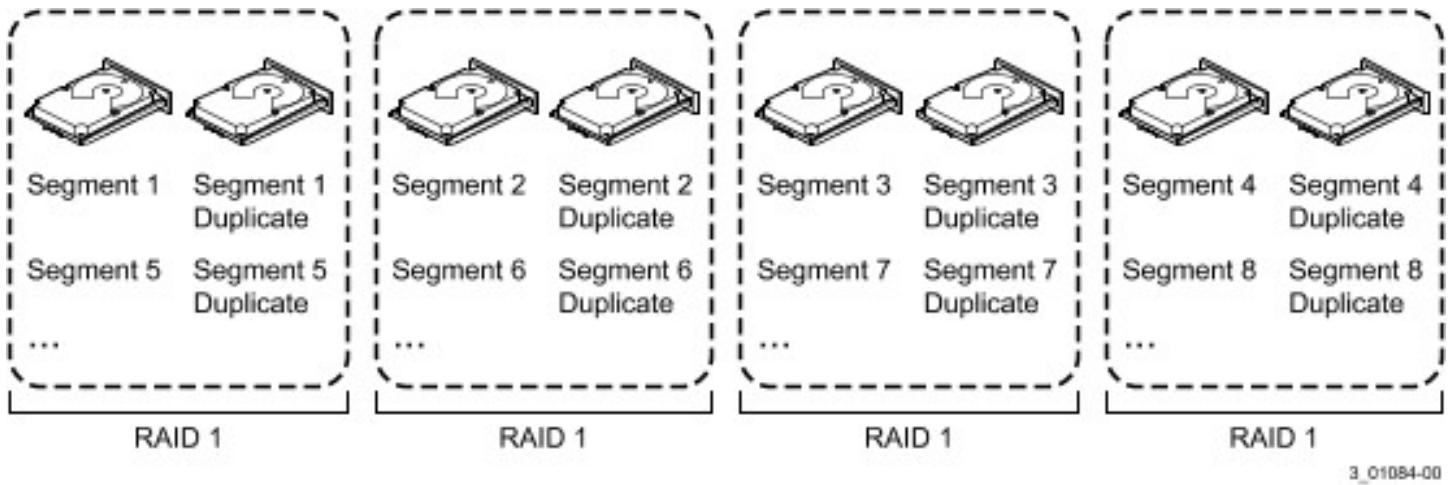

## RAID 5 Drive Groups

A RAID 5 drive group includes disk striping at the block level and parity. Parity is the data’s property of being odd or even, and parity checking is used to detect errors in the data. In RAID 5 drive groups, the parity information is written to all drives. A RAID 5 drive group is best suited for networks that perform a lot of small input/output (I/O) transactions simultaneously.


The following table provides an overview of a RAID 5 drive group. The following figure provides a graphic example of a RAID 5 drive group.

**Table 9: RAID 5 Drive Group Overview**

|               |  |
|---------------|--|
| Uses          | Provides high data throughput, especially for large files.<br>Use RAID 5 drive groups for transaction processing applications because each drive can read and write independently.<br>If a drive fails, the RAID controller uses the parity drive to re-create all missing information.<br>Use also for online customer service that requires fault tolerance.<br>Use for any application that has high read request rates but random write request rates. |
| Strong points | Provides data redundancy, high read rates, and good performance in most environments.<br>Provides redundancy with lowest loss of capacity.   |
| Weak points   | Not well suited to tasks requiring lots of small writes or small block write operations.<br>Suffers more impact if no cache is used.<br>Drive performance is reduced if a drive is being rebuilt.<br>Environments with few processes do not perform as well because the RAID drive group overhead is not offset by the performance gains in handling simultaneous processes.   |
| Drives        | 3 through 32   |



**Figure 9: RAID 5 Drive Group with Six Drives**

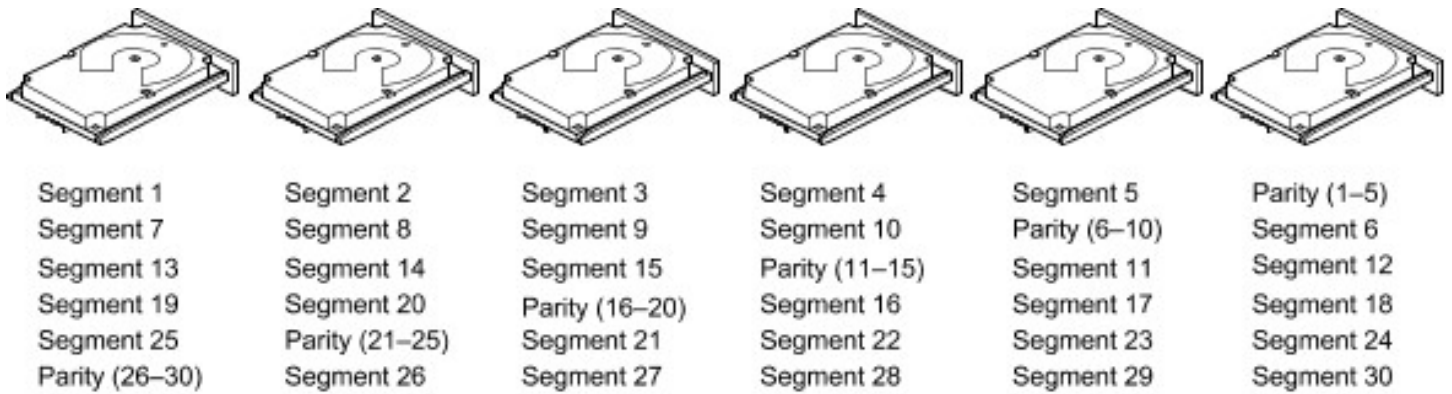

Note: Parity is distributed across all drives in the drive group.

3\_01085-00

## RAID 6 Drive Groups

A RAID 6 drive group is similar to a RAID 5 drive group (disk striping and parity), except that instead of one parity block per stripe, there are two. With two independent parity blocks, A RAID 6 drive group can survive the loss of any two drives in a virtual drive without losing data. A RAID 6 drive group provides a high level of data protection through the use of a second parity block in each stripe. Use a RAID 6 drive group for data that requires a very high level of protection from loss.

In the case of a failure of one drive or two drives in a virtual drive, the RAID controller uses the parity blocks to re-create all of the missing information. If two drives in a RAID 6 virtual drive fail, two drive rebuilds are required, one for each drive. These rebuilds do not occur at the same time. The controller rebuilds one failed drive, and then the other failed drive.


The following table provides an overview of a RAID 6 drive group.

**Table 10: RAID 6 Drive Group Overview**

|               |   |
|---------------|---|
| Uses          | Use for any application that has high read request rates but low random or small block write rates.   |
| Strong points | Provides data redundancy, high read rates, and good performance in most environments.<br>Can survive the loss of two drives or the loss of a drive while another drive is being rebuilt.<br>Provides the highest level of protection against drive failures of all of the RAID levels.<br>Performance is similar to that of a RAID 5 drive group.   |
| Weak points   | Not well-suited to tasks requiring a lot of small and/or random write operations.<br>A RAID 6 virtual drive must generate two sets of parity data for each write operation, which results in a significant decrease in performance during write operations.<br>Drive performance is reduced during a drive Rebuild operation.<br>Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.<br>A RAID 6 drive group costs more because of the extra capacity required by using two parity blocks per stripe. |
| Drives        | 4 through 32.   |

The following figure shows a RAID 6 drive group data layout. The second set of parity drives is denoted by Q. The P drives follow the RAID 5 drive group parity scheme.

**Figure 10: Example of Distributed Parity across Two Blocks in a Stripe (RAID 6 Drive Group)**

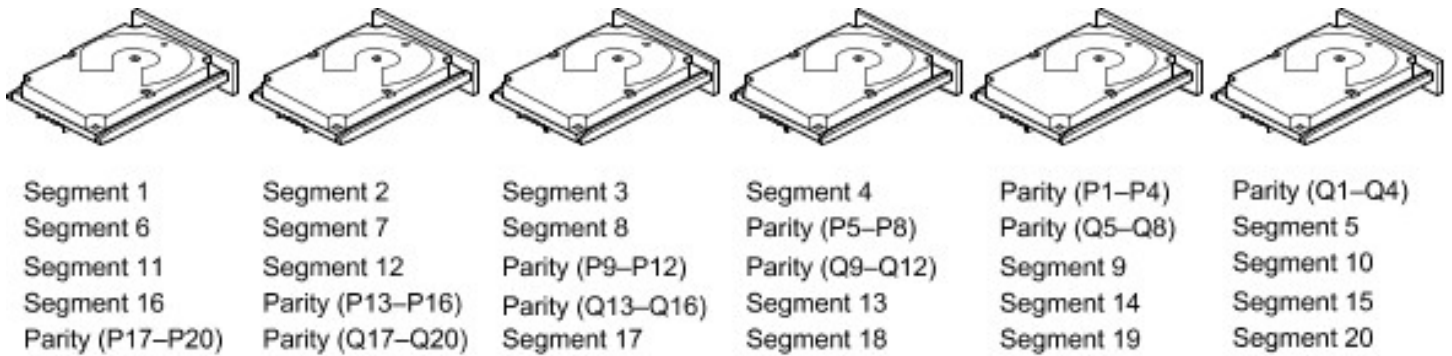

Note: Parity is distributed across all drives in the drive group.

3\_01086-00

## RAID 00 Drive Groups

A RAID 00 drive group is a spanned drive group that creates a striped set from a series of RAID 0 drive groups. A RAID 00 drive group does not provide any data redundancy, but, along with the RAID 0 drive group, does offer the best performance of any RAID level. A RAID 00 drive group breaks up data into smaller segments and then stripes the data segments across each drive in the drive groups. The size of each data segment is determined by the stripe size. A RAID 00 drive group offers high bandwidth.

### NOTE


RAID level 00 is not fault tolerant. If a drive in a RAID 0 drive group fails, the entire virtual drive (all drives associated with the virtual drive) fails.

By breaking up a large file into smaller segments, the controller can use both SAS drives and SATA drives to read or write the file faster. A RAID 00 drive group involves no parity calculations to complicate the write operation. This situation makes the RAID 00 drive group ideal for applications that require high bandwidth but do not require fault tolerance. The following table provides an overview of the RAID 00 drive group. The following figure provides a graphic example of a RAID 00 drive group.

**Table 11: RAID 00 Drive Group Overview**

|               |  |
|---------------|--|
| Uses          | Provides high data throughput, especially for large files.<br>Any environment that does not require fault tolerance. |
| Strong points | Provides increased data throughput for large files.<br>No capacity loss penalty for parity.                          |
| Weak points   | Does not provide fault tolerance or high bandwidth.<br>All data lost if any drive fails.                             |
| Drives        | 2 through 256  |

**Figure 11: RAID 00 Drive Group Example with Two Drives**

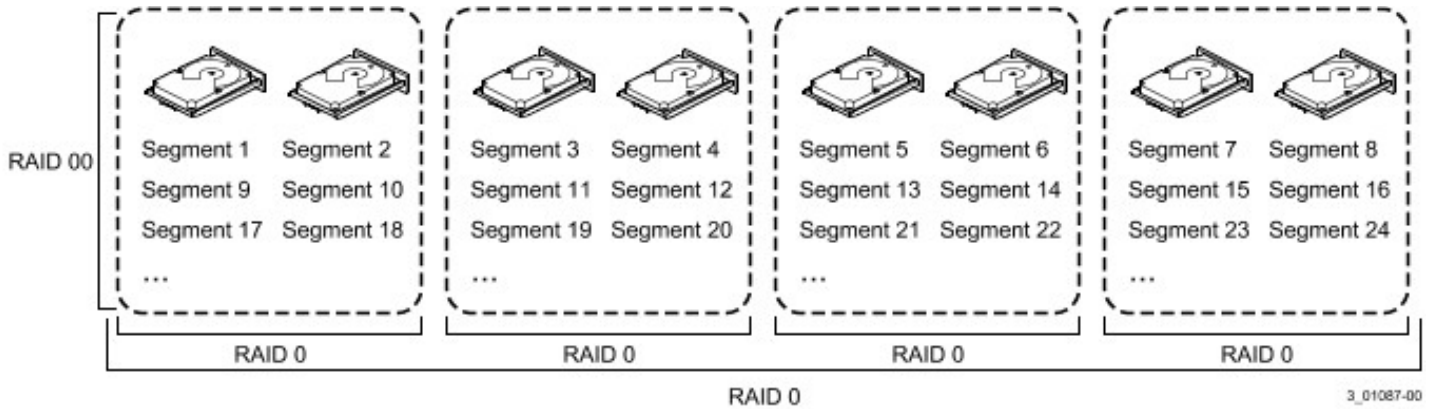

## RAID 10 Drive Groups

A RAID 10 drive group is a combination of RAID level 0 and RAID level 1, and it consists of stripes across mirrored drives. A RAID 10 drive group breaks up data into smaller blocks and then mirrors the blocks of data to each RAID 1 drive group. The first RAID 1 drive in each drive group then duplicates its data to the second drive. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set. The RAID 1 virtual drives must have the same stripe size.

Spanning is used because one virtual drive is defined across more than one drive group. Virtual drives defined across multiple RAID level 1 drive groups are referred to as RAID level 10, (1+0). Data is striped across drive groups to increase performance by enabling access to multiple drive groups simultaneously.

Each spanned RAID 10 virtual drive can tolerate multiple drive failures, as long as each failure is in a separate drive group. If drive failures occur, less than total drive capacity is available.

Configure RAID 10 drive groups by spanning two contiguous RAID 1 virtual drives, up to the maximum number of supported devices for the controller. A RAID 10 drive group supports a maximum of eight spans, with a maximum of 32 drives per span. You must use an even number of drives in each RAID 10 virtual drive in the span.

### NOTE

Other factors, such as the type of controller, can restrict the number of drives supported by RAID 10 virtual drives.


The following table provides an overview of a RAID 10 drive group.

**Table 12: RAID 10 Drive Group Overview**

|               |   |
|---------------|---|
| Uses          | Appropriate when used with data storage that needs 100 percent redundancy of mirrored drive groups and that also needs the enhanced I/O performance of RAID 0 (striped drive groups.)<br>A RAID 10 drive group works well for medium-sized databases or any environment that requires a higher degree of fault tolerance and moderate-to-medium capacity. |
| Strong Points | Provides both high data transfer rates and complete data redundancy.  |
| Weak Points   | Requires twice as many drives as all other RAID levels except in RAID 1 drive groups.   |
| Drives        | 4 to 32 in multiples of 4 – The maximum number of drives supported by the controller (using an even number of drives in each RAID 10 virtual drive in the span).  |

In the following figure, virtual drive 0 is created by distributing data across four drive groups (drive groups 0 through 3).

**Figure 12: RAID 10 Level Virtual Drive**

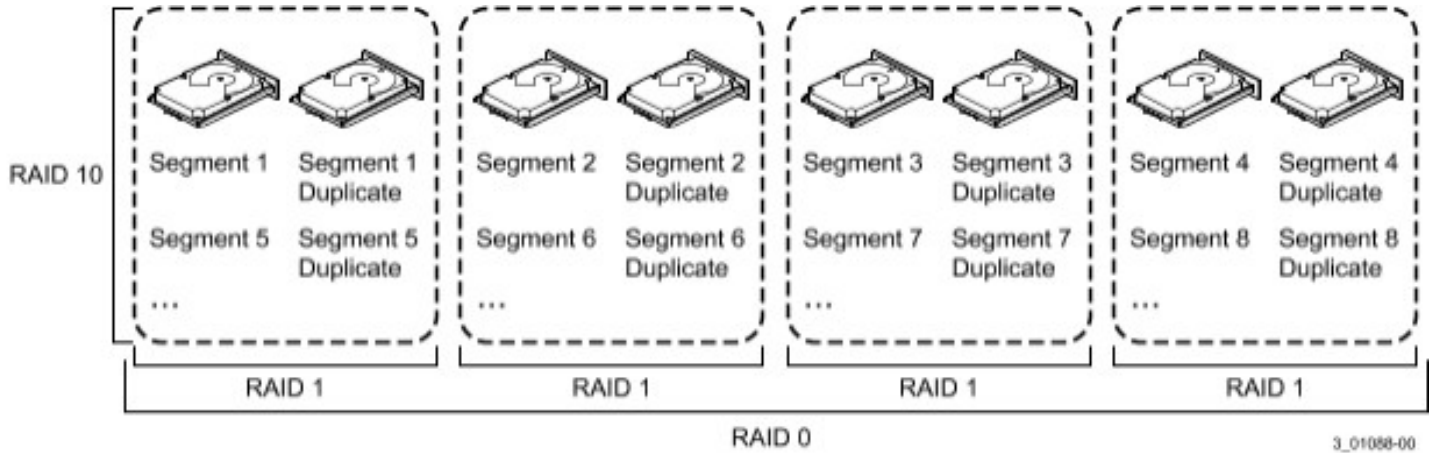

## RAID 50 Drive Groups

A RAID 50 drive group provides the features of both RAID 0 and RAID 5 drive groups. A RAID 50 drive group includes both distributed parity and drive striping across multiple drive groups. A RAID 50 drive group is best implemented on two RAID 5 drive groups with data striped across both drive groups.

A RAID 50 drive group breaks up data into smaller blocks and then stripes the blocks of data to each RAID 5 disk set. A RAID 5 drive group breaks up data into smaller blocks, calculates parity by performing an exclusive OR operation on the blocks, and then performs write operations to the blocks of data and parity to each drive in the drive group. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.


A RAID level 50 drive group can support up to eight spans and tolerate up to eight drive failures, though less than total drive capacity is available. Though multiple drive failures can be tolerated, only one drive failure can be tolerated in each RAID 5 level drive group.

The following table provides an overview of a RAID 50 drive group.

**Table 13: RAID 50 Drive Group Overview**

|               |  |
|---------------|--|
| Uses          | Appropriate when used with data that requires high reliability, high request rates, high data transfer, and medium-to-large capacity.<br>Also used when a virtual drive of greater than 32 drives is needed. |
| Strong points | Provides high data throughput, data redundancy, and very good performance.   |
| Weak points   | Requires two times to eight times as many parity drives as a RAID 5 drive group.   |
| Drives        | Eight spans of RAID 5 drive groups that contain 3 to 32 drives each (limited by the maximum number of devices supported by the controller)   |

**Figure 13: RAID 50 Level Virtual Drive**

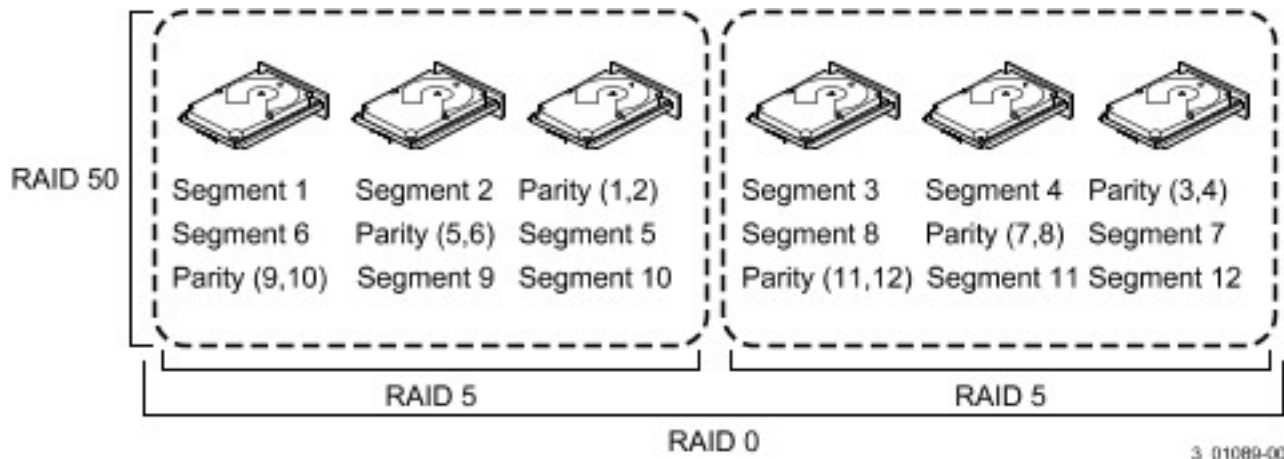

3\_01089-00

## RAID 60 Drive Groups

A RAID 60 drive group provides the features of both RAID 0 and RAID 6 drive groups, and includes both parity and disk striping across multiple drive groups. A RAID 6 drive group supports two independent parity blocks per stripe. A RAID 60 virtual drive can survive the loss of two drives in each of the RAID 6 drive group sets without losing data. A RAID 60 drive group is best implemented on two RAID 6 drive groups with data striped across both drive groups.

A RAID 60 drive group breaks up data into smaller blocks and then stripes the blocks of data to each RAID 6 disk set. A RAID 6 drive group breaks up data into smaller blocks, calculates parity by performing an exclusive-OR operation on the blocks, and then performs write operations to the blocks of data and writes the parity to each drive in the drive group. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.

A RAID 60 drive group can support up to 8 spans and tolerate up to 16 drive failures, though less than total drive capacity is available. Two drive failures can be tolerated in each RAID 6 level drive group.

**Table 14: RAID 60 Drive Group Overview**


|                      |  |
|----------------------|--|
| <p>Uses</p>          | <p>Provides a high level of data protection through the use of a second parity block in each stripe. Use a RAID 60 drive group for data that requires a very high level of protection from loss.</p> <p>In the case of a failure of one drive or two drives in a RAID set in a virtual drive, the RAID controller uses the parity blocks to re-create all of the missing information. If two drives in a RAID 6 set in a RAID 60 virtual drive fail, two drive Rebuild operations are required, one for each drive. These Rebuild operations can occur at the same time.</p> <p>Use for online customer service that requires fault tolerance. Use for any application that has high read request rates but low write request rates. Also used when a virtual drive of greater than 32 drives is needed.</p> |
| <p>Strong points</p> | <p>Provides data redundancy, high read rates, and good performance in most environments. Each RAID 6 set can survive the loss of two drives or the loss of a drive while another drive is being rebuilt.</p> <p>Provides the highest level of protection against drive failures of all of the RAID levels.</p>   |



|                    |   |
|--------------------|---|
| <p>Weak points</p> | <p>Not well-suited for small block write or random write operations. A RAID 60 virtual drive must generate two sets of parity data for each write operation, which results in a significant decrease in performance during write operations.</p> <p>Drive performance is reduced during a drive Rebuild operation. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.</p> <p>A RAID 6 drive group costs more because of the extra capacity required by using two parity blocks per stripe.</p> |
| <p>Drives</p>      | <p>Eight spans of RAID 6 drive groups that contain 4 to 32 drives each (limited by the maximum number of devices supported by the controller).</p>  |

The following figure shows a RAID 60 data layout. The second set of parity drives is denoted by Q. The P drives follow the RAID 5 parity scheme.

**Figure 14: RAID 60 Level Virtual Drive**

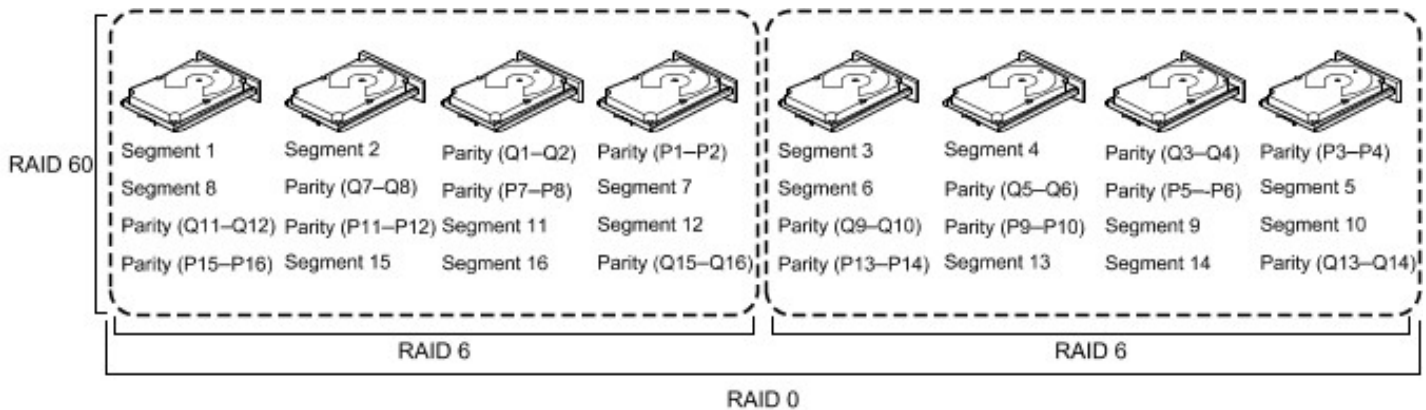

Note: Parity is distributed across all drives in the drive group.

3\_01090-00

## RAID Configuration Strategies

The following factors in a RAID drive group configuration are most important:

- Virtual drive availability (fault tolerance)
- Virtual drive performance
- Virtual drive capacity

You cannot configure a virtual drive that optimizes all three factors, but it is easy to choose a virtual drive configuration that maximizes one factor at the expense of another factor. For example, RAID 1 (mirroring) provides excellent fault tolerance, but requires a redundant drive.

The following subsections describe how to use the RAID levels to maximize virtual drive availability (fault tolerance), virtual drive performance, and virtual drive capacity.

### Maximizing Fault Tolerance

Fault tolerance is achieved through the ability to perform automatic and transparent rebuilds using hot spare drives and hot swaps. A hot spare drive is an unused online available drive that the RAID controller instantly plugs into the system when an active drive fails. After the hot spare is automatically moved into the RAID drive group, the failed drive is automatically rebuilt on the spare drive. The RAID drive group continues to handle requests while the Rebuild operation occurs.

A *hot swap* is the manual substitution of a replacement unit in a disk subsystem for a defective one, where the substitution can be performed while the subsystem is running hot swap drives. The RAID drive group continues to handle requests while the Rebuild operation occurs, which provides a high degree of fault tolerance and zero downtime.

**Table 15: RAID Levels and Fault Tolerance**

| RAID Level | Fault Tolerance   |
|------------|---|
| 0          | Does not provide fault tolerance. All data is lost if any drive fails. Disk striping writes data across multiple drives instead of just one drive. It involves partitioning each drive storage space into stripes that can vary in size.<br>A RAID 0 drive group is ideal for applications that require high performance but do not require fault tolerance.  |
| 1          | Provides complete data redundancy. If one drive fails, the contents of the other drive in the drive group can be used to run the system and reconstruct the failed drive.<br>The primary advantage of disk mirroring is that it provides 100 percent data redundancy. Because the contents of the drive are completely written to a second drive, no data is lost if one of the drives fails. Both drives contain the same data at all times. A RAID 1 drive group is ideal for any application that requires fault tolerance and minimal capacity.                   |
| 5          | Combines distributed parity with disk striping. Parity provides redundancy for one drive failure without duplicating the contents of entire drives. If a drive fails, the RAID controller uses the parity data to reconstruct all missing information.<br>In a RAID 5 drive group, this method is applied to entire drives or stripes across all drives in a drive group. Using distributed parity, a RAID 5 drive group offers fault tolerance with limited overhead.  |
| 6          | Combines distributed parity with disk striping. A RAID 6 drive group can sustain two drive failures and still maintain data integrity. Parity provides redundancy for two drive failures without duplicating the contents of entire drives. If a drive fails, the RAID controller uses the parity data to reconstruct all missing information.<br>In a RAID 6 drive group, this method is applied to entire drives or stripes across all of the drives in a drive group. Using distributed parity, a RAID 6 drive group offers fault tolerance with limited overhead. |
| 00         | Does not provide fault tolerance. All data in a virtual drive is lost if any drive in that virtual drive fails. Disk striping writes data across multiple drives instead of just one drive. It involves partitioning each drive storage space into stripes that can vary in size.<br>A RAID 00 drive group is ideal for applications that require high bandwidth but do not require fault tolerance.  |
| 10         | Provides complete data redundancy using striping across spanned RAID 1 drive groups.<br>A RAID 10 drive group works well for any environment that requires the 100 percent redundancy offered by mirrored drive groups. A RAID 10 drive group can sustain a drive failure in each mirrored drive group and maintain data integrity.   |
| 50         | Provides data redundancy using distributed parity across spanned RAID 5 drive groups.<br>A RAID 50 drive group includes both parity and disk striping across multiple drives. If a drive fails, the RAID controller uses the parity data to re-create all missing information.<br>A RAID 50 drive group can sustain one drive failure per RAID 5 drive group and still maintain data integrity.   |
| 60         | Provides data redundancy using distributed parity across spanned RAID 6 drive groups.<br>A RAID 60 drive group can sustain two drive failures per RAID 6 drive group and still maintain data integrity. It provides the highest level of protection against drive failures of all of the RAID levels.<br>A RAID 60 drive group includes both parity and disk striping across multiple drives. If a drive fails, the RAID controller uses the parity data to re-create all missing information.  |

## Maximizing Performance

A RAID disk subsystem improves I/O performance. The RAID drive group appears to the host computer as a single storage unit or as multiple virtual units. The I/O performs faster because drives can be accessed simultaneously. The following table describes the performance for each RAID level.

**Table 16: RAID Levels and Performance**

| RAID Level | Performance  |
|------------|--|
| 0          | <p>RAID 0 (striping) offers excellent performance. RAID 0 breaks up data into smaller blocks and then writes a block to each drive in the drive group. Disk striping writes data across multiple drives instead of just one drive. It involves partitioning each drive storage space into stripes that can vary in size from a minimum of 64 KB to 1 MB for MegaRAID controllers and only 64 KB for Integrated MegaRAID controllers. The LSI SAS2108 controller allows strip size from 8 KB to 1 MB.</p> <p>These stripes are interleaved in a repeated sequential manner. Disk striping enhances performance because multiple drives are accessed simultaneously.</p>   |
| 1          | <p>With a RAID 1 (mirroring) drive group, each drive in the system must be duplicated, which requires more time and resources than striping. Performance is impaired during drive Rebuild operations.</p>  |
| 5          | <p>A RAID 5 drive group provides high data throughput, especially for large files. Use this RAID level for any application that requires high read request rates, but low write request rates, such as transaction processing applications, because each drive can read and write independently. Because each drive contains both data and parity, numerous write operations can take place concurrently. In addition, robust caching algorithms and hardware-based exclusive-or assist make RAID 5 drive group performance exceptional in many different environments.</p> <p>Parity generation can slow the write process, making write performance significantly lower for RAID 5 drive group than for RAID 0 or RAID 1 drive groups. Drive performance is reduced when a drive is being rebuilt. Clustering can also reduce drive performance. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.</p> |
| 6          | <p>A RAID 6 drive group works best when used with data that requires high reliability, high request rates, and high data transfer. It provides high data throughput, data redundancy, and very good performance. However, a RAID 6 drive group is not well suited to tasks requiring a lot of write operations. A RAID 6 virtual drive must generate two sets of parity data for each write operation, which results in a significant decrease in performance during write operations.</p> <p>Drive performance is reduced during a drive rebuild. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.</p>   |
| 00         | <p>A RAID 00 drive group (striping in a spanned drive group) offers excellent performance. A RAID 00 drive group breaks up data into smaller blocks and then writes a block to each drive in the drive groups.</p> <p>Disk striping writes data across multiple drives instead of just one drive. Striping involves partitioning each drive storage space into stripes that can vary in size from a minimum of 64 KB to 1 MB for MegaRAID controllers and only 64 KB for Integrated MegaRAID controllers. The LSI SAS2108 controller allows strip size from 8 KB to 1 MB. These stripes are interleaved in a repeated sequential manner. Disk striping enhances performance because multiple drives are accessed simultaneously.</p>   |
| 10         | <p>A RAID 10 drive group works best for data storage that need the enhanced I/O performance of a RAID 0 drive group (striped drive groups), which provides high data transfer rates. Spanning increases the capacity of the virtual drive and improves performance by doubling the number of spindles.</p> <p>The system performance improves as the number of spans increases. (The maximum number of spans is eight.) As the storage space in the spans is filled, the system stripes data over fewer and fewer spans, and RAID performance degrades to that of a RAID 1 or RAID 5 drive group.</p>  |
| 50         | <p>A RAID 50 drive group works best when used with data that requires high reliability, high request rates, and high data transfer. It provides high data throughput, data redundancy, and very good performance. Spanning increases the capacity of the virtual drive and improves performance by doubling the number of spindles.</p> <p>The system performance improves as the number of spans increases. (The maximum number of spans is eight.) As the storage space in the spans is filled, the system stripes data over fewer and fewer spans and RAID drive group performance degrades to that of a RAID 1 or RAID 5 drive group.</p>  |



| RAID Level | Performance  |
|------------|--|
| 60         | <p>A RAID 60 drive group works best when used with data that requires high reliability, high request rates, and high data transfer. It provides high data throughput, data redundancy, and very good performance. Spanning increases the capacity of the virtual drive and improves performance by doubling the number of spindles. The system performance improves as the number of spans increases. (The maximum number of spans is eight.) As the storage space in the spans is filled, the system stripes data over fewer and fewer spans, and RAID performance degrades to that of a RAID 1 or RAID 6 drive group.</p> <p>A RAID 60 drive group is not well suited to tasks requiring a lot of writes. A RAID 60 virtual drive must generate two sets of parity data for each write operation, which results in a significant decrease in performance during write operations. Drive performance is reduced during a drive rebuild. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.</p> |

## Maximizing Storage Capacity

Storage capacity is an important factor when selecting a RAID level. There are several variables to consider. Striping alone (RAID 0) requires less storage space than mirrored data (RAID 1 drive group) or distributed parity (RAID 5 or RAID 6 drive group). A RAID 5 drive group, which provides redundancy for one drive failure without duplicating the contents of entire drives, requires less space than a RAID 1 drive group. The following table explains the effects of the RAID levels on storage capacity.

**Table 17: RAID Levels and Capacity**

| RAID Level | Capacity   |
|------------|--|
| 0          | <p>A RAID 0 drive group (striping) involves partitioning each drive storage space into stripes that can vary in size. The combined storage space is composed of stripes from each drive.</p> <p>A RAID 0 drive group provides maximum storage capacity for a given set of drives. The usable capacity of a RAID 0 array is equal to the number of drives in the array into the capacity of the smallest drive in the array.</p>  |
| 1          | <p>With a RAID 1 drive group (mirroring), data written to one drive is simultaneously written to another drive, which doubles the required data storage capacity. This situation is expensive because each drive in the system must be duplicated.</p> <p>The usable capacity of a RAID 1 array is equal to the capacity of the smaller of the two drives in the array.</p>  |
| 5          | <p>A RAID 5 drive group provides redundancy for one drive failure without duplicating the contents of entire drives. The RAID 5 drive group breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks and then writes the blocks of data and parity to each drive in the drive group.</p> <p>The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.</p> <p>The usable capacity of a RAID 5 array is equal to the number of drives in the array, minus one, into the capacity of the smallest drive in the array.</p> |
| 6          | <p>A RAID 6 drive group provides redundancy for two drive failures without duplicating the contents of entire drives. However, it requires extra capacity because it uses two parity blocks per stripe. This makes a RAID 60 drive group more expensive to implement.</p> <p>The usable capacity of a RAID 6 array is equal to the number of drives in the array, minus two, into the capacity of the smallest drive in the array.</p>   |
| 00         | <p>A RAID 00 drive group (striping in a spanned drive group) involves partitioning each drive storage space into stripes that can vary in size. The combined storage space is composed of stripes from each drive.</p> <p>A RAID 00 drive group provides maximum storage capacity for a given set of drives.</p>   |
| 10         | <p>A RAID 10 drive group requires twice as many drives as all other RAID levels except RAID level 1.</p> <p>A RAID 10 drive group works well for medium-sized databases or any environment that requires a higher degree of fault tolerance and moderate-to-medium capacity.</p> <p>Disk spanning allows multiple drives to function like one large drive. Spanning overcomes lack of disk space and simplifies storage management by combining existing resources or adding relatively inexpensive resources.</p>   |
| 50         | <p>A RAID 50 drive group requires two to four times as many parity drives as a RAID 5 drive group. This RAID level works best when used with data that requires medium to large capacity.</p>  |

| RAID Level | Capacity   |
|------------|--|
| 60         | A RAID 60 drive group provides redundancy for two drive failures in each RAID set without duplicating the contents of entire drives. However, it requires extra capacity because a RAID 60 virtual drive has to generate two sets of parity data for each write operation. This situation makes a RAID 60 drive group more expensive to implement. |

## Configuration Planning

Factors to consider when planning a configuration are the number of drives the RAID controller can support, the purpose of the drive group, and the availability of spare drives.

Each type of data stored in the disk subsystem has a different frequency of read and write activity. If you know the data access requirements, you can more successfully determine a strategy to optimize the disk subsystem capacity, availability, and performance.

Servers that support video-on-demand typically read the data often, but write data infrequently. Both the read and write operations tend to be long. Data stored on a general-purpose file server involves relatively short read and write operations with relatively small files.

## Number of Drives

Your configuration planning for the SAS RAID controller depends in part on the number of drives that you want to use in a RAID drive group.

The number of drives in a drive group determines the RAID levels that can be supported. Only one RAID level can be assigned to each virtual drive.

### Drive Group Purpose

Important factors to consider when creating RAID drive groups include availability, performance, and capacity. Define the major purpose of the drive group by answering questions related to these factors, such as the following, which are followed by suggested RAID levels for each situation:

- Will this drive group increase the system storage capacity for general-purpose file and print servers?  
Use RAID 5, RAID 6, RAID 10, RAID 50, or RAID 60.
- Does this drive group support any software system that must be available 24 hours per day?  
Use RAID 1, RAID 5, RAID 6, RAID 10, RAID 50, or RAID 60.
- Will the information stored in this drive group contain large audio or video files that must be available on demand?  
Use RAID 0 or RAID 00.
- Will this drive group contain data from an imaging system?  
Use RAID 0, RAID 00, or RAID 10.

Fill out the following table to help you plan the drive group configuration. Rank the requirements for your drive group, such as storage space and data redundancy, in order of importance, and then review the suggested RAID levels.

**Table 18: Factors to Consider for Drive Group Configuration**

| Requirement                        | Rank | Suggested RAID Levels                             |
|------------------------------------|------|---|
| Storage space                      |      | RAID 0, RAID 5, RAID 00                           |
| Data redundancy                    |      | RAID 5, RAID 6, RAID 10, RAID 50, RAID 60         |
| Drive performance and throughput   |      | RAID 0, RAID 00, RAID 10                          |
| Hot spares (extra drives required) |      | RAID 1, RAID 5, RAID 6, RAID 10, RAID 50, RAID 60 |

# RAID Availability

## RAID Availability Concept

Data availability without downtime is essential for many types of data processing and storage systems. Businesses want to avoid the financial costs and customer frustration associated with failed servers. RAID helps you maintain data availability and avoid downtime for the servers that provide that data. RAID offers several features, such as spare drives and rebuilds, that you can use to fix any drive problems, while keeping the servers running and data available. The following subsections describe these features.

### Spare Drives

You can use spare drives to replace failed or defective drives in a drive group. A replacement drive must be at least as large as the drive it replaces. Spare drives include hot swaps, hot spares, and cold swaps.

A hot swap is the manual substitution of a replacement unit in a disk subsystem for a defective one, where the substitution can be performed while the subsystem is running (performing its normal functions). The backplane and enclosure must support hot swap for the functionality to work.

Hot spare drives are drives that power up along with the RAID drives and operate in a Standby state. If a drive used in a RAID virtual drive fails, a hot spare automatically takes its place, and the data on the failed drive is rebuilt on the hot spare. Hot spares can be used for RAID levels 1, 5, 6, 10, 50, and 60.

#### **NOTE**

If a rebuild to a hot spare fails for any reason, the hot spare drive will be marked as *failed*. If the source drive fails, both the source drive and the hot spare drive will be marked as *failed*.

A cold swap requires that you power down the system before replacing a defective drive in a disk subsystem.

### Rebuilding

If a drive fails in a drive group that is configured as a RAID 1, 5, 6, 10, 50, or 60 virtual drive, you can recover the lost data by rebuilding the drive. If you have configured hot spares, the RAID controller automatically tries to use them to rebuild failed drives. A manual rebuild is necessary if hot spares with enough capacity to rebuild the failed drives are not available. You must insert a drive with enough storage into the subsystem before rebuilding the failed drive.

## SafeStore Disk Encryption

This chapter describes the SafeStore Disk Encryption service. The SafeStore Disk Encryption service is a collection of features within the Broadcom storage products that supports self-encrypting disks. SafeStore encryption services support local key management.

### Overview

The SafeStore Disk Encryption service offers the ability to encrypt data on drives and use disk-based key management to provide data security. This solution provides data protection if there is theft or loss of physical drives. With self-encrypting drives, if you remove a drive from its storage system or the server in which it is housed, the data on that drive is encrypted and useless to anyone who attempts to access without the appropriate security authorization.

With the SafeStore encryption service, data is encrypted by the drives. You can designate which data to encrypt at the individual virtual drive (VD) level.

Any encryption solution requires management of the encryption keys. The security service provides a way to manage these keys. The LSA software offers a procedure that you can use to manage the security settings for the drives.

### Purpose and Benefits

Security is a growing market concern and requirement. MegaRAID customers are looking for a comprehensive storage encryption solution to protect data. You can use the SafeStore encryption service to help protect your data.

In addition, SafeStore local key management removes the administrator from most of the daily tasks of securing data, thereby reducing user error and decreasing the risk of data loss. Also, SafeStore local key management supports instant secure erase of drives that permanently removes data when repurposing or decommissioning drives. These services provide a much more secure level of data erasure than other common erasure methods, such as overwriting or degaussing.

### Terminologies

The following table describes the terminologies that are related to the SafeStore encryption feature.

**Table 19: Terminologies Used in the SafeStore Encryption Feature**

| Option             | Description  |
|--------------------|--|
| Authenticated Mode | The RAID configuration is keyed to a user password. The password must be provided on system boot to authenticate the user and facilitate unlocking the configuration for user access to the encrypted data.  |
| Key backup         | You must provide the controller with a lock key if the controller is replaced or if you choose to migrate secure virtual disks. To do this task, you must back up the security key.  |
| Re-provisioning    | Re-provisioning disables the security system of a device. For a controller, it involves destroying the security key. For SafeStore encrypted drives, when the drive lock key is deleted, the drive is unlocked and any user data on the drive is securely deleted.<br>This situation does not apply to controller-encrypted drives, because deleting the virtual disk destroys the encryption keys and causes a secure erase. See <a href="#">Instant Secure Erase</a> for information about the instant secure erase feature. |

| Option                | Description   |
|-----------------------|---|
| Security Key          | A key based on a user-provided string. The controller uses the security key to lock and unlock access to the secure user data. If the security key is unavailable, user data is irretrievably lost. You must take all precautions to never lose the security key. |
| Un-Authenticated Mode | This mode allows controller to boot and unlock access to user configuration without user intervention.  |

## Workflow

### Overview

The SafeStore workflow follows:

1. Activate the SafeStore key in the software.
2. Enable SafeStore on the controller.
3. Use a compatible SED drive.
4. Enable encryption when the virtual drive is created with the SED drives.
5. Create a security key that conforms to the security requirements.
6. Configure the system with the desired password.

After the system is booted, you need not enter the password again to access the virtual drives.

If the virtual drive is moved to a different controller, the controller to which the virtual drive is moved, so that access to the data must have the following features:

- SafeStore enabled.
- Encryption enabled.
- The security key must be entered.

## Enable Security

You can enable security on the controller. After you enable security, you have the option to create secure virtual drives using a security key.

There are three procedures you can perform to create secure virtual drives using a security key:

- Create the security key identifier
- Create the security key
- Create a password (optional)

### Create the Security Key Identifier

The security key identifier appears when you enter the security key. If you have multiple security keys, the identifier helps you determine which security key to enter. The controller provides a default identifier for you. You can use the default setting or enter your own identifier.

### Create the Security Key

You must enter the security key to perform certain operations. You can choose a strong security key that the controller suggests. The security key must be between 8 and 32 characters and contain at least one number, one lowercase letter, one uppercase letter, and one non-alphanumeric character (for example, < > @ +).

#### **ATTENTION**

If you forget the security key, you lose access to the data if you are prompted for the security key again.

## **Create a Password**

Password creation is optional. If you create a password, (referred to as a *passphrase* in StorCLI) it causes the controller to stop during POST and requests a password. If the correct password is not provided, the data on that virtual drive is not accessible. If the virtual drive is a boot device, booting is not possible. The password (*passphrase*) can be the same as the security key. The security key must be between 8 and 32 characters and contain at least one number, one lowercase letter, one uppercase letter, and one non-alphanumeric character (for example, < > @ +).

### **ATTENTION**

If you forget the password and you reboot, you will lose access to your data.

## **Change Security**

You can change the security settings on the controller, and you have the option to change the security key identifier, security key, and password. If you have previously removed any secured drives, you still need to supply the old security key to import them.

You can perform three procedures to change the security settings on the controller:

- Change the security key identifier
- Change the security key
- Change a password

### **Change the Security Key Identifier**

You have the option to edit the security key identifier. If you plan to change the security key, it is highly recommended that you change the security key identifier. Otherwise, you will not be able to differentiate between the security keys.

You can select whether you want to keep the current security key identifier or enter a new one. To change the security key identifier, enter a new security key identifier.

### **Change the Security Key**

You can choose to keep the current security key or enter a new one. To change the security key, you can either enter the new security key or accept the security key that the controller suggests.

### **Add or Change the Password**

You have the option to add a password or change the existing one. To change the password, enter the new password. To keep the existing password, enter the current password. If you choose this option, you must enter the password whenever you boot your server.

This procedure updates the existing configuration on the controller to use the new security settings.

## **Create Secure Virtual Drives**

You can create a secure virtual drive and set its parameters as desired. To create a secure virtual drive, select a configuration method. You can select either simple configuration or advanced configuration.

### **Simple Configuration**

If you select simple configuration, select the redundancy type and drive security method to use for the drive group.

### **Advanced Configuration**

If you select advanced configuration, select the drive security method, and add the drives to the drive group.

After the drive group is secured, you cannot remove the security without deleting the virtual drives.

## autoSecureSED

The `autoSecureSED` command determines if newly created EPD-PT drives are automatically secured by the firmware. This feature works only if the security feature is enabled at the controller level. The following uses cases summarize the `autoSecureSED` command.

- If `MFCF.enableSecurity=1` and a Ctrl key is established, if the `autoCfg` mode is set to EPD-PT, then the following uses cases apply.
  - Any new EPD-PT device that is automatically created by firmware would be automatically secured at creation time.
  - Any existing unsecured EPD-PT device would be converted to secured EPD-PT on next controller boot.
  - Any manually created EPD-PT device would be converted to secured EPD-PT.

### NOTE

If the total device count is greater than 240, any added devices remain as UGOOD drives because no target IDs are available in the firmware to create JBOD drives.

- If any of the following occur, the firmware will not take any action on the `autoSecureSED` property.
  - `MFCF.enableSecurity=0`
  - A Ctrl lock key is not established
  - The `autoCfg` mode is not set to EPD-PT

## Import a Foreign Configuration

After you create a security key, you can run a scan for a foreign configuration and import a locked configuration. (You can import unsecured or unlocked configurations when security is disabled.) A foreign configuration is a RAID configuration that already exists on a replacement set of drives that you install in a computer system. The LSA, StorCLI, or HII software allows you to import the existing configuration to the RAID controller or clear the configuration so you can create a new one.

To import a foreign configuration, you must first enable security to allow importation of locked foreign drives. If the drives are locked and the controller security is disabled, you cannot import the foreign drives. Only unlocked drives can be imported when security is disabled.

After you enable the security, you can import the locked drives. To import the locked drives, you must provide the security key used to secure them. Verify whether any drives are left to import as the locked drives can use different security keys. If there are any drives left, repeat the import process for the remaining drives. After all of the drives are imported, there is no configuration to import.

## Instant Secure Erase

Instant Secure Erase is a feature used to erase data from encrypted drives. After the initial investment for an encrypted disk, there is no additional cost in dollars or time to erase data using the Instant Secure Erase feature.

You can change the encryption key for all MegaRAID RAID controllers that are connected to encrypted drives. All encrypted drives, whether locked or unlocked, always have an encryption key. This key is set by the drive and is always active. When the drive is unlocked, the data to host from the drive (on read operations) and from the host to the drive cache (on write operations) is always provided. However, when resting on the drive platters, the data is always encrypted by the drive.

You might not want to lock your drives because you must manage a password if they are locked. Even if you do not lock the drives, a benefit still exists to using encrypted disks.

If you are concerned about data theft or other security issues, you might already invest in drive disposal costs, and there are benefits to using SafeStore encryption over other technologies that exist today, both in terms of the security provided and time saved.

If the encryption key on the drive changes, the drive cannot decrypt the data on the platters, effectively erasing the data on the disks. The National Institute of Standards and Technology (<http://www.nist.gov>) values this type of data erasure above secure erase and below physical destruction of the device.

Consider the following reasons for using instant secure erase.

#### **To repurpose the hard drive for a different application**

You might need to move the drive to another server to expand storage elsewhere, but the drive is in use. The data on the drive might contain sensitive data including customer information that, if lost or divulged, could cause an embarrassing disclosure of a security hole. You can use the instant secure erase feature to effectively erase the data so that the drive can be moved to another server or area without concern that old data could be found.

#### **To replace drives**

If the amount of data has outgrown the storage system, and there is no room to expand capacity by adding drives, you might choose to purchase upgrade drives. If the older drives support encryption, you can erase the data instantly so the new drives can be used.

#### **To return a disk for warranty activity**

If the drive is beginning to show SMART predictive failure alerts, return the drive for replacement. If so, the drive must be effectively erased if there is sensitive data. Occasionally a drive is in such bad condition that standard erasure applications do not work. If the drive still allows any access, it might be possible to destroy the encryption key.



## HII Configuration Utility

The MegaRAID Human Interface Infrastructure (HII) configuration utility configures controllers, physical disks, virtual disks, and performs other configuration tasks in a pre-boot, Unified Extensible Firmware Interface (UEFI) environment.

System BIOS should support Broadcom's private interface and add host memory address into the DMAR (DMA remapping)/RMRR (Reserved memory Region Reporting Structure) table for iMegaRAID to work seamlessly in VT-d/IOMMU (Intel Virtualization Technology for Directed I/O/input-output memory management unit) enabled system/operating system.

If you are using the iMegaRAID controller in an environment that has Windows 10 or Windows Server 2016, and if Hypervisor Code Integrity (HVCI) feature is enabled, you will see some boot issues or issues using the iMR controllers. To avoid this, the system BIOS should categorize the host memory that the UEFI driver has allocated as Read/Write.


### Behavior of HII

The Human Interface Infrastructure (HII) Configuration Application is used to configure controllers, physical drives, virtual drives, and to perform other configuration tasks in a preboot environment.

Some of the HII graphical user interface (GUI) keys are provided by the system BIOS. HII RAID management screens are tightly controlled by independent hardware vendors. OEMs or independent browser vendors will have no knowledge about independent hardware vendor features and their screen controls.

The following figure is an example of some of the HII GUI keys.

**Figure 15: HII Keys**

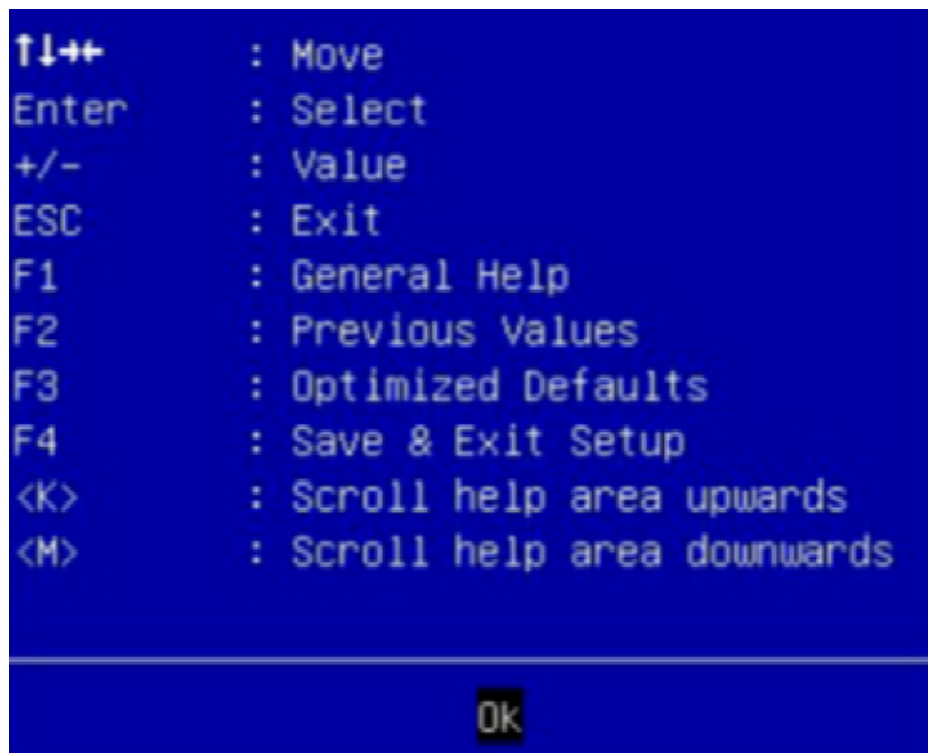

If the keys shown in the preceding figure do not work as expected, contact your system vendor.

For example, you may press the **F2** key and then press the **<ESC>** key to exit from the HII RAID Management screen. However, this action does not save the previous values you specified to the controller. To save the specified values, you must use the controls present in the form or screen provided by your independent hardware vendor.

Similarly, when you want to load controller defaults, you can achieve this by clicking the **Set Factory Default** option present on the **Dashboard View** menu or by clicking the **Controller Management > Advanced Controller Management > Set Factory Defaults** menu. Pressing **F3** (Optimized Defaults) will not restore the controller defaults.

## Starting the HII Configuration Utility

Follow these steps to start the HII configuration utility and to access the Dashboard View.

1. Boot the computer and press the appropriate key to start the setup utility during bootup.

### NOTE

The startup key might be **F2** or **F1** or some other key, depending on the system implementation. Refer to the on-screen text or the vendor-specific documentation for more information. Also, the following workflow may not be the same for all OEM systems.

2. When the initial window appears, highlight **System Settings** and press **Enter**.

The **System Settings** dialog appears.

3. Highlight **Storage** and press **Enter**.

The **Controller Selection** menu appears.

The **Controller Selection** menu dialog lists the MegaRAID controllers installed in your computer system. Use the PCI slot number to differentiate between controllers of the same type.

4. Use the arrow keys to highlight the controller you want to configure and press **Enter**.

The **Dashboard View** appears as shown in the following figure. The **Dashboard View** shows an overview of the system. You can manage configurations, controllers, virtual drives, drive groups, and other hardware components from the **Dashboard View**.

Figure 16: Dashboard View

```

Dashboard View

Main Menu
Help

PROPERTIES
Status <Optimal>
Backplane [0]
BBU <No>
Enclosure [0]
Drives [2]
Drive Groups [0]
Virtual Drives [0]
View Server Profile

ACTIONS
View Foreign Configuration
Configure
Set Factory Defaults
Update Firmware
Silence Alarm

BACKGROUND OPERATIONS
Virtual Drive Operations None
in Progress
Drive Operations in Progress: 1

MegaRAID ADVANCED SOFTWARE OPTIONS
MegaRAID RAID6 <Enabled>
MegaRAID RAID5 <Enabled>
MegaRAID SafeStore <Enabled>
MegaRAID FastPath <Enabled>
MegaRAID CacheCade 2.0 <Enabled>
MegaRAID CacheCade Pro 2.0 <Enabled>
Manage MegaRAID Advanced Software Options

Shows menu options
such as Configuration
Management, Controller
Management, Virtual
Drive Management,
Drive Management and
Hardware Components.

No virtual drive
operation is in
progress.

```

## HII Dashboard View

While you are in the **Dashboard View**, and if HII detects any new events, HII issues various DCMDs to update the data for multiple fields present in the Dashboard; it checks and updates the controller status, updates the backplane information, updates expander/enclosure counts, updates drive group counts, updates virtual drive counts, and so on.

While you are in the **Dashboard View**, you can hot plug or unplug enclosures, and monitor those counts; you can hot plug or unplug physical drives and monitor those counts as well. You can view and preview a foreign configuration, and import and clear a foreign configuration; HII Dashboard also indicates the number of virtual drives and physical drives that are in progress.

The following sections describe the **Dashboard View**.

### Main Menu

When you select the **Main Menu** option in the **Dashboard View**, the **Main Menu** dialog appears. The **Main Menu** provides various menu options to configure and manage controllers, virtual drives, drive groups, and hardware components. When the controller is running in Safe Mode, the **Main Menu** includes the warning message as shown in the following figure.

Figure 17: Main Menu



Select one of the following menu options:

- Select **Configuration Management** to perform tasks, such as creating virtual drives, viewing drive group properties, viewing hot spare information, and clearing a configuration. For more information, see [Managing Configurations](#).
- Select **Controller Management** to view and manage controller properties and to perform tasks, such as clearing configurations, scheduling and running controller events, and running patrol reads. For more information, see [Managing Controllers](#).
- Select **Virtual Drive Management** to perform tasks, such as viewing virtual drive properties, locating virtual drives, and running a consistency check. For more information, see [Managing Virtual Drives](#).
- Select **Drive Management** to view physical drive properties and to perform tasks, such as locating drives, initializing drives, and rebuilding a drive after a drive failure. For more information, see [Managing Physical Drives](#).
- Select **Hardware Components** to view battery properties, manage batteries, and manage enclosures. For more information, see [Managing Hardware Components](#).

## HELP

The **HELP** section displays the HII utility context-sensitive help. It displays help strings for the following functions:

- Discard Preserved Cache
- Foreign Configuration
- Configure
- Silence Alarm (if supported)


**NOTE**

The help strings are displayed for the Discard Preserved Cache function only if pinned cache is present, and the help strings are displayed for the Foreign Configuration function only if the foreign configuration is present. Help strings for Silence Alarm is displayed only if your controller supports alarm.

## PROPERTIES

The **PROPERTIES** section displays the following information.

**Figure 18: Dashboard View – PROPERTIES**

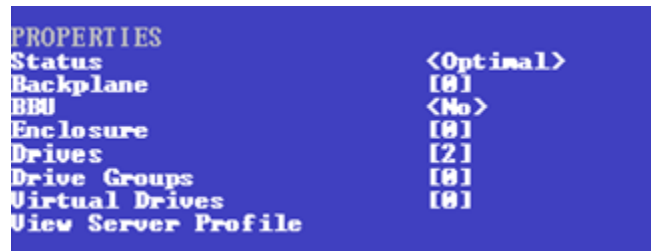

| PROPERTIES          |           |
|---------------------|-----------|
| Status              | <Optimal> |
| Backplane           | [0]       |
| BBU                 | <No>      |
| Enclosure           | [0]       |
| Drives              | [2]       |
| Drive Groups        | [0]       |
| Virtual Drives      | [0]       |
| View Server Profile |           |

- **Status**  
Displays the overall status of the controller.
- **Backplane**  
Displays the total number of backplanes connected to the controller.
- **BBU**  
Displays whether the battery backup unit is present.
- **Enclosures**  
Displays the total number of enclosures connected to the controller.
- **Drives**  
Displays the total number of drives connected to the controller.
- **Drive Groups**  
Displays the number of drives groups.
- **Virtual Drives**  
Displays the number of virtual drives.
- **View Server Profile**  
Displays the UEFI specification version that the system supports and the following menu options, as shown in the following figure.

Figure 19: Dashboard View – Server Profile



- Select **Controller Management** to view and manage controller properties and to perform tasks, such as clearing configurations, scheduling and running controller events, and running patrol reads.  
For more information, see [Managing Controllers](#).
- **Hardware Components** to view super capacitor properties, manage super capacitors, and manage enclosures.  
For more information, see [Managing Hardware Components](#).
- **Drive Management** to view physical drive properties and to perform tasks, such as locating drives, initializing drives, and rebuilding a drive after a drive failure.  
For more information, see [Managing Physical Drives](#).
- **Virtual Drive Management** to perform tasks, such as viewing virtual drive properties, locating virtual drives, and running a consistency check.  
For more information, see [Managing Virtual Drives](#).

## ACTIONS

The **ACTIONS** section displays some actions that you can perform on the controller:

Figure 20: Dashboard View – ACTIONS



- **Discard Preserved Cache**

To discard the preserved cache for the selected controller, highlight **Discard Preserved Cache** and press **Enter**.

**ATTENTION**

If any foreign configurations exist, import them before discarding the preserved cache. Otherwise, you might lose data that belongs with the foreign configuration.

**NOTE**

The **Discard Preserved Cache** option is displayed only if pinned cache is present on the controller.

- **View Foreign Configuration**

Helps you to preview and import a foreign configuration and clear a foreign configuration. It also displays the final configuration before the foreign configuration is imported or cleared. See [Managing Foreign Configurations](#).

**NOTE**

If there are secured virtual drives, make sure you enter the pass-phrase.

- **Configure**

Displays configuration options. See [Managing Configurations](#).

- **Set Factory Defaults**

Resets the controller to its factory settings.

- **Update Firmware**

To update the controller's firmware, highlight **Update Firmware** and press **Enter**. The **Controller Firmware Update** window appears. See [Upgrading the Firmware](#).

- **Silence Alarm**

To silence the alarm on the controller, highlight **Silence Alarm** and press **Enter**.

**NOTE**

This option is disabled if the Alarm Control is disabled.

## BACKGROUND OPERATIONS

This section displays the total number of background operations in progress for the virtual drives and the drives. If no background operations are in progress, it displays **None**.

When background operations for the virtual drives or drives are in progress, you can click the numbers to navigate to the **Virtual Drive Management** dialog or the **Drive Management** dialog, respectively. From these dialogs, you can click a specific virtual drive or a drive to view the progress of the operation and stop or suspend the operation. You can also view the basic properties and advanced properties of the virtual drives or drives.

**Figure 21: Dashboard View – BACKGROUND OPERATIONS**



## MegaRAID ADVANCED SOFTWARE OPTIONS

This section displays the enabled advanced software options, such as the RAID levels, MegaRAID SafeStore, and MegaRAID FastPath. This section also allows you to configure and use the advanced features. See [Managing MegaRAID Advanced Software Options](#).

Figure 22: Dashboard View – MegaRAID ADVANCED SOFTWARE OPTIONS

| MegaRAID ADVANCED SOFTWARE OPTIONS |           |           |
|------------------------------------|-----------|-----------|
| MegaRAID                           | RAID6     | [Enabled] |
| MegaRAID                           | RAID5     | [Enabled] |
| MegaRAID                           | SafeStore | [Enabled] |
| MegaRAID                           | FastPath  | [Enabled] |

## Critical Boot Messages

The HII Configuration Utility shows an error screen with the title **Critical Message** if preserved cache related to a missing drive in a virtual drive exists. This message can appear if a drive has failed or accidentally disconnected from the system, or for any other reason the drive is not visible to the system. This message appears pre-POST and must be addressed to continue a boot.

### NOTE

Some of the messages that appear in the **Critical Message** screen might have spaces in them. This is a known limitation.

If this message appears when the system is started, perform these steps to resolve the problem:


1. Check the cabling that connects all of the drives to the system.  
Make sure that all of the cables are well connected and that the host bus adapter (if applicable) is securely seated in its slot.
2. If your system has activity LEDs, make sure that all of the LEDs do not show a fault.
3. If a cabling or connection issue does not exist with the physical drives, the problem might be the driver.  
Press **C** or **Y** in the input field when prompted by the critical boot error screen until no more screens appear. Then press **Esc** to exit, and the driver installs.
4. If these steps do not fix the problem, contact the Broadcom Technical Support team for further assistance.

## Managing Configurations

When you select **Configuration Management** from the **Main Menu** or the **Configure** options in the **Dashboard View**, the **Configuration Management** screen appears, as shown in the following figure.



Figure 23: Configuration Management Screen

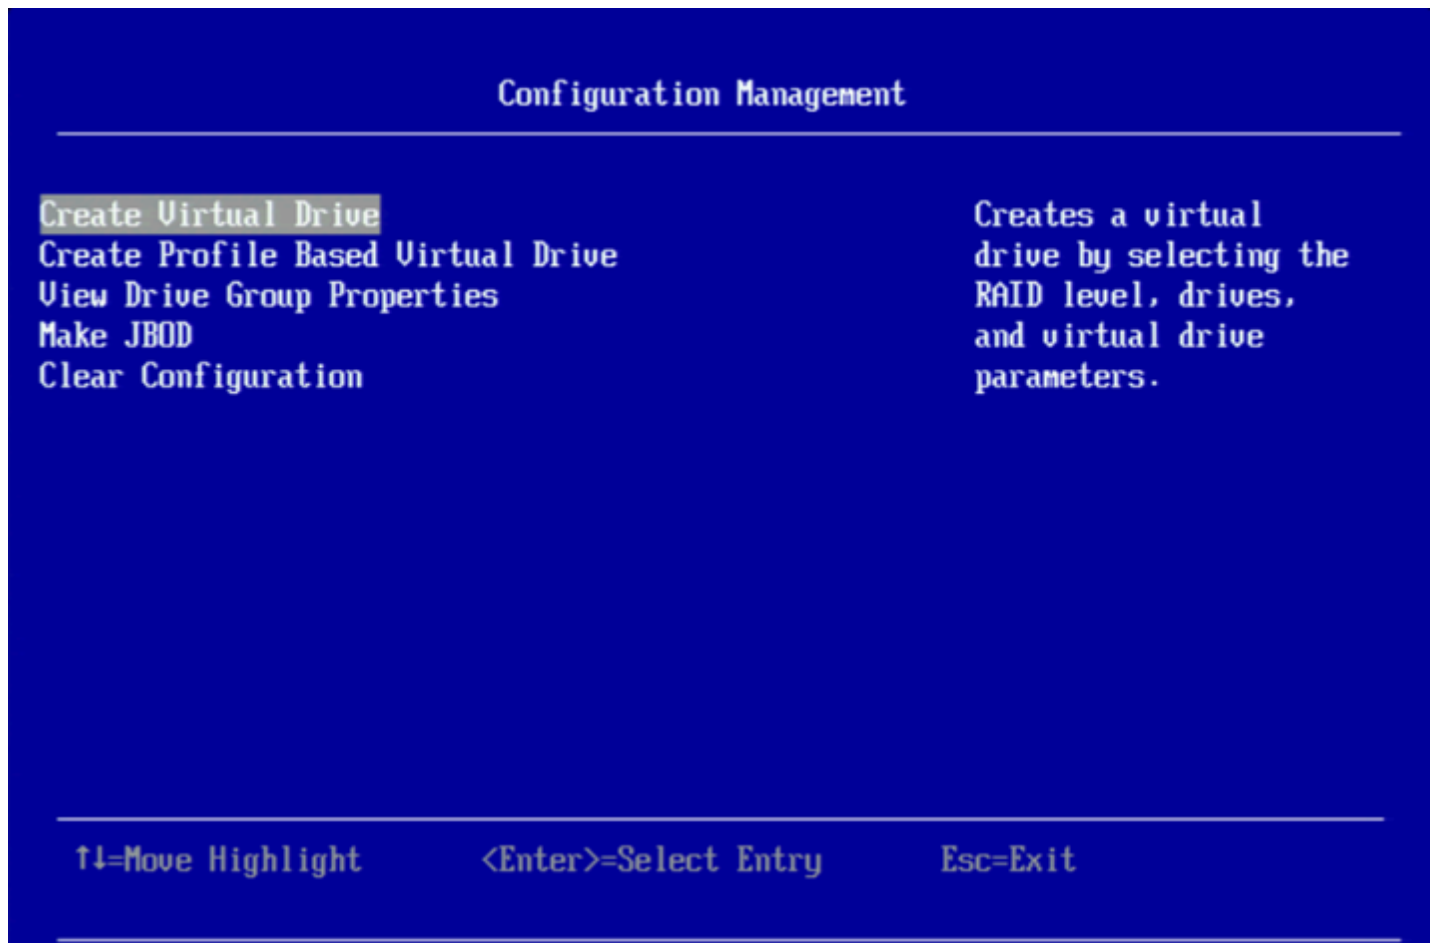

The **Make JBOD**, **Enable Security on JBOD**, and **Make Unconfigured Good** options are included for some controllers. (See [Make Unconfigured Good](#), [Make JBOD](#), and [Enable Security on JBOD](#)). You can enable security on the JBOD drives either from the **Configuration Management** screen or the **Drive Management** screen. The following are the prerequisites for enabling security on JBOD drives:

- The JBOD drive must be an SED-capable drive.
- The controller must support the security feature.
- The controller must support the JBOD functionality.

The **Manage Foreign Configuration** option is included for some configurations. See [Managing Configurations](#).

The HII Configuration Utility supports 240 VD creation. For more information, see [240 Virtual Drive Feature Limitations](#).

## Creating a Virtual Drive from a Profile

To create a virtual drive from a profile, perform the following steps:

1. Select **Configuration Management** from the **Main Menu**.
2. Select **Create Profile Based Virtual Drive** from the **Configuration Management** menu.
3. Select a RAID level from the **Create Virtual Drive** menu. For example, select **Generic RAID 0**. The available RAID levels are **Generic RAID 0**, **Generic RAID 1**, **Generic RAID 5**, and **Generic RAID 6**.

The **Generic R0** screen appears if you select the **Generic RAID 0** profile.

The small red arrow at the bottom of the dialog indicates that you can scroll down to view more information.

#### NOTE

The red arrow appears when there is too much information to display in one window. The amount of information that can be displayed in one window depends on the capabilities of the HII browser. The **Save Configuration** option is not displayed in the previous figure.

4. Choose an option from the **Drive Selection Criteria** field (if more than one option exists).
5. Select **Save Configuration** to create the chosen profile.
6. Highlight **Confirm** and press the spacebar, then highlight **Yes** and press **Enter**.

You can create a virtual drive by using the profile that is shown in the previous figure. The following table describes the profile options.

**Table 20: Virtual Drive Creation Profile Options**

| Option                          | Description   |
|---------------------------------|---|
| <b>Drive Selection Criteria</b> | You must select one of the various combinations of options that exist. If only one option is possible, only one option appears.   |
| <b>Profile Parameters</b>       |   |
| <b>Virtual Drive Name</b>       | Displays the name of the virtual drive.   |
| <b>RAID Level</b>               | Displays the RAID level based on the profile selected. For example, if the profile selected is Generic RAID 0, <b>RAID 0</b> is displayed.  |
| <b>Virtual Drive Size</b>       | Displays the amount of virtual drive storage space. By default, the maximum capacity available for the virtual drive is displayed. Virtual drive size of floating data type up to three decimal places is supported. Some of the screens in this chapter may not reflect this feature.  |
| <b>Power Save Mode</b>          | Displays the selected Power Save Mode of the five available options: <b>None</b> , <b>Auto</b> , <b>Max</b> , <b>Max without Cache</b> , and <b>Controller Defined</b> .  |
| <b>Strip Size</b>               | Displays the strip element size for the virtual drive. Drive striping involves partitioning each physical drive storage space in strips of the following sizes: <b>64 KB</b> , <b>128 KB</b> , <b>256 KB</b> , <b>512 KB</b> , <b>1 MB</b> .  |
| <b>Read Policy</b>              | <p>Displays the read cache policy for the virtual drive. For any profile, if the drive is an SSD drive, the <b>No Read Ahead</b> and <b>Always Read Ahead</b> options are displayed. However, <b>No Read Ahead</b> is the <i>default</i> read policy. The possible options follow:</p> <ul style="list-style-type: none"> <li>• <b>Default</b><br/>A virtual drive property that indicates whether the default read policy is <b>Always Read Ahead</b> or <b>No Read Ahead</b>.</li> <li>• <b>Always Read Ahead</b> – Permits the controller to read sequentially ahead of the requested data and allows the controller to store the additional data in the cache memory. Here, the controller anticipates that the data is required frequently. Although the Always Read Ahead policy speeds up the reads for sequential data but little improvement is seen when accessing the random data.</li> <li>• <b>No Read Ahead</b> – Disables the Always Read Ahead capability of the controller.</li> </ul> |

| Option                        | Description  |
|-------------------------------|--|
| <b>Write Policy</b>           | <p>Displays the write cache policy for the virtual drive. For any profile, if the drive is an SSD drive, the <b>Write Through</b> option is displayed. Otherwise, the <b>Always Write Back</b> option is displayed. The possible options follow:</p> <ul style="list-style-type: none"> <li>• <b>Write Back</b><br/>The controller sends a data transfer completion signal to the host when the controller cache receives all of the data in a transaction. If you select the <b>Write Back</b> policy and the battery is absent, the firmware disables the <b>Write Back</b> policy and defaults to the <b>Write Through</b> policy.</li> <li>• <b>Write Through</b><br/>The controller sends a data transfer completion signal to the host when the drive subsystem receives all the data in a transaction.</li> <li>• <b>Always Write Back</b><br/>The controller sends a data transfer completion signal to the host when the controller cache receives all the data in a transaction. If you select the <b>Always Write Back</b> policy and the battery is absent, the firmware is forced to use the <b>Write Back</b> policy.</li> </ul> |
| <b>I/O Policy</b>             | <p>Displays the Input/Output policy for the virtual drive. For any profile, if the drive is an SSD drive, the <b>Direct</b> option is displayed. The possible options follow:</p> <ul style="list-style-type: none"> <li>• A virtual drive property that indicates whether the default I/O policy is <b>Direct IO</b> or <b>Cached IO</b>.</li> <li>• <b>Direct IO</b><br/>Data read operations are not buffered in the cache memory. Data is transferred to the cache and the host concurrently. If the same data block is read again, it comes from the cache memory. The I/O policy applies to reads on a specific virtual drive. It does not affect the read ahead cache.</li> <li>• <b>Cached IO</b><br/>All read operations are buffered in cache.</li> </ul>  |
| <b>Access Policy</b>          | The access policy for the virtual drive. The options are <b>Read/Write</b> and <b>Read Only</b> .  |
| <b>Disk Cache Policy</b>      | Displays the virtual drive cache setting. The possible options are <b>Unchanged</b> , <b>Enable</b> , and <b>Disable</b> .   |
| <b>Default Initialization</b> | <p>Displays the virtual drive initialization setting. Default Initialization displays the following options:</p> <ul style="list-style-type: none"> <li>• <b>No</b><br/>Do not initialize the virtual drive.</li> <li>• <b>Fast</b><br/>Initializes the first 100 MB on the virtual drive.</li> <li>• <b>Full</b><br/>Initializes the entire virtual drive.</li> </ul>   |
| <b>Save Configuration</b>     | Saves the configuration that the wizard created.   |

The profile-based virtual drive creation method has special requirements. The following table describes these requirements.

**Table 21: Profile Based Virtual Drive Creation Requirements**

| Properties | Generic RAID0 | Generic RAID1 | Generic RAID5 | Generic RAID6 |
|------------|---------------|---------------|---------------|---------------|
| HDD        | Supported     | Supported     | Supported     | Supported     |
| SSD        | Supported     | Supported     | Supported     | Supported     |
| SAS        | Supported     | Supported     | Supported     | Supported     |

| Properties                                      | Generic RAID0  | Generic RAID1  | Generic RAID5  | Generic RAID6  |
|---|--|--|--|--|
| SATA  | Supported  | Supported  | Supported  | Supported  |
| PCIe  | Supported  | Supported  | Supported  | Not supported  |
| SED   | Supported  | Supported  | Supported  | Supported  |
| NonSED  | Supported  | Supported  | Supported  | Supported  |
| NonProtected Information (NonPI)                | Supported  | Supported  | Supported  | Supported  |
| Sector Size (logical block format size) – 4 KB  | Supported  | Supported  | Supported  | Supported  |
| Sector Size (logical block format size) – 512 B | Supported  | Supported  | Supported  | Supported  |
| Link speed – 3Gb/s                              | Supported  | Supported  | Supported  | Supported  |
| Link speed – 6Gb/s                              | Supported  | Supported  | Supported  | Supported  |
| Link speed – 12Gb/s                             | Supported  | Supported  | Supported  | Supported  |
| Direct attached                                 | Supported  | Supported  | Supported  | Supported  |
| Backplane                                       | Supported  | Supported  | Supported  | Supported  |
| Enclosure                                       | Supported  | Supported  | Supported  | Supported  |
| Minimum number of PDs                           | 1  | 2  | 3  | 4  |
| Maximum number of PDs                           | 255  | 2  | 255  | 255  |
| Power-save mode                                 | Controller-defined   | Controller-defined   | Controller-defined   | Controller-defined   |
| Strip Size                                      | 256 KB   | 256 KB   | 256 KB   | 256 KB   |
| Read Policy                                     | If the drive is an SSD drive, the <b>No Read Ahead</b> option appears. Else, the <b>Default</b> option appears.    | If the drive is an SSD drive, the <b>No Read Ahead</b> option appears. Else, the <b>Default</b> option appears.    | If the drive is an SSD drive, the <b>No Read Ahead</b> option appears. Else, the <b>Default</b> option appears.    | If the drive is an SSD drive, the <b>No Read Ahead</b> option appears. Else, the <b>Default</b> option appears.    |
| Write Policy                                    | If the drive is an SSD drive, the <b>Write Through</b> option appears. Else, the <b>Write Back</b> option appears. | If the drive is an SSD drive, the <b>Write Through</b> option appears. Else, the <b>Write Back</b> option appears. | If the drive is an SSD drive, the <b>Write Through</b> option appears. Else, the <b>Write Back</b> option appears. | If the drive is an SSD drive, the <b>Write Through</b> option appears. Else, the <b>Write Back</b> option appears. |
| IO Policy                                       | If the drive is an SSD drive, the <b>Direct IO</b> option appears. Else, the <b>Default</b> option appears.        | If the drive is an SSD drive, the <b>Direct IO</b> option appears. Else, the <b>Default</b> option appears.        | If the drive is an SSD drive, the <b>Direct IO</b> option appears. Else, the <b>Default</b> option appears.        | If the drive is an SSD drive, the <b>Direct IO</b> option appears. Else, the <b>Default</b> option appears.        |
| Access policy                                   | Read/Write   | Read/Write   | Read/Write   | Read/Write   |
| Disk Cache Policy                               | Enable   | Unchanged  | Unchanged  | Unchanged  |
| Initialization                                  | Fast   | Fast   | Full   | Full   |
| Dedicated Hot Spare                             | Not supported  | Supported  | Supported  | Supported  |
| Mixing of Media HDD and SSD drives              | Not supported  | Not supported  | Not supported  | Not supported  |

| Properties  | Generic RAID0 | Generic RAID1 | Generic RAID5 | Generic RAID6 |
|---|---------------|---------------|---------------|---------------|
| Mixing of Interface Type SAS, SATA, and NVMe drives     | Not supported | Not supported | Not supported | Not supported |
| Mixing of PI and NonPI drives                           | Not supported | Not supported | Not supported | Not supported |
| Mixing SED and NonSED drives                            | Not supported | Not supported | Not supported | Not supported |
| Mixing of 1.5Gb/s, 3Gb/s, 6Gb/s, and 12Gb/s link speeds | Not supported | Not supported | Not supported | Not supported |

## Creating a RAID 10 Volume from the Database

You can create RAID 10 volume from the Database feature. Creating RAID 10 from the Database uses drive mirroring so that data written to one drive is simultaneously written to another drive. Creating a RAID 10 volume from the Database provides you with fault tolerance and low latency for the use of the database.


You need a minimum of four drives to create a RAID 10 volume. The profile-based virtual drive creation option allows you to create a RAID 10 volume. If you use this option, you do not choose any drives; the system automatically chooses the drives and creates a RAID 10 volume.

To create a RAID 10 volume using the profile-based virtual drive creation option, perform the following steps:

1. Select **Configuration Management** from the **Main Menu**
2. Select **Create Profile Based Virtual Drive** from the **Configuration Management** menu.

The following dialog appears.

Figure 24: Profile Based Virtual Drive Dialog

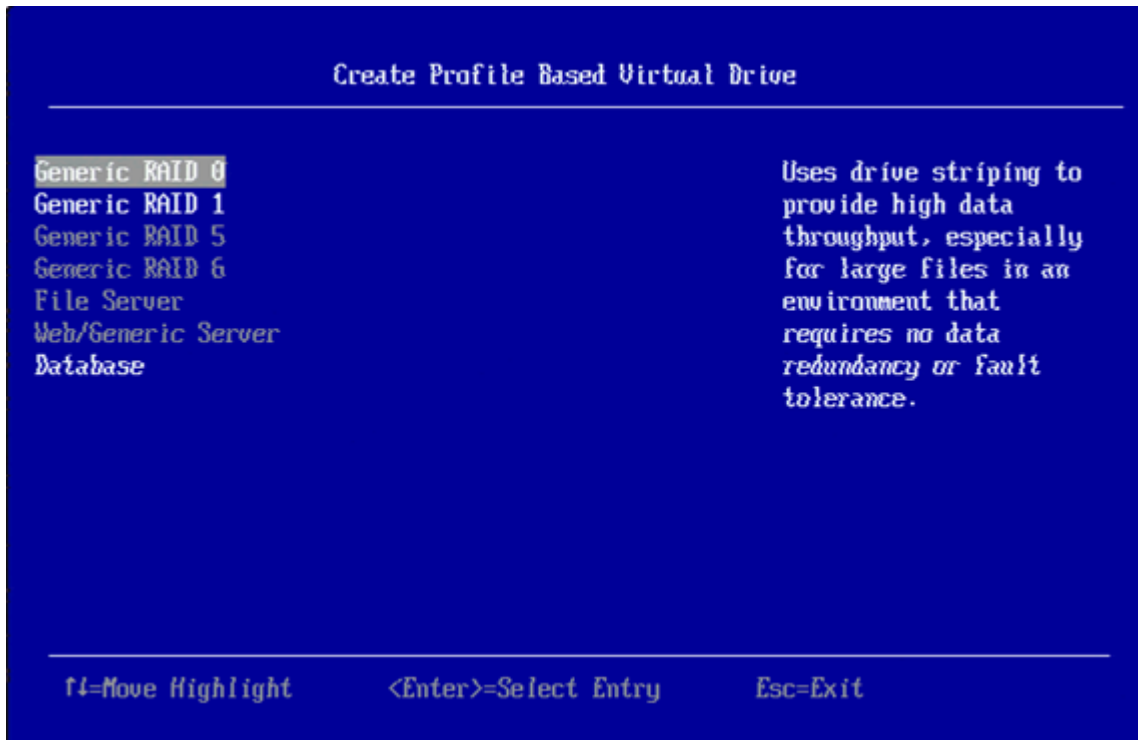

- Highlight the **Database** option and press **Enter**.

The **Database** dialog appears.

Figure 25: Database Dialog



If a small red arrow at the bottom of the window appears, it indicates that you can scroll down to view more information. This red arrow appears when there is too much information to display in one screen. The amount of information that can be displayed in one screen depends on the capabilities of the HII browser.

4. Highlight **Save Configuration** and press **Enter**.

A message appears confirming that the configuration is being created.

5. Highlight **Confirm** and press the spacebar, then highlight **Yes** and press **Enter**.

A success message appears.

6. Highlight **OK** and press **Enter**.

The HII utility creates a RAID 10 volume and returns you to the **Configuration Management** menu.

## Manually Creating a Virtual Drive

The following dialog appears when you select **Create Virtual Drive** from the **Configuration Management** menu.

**Figure 26: Create Virtual Drive Dialog**



If a small red arrow at the bottom of the window appears, it indicates that you can scroll down to view more information. This red arrow appears when there is too much information to display in one screen. The amount of information that can be displayed in one screen depends on the capabilities of the HII browser.

### NOTE

If your system detects any JBODs, the **Make Unconfigured Good** dialog appears before the **Create Configuration** window. The **Make Unconfigured Good** dialog lets you convert the JBOD drives to Unconfigured Good. See [Make Unconfigured Good](#).



**NOTE**

If you create a virtual drive, for example RAID 1, with different drive sizes, such as 1 TB and 2 TB, and after you have created the VD and you want to replace a small drive with a larger drive (replace 1-TB drive with a 2-TB drive), you cannot create another RAID 1 using the additional 1 TB.

**NOTE**

HII does not apply the mixing rule across the span when you create spanned RAID levels.

Perform these steps to select options for a new configuration (that is, a new virtual drive) on the controller.

1. Highlight the **Select RAID Level** field and press **Enter**.

**NOTE**

Mixing RAID levels (R10, R50, R80) across a system is not supported.

2. Select a RAID level for the virtual drive from the popup menu.

The available RAID levels are listed in the help text of the **Create Configuration** dialog. Some system configurations do not support all of the RAID levels. See [Table 24](#) for brief descriptions of the RAID levels.

3. To view the **Secure Virtual Drive** field, enable security and attach an FDE drive. If either is missing, the field is grayed out.

a) If the security key is enabled, check the **Secure Virtual Drive** box to secure the new virtual drive.

This field is not available unless the security feature is already enabled.

4. Highlight the **Select Drives From** field, press **Enter**, and select either **Unconfigured Capacity** or **Free Capacity**.

*Free capacity* means the new virtual drive is created from unused (free) drive capacity that is already part of a virtual drive. *Unconfigured capacity* means the new virtual drive is created using unconfigured drives.

5. Highlight **Select Drives** and press **Enter**.

The **Select Drives** dialog appears.

**Figure 27: Select Drives Dialog**

6. From the **Select Drives** dialog, you can select the following options as required:

- a) (Optional) Change the default media type by highlighting the **Select Media Type** field and pressing **Enter** and then selecting an option from the popup menu.

The choices are **HDD**, **SSD**, or **Both**. However, **Both** is the default choice.

- b) (Optional) Change the default interface type by highlighting the **Select Interface Type** and pressing **Enter**, and then selecting an option from the popup menu.

The choices are **SAS**, **SATA**, **PCIe**, and **All**. Depending on the configuration of your system, combining SAS and SATA drives or drive group mixing might not be supported.

If you choose HDD for the media type, the possible options are **SAS**, **SATA**, and **Both**. PCIe is not a valid choice for HDD.

#### NOTE

PCIe does not appear as a valid choice if the controller does not support PCIe.

- c) (Optional) Change the default size of the logical sector by highlighting the **Logical Sector Size** and pressing **Enter**, and then selecting an option from the popup menu.

The choices are **512 B**, **4 KB**, and **Both**.

- d) Select physical drives for the virtual drive by highlighting each drive and pressing the spacebar to select it.

Alternatively, you can use the **Check All** and **Uncheck All** options at the bottom of the list of drives to either select all available drives or clear all of the selected drives. If you select drives of varying sizes, the usable space on each drive is restricted to the size of the smallest selected drive.

**NOTE**

Make sure you select the number of drives required by the specified RAID level, or the HII utility will return you to the root menu when you try to create the virtual drive. For example, RAID 1 virtual drives use exactly two drives, and RAID 5 virtual drives use three or more virtual drives. See [Table 24](#) for more information.

- e) When you have selected the required drives for the new virtual drive, highlight **Apply Changes** and press **Enter** to create the virtual drive.
- If you select drives of varying sizes, the HII utility shows a message warning stating that the remaining free capacity on the larger drives would be unusable.
- f) If the warning message about different size capacities appears, press the spacebar to confirm the configuration, then highlight **Yes** and press **Enter**.
- The HII utility returns you to the **Create Configuration** dialog.
- g) Highlight **Save Configuration** and press **Enter** to create the virtual drive.
- A message appears confirming that the configuration is being created.
- h) Highlight **OK** and press **Enter** to acknowledge the confirmation message.
7. Highlight the **Virtual Drive Name** field, press **Enter**, and specify a name for the new virtual drive.
8. (Optional) Change the **Virtual Drive Size Unit** value by highlighting this field, pressing **Enter**, and then selecting a value from the popup menu.
- The options are **MB**, **GB**, and **TB**.
9. (Optional) Change the default values for **Strip Size**, **Read Policy**, **Write Policy**, **I/O Policy**, **Access Policy**, **Drive Cache**, **Disable Background Initialization**, **Default Initialization**, and **Emulation Type** (note that the **Emulation Type** field is suppressed for 4K virtual drives).

The following table describes the policies and their possible values or descriptions.

**Table 22: Virtual Drive Policies**

| Property           | Description   |
|--------------------|---|
| <b>Strip Size</b>  | The virtual drive strip size per DDF. The possible values are as follows: <ul style="list-style-type: none"> <li>• 64 KB</li> <li>• 128 KB</li> <li>• 256 KB</li> <li>• 512 KB</li> <li>• 1 MB</li> </ul>   |
| <b>Read Policy</b> | Displays the read cache policy for the virtual drive. For any profile, if the drive is an SSD drive, the <b>No Read Ahead</b> and <b>Always Read Ahead</b> options are displayed. However, <b>No Read Ahead</b> is the default read policy. The possible options follow: <ul style="list-style-type: none"> <li>• <b>Always Read Ahead</b><br/>Permits the controller to read sequentially ahead of the requested data and allows the controller to store the additional data in the cache memory. Here, the controller anticipates that the data is required frequently. Although the Always Read Ahead policy speeds up the reads for sequential data, but little improvement is seen when accessing the random data.</li> <li>• <b>No Read Ahead</b><br/>Disables the Always Read Ahead capability of the controller.</li> </ul> |

| Property                                       | Description  |
|--|--|
| <b>Write Policy</b>                            | The write cache policy for the virtual drive. The possible values are as follows: <ul style="list-style-type: none"> <li>• <b>Write Back</b><br/>The controller sends a data transfer completion signal to the host when the controller cache receives all of the data in a transaction. If you select the <b>Write Back</b> policy and the battery is absent, the firmware disables the <b>Write Back</b> policy and defaults to the Write Through policy.</li> <li>• <b>Write Through</b><br/>The controller sends a data transfer completion signal to the host when the drive subsystem receives all the data in a transaction.</li> <li>• <b>Always Write Back</b><br/>The controller sends a data transfer completion signal to the host when the controller cache receives all the data in a transaction. If you select the <b>Always Write Back</b> policy and the battery is absent, the firmware is forced to use the <b>Write Back</b> policy.</li> </ul> |
| <b>I/O Policy</b>                              | The I/O policy for the virtual drive. The possible values are as follows: <ul style="list-style-type: none"> <li>• <b>Direct</b><br/>Data reads are not buffered in the cache memory. Data is transferred to cache and the host concurrently. If the same data block is read again, it comes from cache memory. (The I/O policy applies to reads on a specific virtual drive. It does not affect the read ahead cache.)</li> <li>• <b>Cached</b><br/>All reads are buffered in cache.</li> </ul>   |
| <b>Access Policy</b>                           | The access policy for the virtual drive. The options are <b>Read/Write</b> , <b>Read Only</b> , and <b>Blocked</b> .   |
| <b>Drive Cache</b>                             | The disk cache policy for the virtual drive. The possible values are <b>Unchanged</b> , <b>Enable</b> , and <b>Disable</b> .   |
| <b>Disable Background Initialization (BGI)</b> | Specifies whether background initialization is enabled or disabled. When BGI is enabled, the firmware runs the initialization process in the background. When BGI is disabled, the initialization process does not start automatically and does not run in the background.   |
| <b>Default Initialization</b>                  | Allows choice of virtual drive initialization option. The possible options are <b>No</b> , <b>Fast</b> , and <b>Full</b> .   |
| <b>Emulation Type</b>                          | Allows you to set the emulation type on a virtual drive. The possible options are <b>Default</b> , <b>Disable</b> , or <b>Force</b> .<br>The <b>Force</b> option forces the emulation to be set on a controller even when MFC settings do not support it. For more information, see <a href="#">Table 23, Emulation Settings</a> .<br>This field is suppressed for 4K virtual drives.  |

The following table details the emulation settings and how the operating system reads these settings.

**Table 23: Emulation Settings**

| Emulation Setting | Logical Sector Size in Operating System | Physical Sector Size in Operating System |
|-------------------|---|--|
| <b>Default</b>    | 512 Byte                                | 512 Byte                                 |
| <b>Disable</b>    | 512 Byte                                | 512 Byte                                 |
| <b>Force</b>      | 512 Byte                                | 4096 Byte                                |

The following table describes the RAID levels that you can select when creating a new virtual drive. Some system configurations do not support RAID 6 and RAID 60.

**Table 24: RAID Levels**

| Level   | Description  |
|---------|--|
| RAID 0  | Uses data striping on two or more drives to provide high data throughput, especially for large files in an environment that requires no data redundancy.   |
| RAID 1  | Uses data mirroring on pairs of drives so that data written to one drive is simultaneously written to the other drive. RAID 1 works well for small databases or other small applications that require complete data redundancy.                                |
| RAID 5  | Uses data striping and parity data across three or more drives (distributed parity) to provide high data throughput and data redundancy, especially for applications that require random access.   |
| RAID 6  | Uses data striping and parity data across three or more drives (distributed parity) to provide high data throughput and data redundancy, especially for applications that require random access. RAID 6 can survive the failure of two drives.                 |
| RAID 00 | Is a spanned drive group that creates a striped set from a series of RAID 0 drive groups to provide high data throughput, especially for large files.  |
| RAID 10 | A combination of RAID 0 and RAID 1 that uses data striping across two mirrored drive groups. It provides high data throughput and complete data redundancy.  |
| RAID 50 | A combination of RAID 0 and RAID 5 that uses data striping across two drive groups with parity data. It provides high data throughput and complete data redundancy.  |
| RAID 60 | A combination of RAID 0 and RAID 6 that uses data striping across two drive groups with parity data. It provides high data throughput and complete data redundancy. RAID 60 can survive the failure of two drives in each RAID set in the spanned drive group. |

## Viewing Drive Group Properties

The following window appears when you select **View Drive Group Properties** from the **Virtual Drive Management** menu.

**Figure 28: View Drive Group Properties Window**

```

View Drive Group Properties
-----
Drive Group          Drive Group #0          Drive group is a
Capacity Allocation  <Virtual Drive 0:      logical grouping of
                    RAID1, 465.250GB,   drives on which one or
                    Optimal>        more virtual drives
                    No                can be created. Each
Secured              No                virtual drive in the
Protected            No                drive group must be
Assigned Dedicated  <Drive Port 0 -       configured with the
Hot                  3:01:02: HDD, SAS,   same RAID level.
Spare Drive          465.250GB, Hot Spare,
                    <512B>>
-----
=Move Highlight          Esc=Exit

```

A drive group is a logical grouping of drives attached to a RAID controller on which one or more virtual drives can be created. Each virtual drive in the drive group must be configured with the same RAID level. This figure shows information for one drive group.

In this window, the Capacity Allocation entry for each drive group displays associated virtual drives for the drive group. The window also indicates whether the drive group is secured and protected. To see how much free space is available in the drive group, highlight **Capacity Allocation** field and press **Enter**. The information appears in a popup window.

The **Assigned Dedicated Hot Spare Drive** field provides information about the dedicated hot spare drives that are assigned to this drive group. You can assign more than one dedicated Hot Spare drive to single drive group.

## Viewing Global Hot Spare Drives

To view all the assigned global hot spare drives on the controller, select **View Global Hot Spares** on the **Configuration Management** menu. The following figure shows a sample of the **View Global Hot Spare Drives** window.

Figure 29: View Global Hot Spare Drives Dialog

```

..uration → Dashboard View → Main Menu → Configuration Management → View Global Hot Spare Drives
▶ Drive C1 :01:02: HDD, SAS, 278.875GB, Hot Spare, (512B)
  Drive C1 :01:01: HDD, SAS, 136.218GB, Hot Spare, (512B)
  Drive C1 :01:00: HDD, SAS, 136.218GB, Hot Spare, (512B)

```

Press **Esc** to exit this window when you are finished viewing information.

## Clearing a Configuration

A warning message dialog appears when you select **Clear Configuration** from the **Configuration Management** menu.

As stated in the warning text, this command deletes all virtual drives and hot spare drives attached to the controller.

### ATTENTION

All data on the virtual drives is erased. If you want to keep this data, be sure you back it up before using this command.

To complete the command, follow these steps:

1. Highlight the brackets next to **Confirm** and press the spacebar.

An X appears in the brackets.

2. Highlight **Yes** and press **Enter**.

A success message appears.

3. Highlight **OK** and press **Enter**.

The HII Configuration Utility clears the configuration and returns you to the **Configuration Management** menu.

## Make Unconfigured Good, Make JBOD, and Enable Security on JBOD

When you power off a controller and insert a new physical drive, if the inserted drive does not contain valid DDF metadata, the drive status is listed as either JBOD (Just a Bunch of Disks) or Unconfigured Good when you power on the system again.

### NOTE

When the JBOD mode is enabled, the drive comes up as a JBOD drive; otherwise, it comes up as an Unconfigured Good drive.

When you power off a controller and insert a new physical drive, if the drive contains valid DDF metadata, its drive state is either **Unconfigured Bad** or **Foreign**. A new drive in the JBOD drive state is exposed to the host operating system as a stand-alone drive. You cannot use JBOD drives to create a RAID configuration because they do not have valid DDF records. First, the drives must be converted to the Unconfigured Good state.

If the controller supports JBOD drives, the **Configuration Management** menu of the HII Configuration Utility includes options for converting JBOD drives to Unconfigured Good, or conversely Unconfigured Good to JBOD. You can also enable security on the JBOD drives.

#### NOTE

If the controller supports JBOD drives, you can also change the status of JBOD drives to Unconfigured Good when you create a configuration using the **Create Configuration** option.


## Make Unconfigured Good

Perform these steps to change the JBOD drives to Unconfigured Good drives.

1. Highlight **Make Unconfigured Good** on the **Configuration Management** menu and press **Enter**.

The **Make Unconfigured Good** dialog appears, listing all the JBOD drives currently connected to the controller.

**Figure 30: Make Unconfigured Good Dialog**

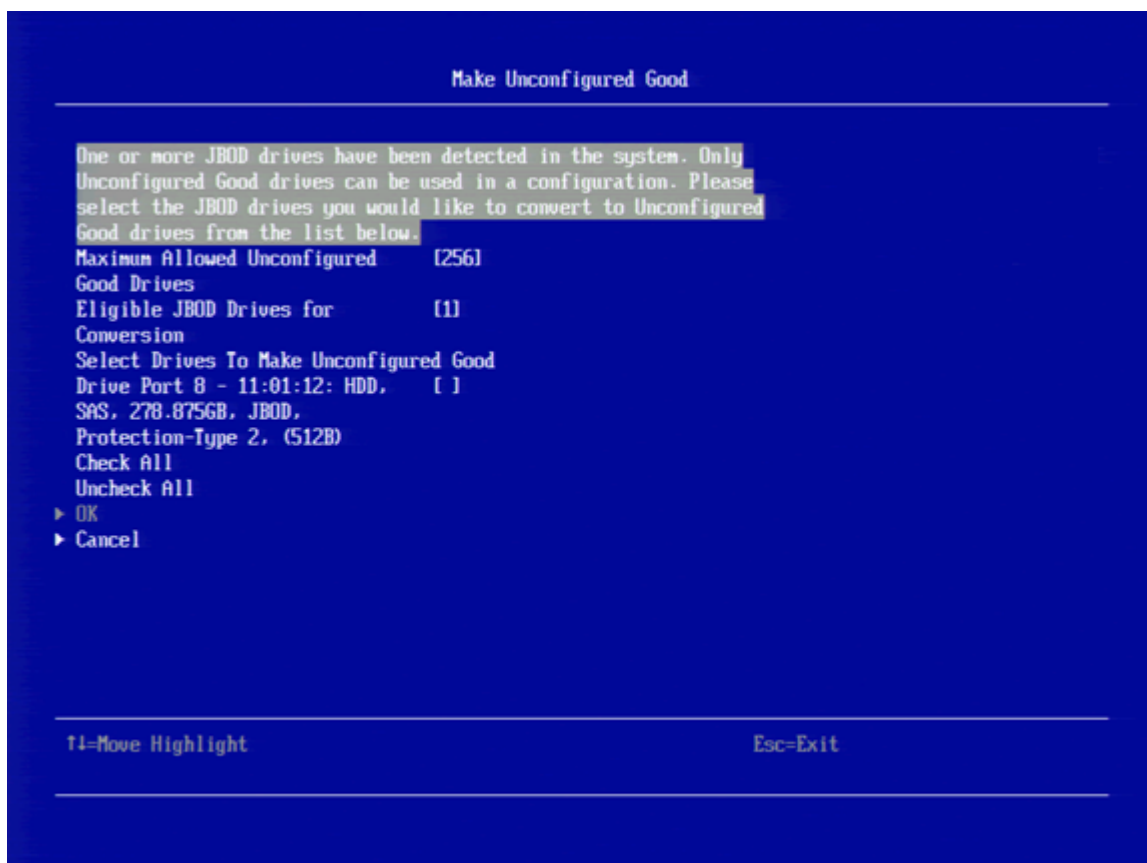

Scroll down, if necessary, to view other drives that are listed.

- a) To select a specific JBOD drive and convert it to Unconfigured Good, highlight the drive and press the spacebar to select it.
- b) To select all the JBOD drives and convert them to Unconfigured Good drives, highlight **Check All** and press **Enter**.
- c) (Optional) To unselect all the drives that you have selected, highlight **Uncheck All** and press **Enter**.

#### ATTENTION

If one or more JBOD drives that you have selected have an operating system (OS) or a file system on them, a warning message appears indicating that the listed JBOD drives have an operating system or a file system and any data on them would be lost if you proceed with the conversion. If you want to proceed, highlight



**Confirm** and press the spacebar, then highlight **Yes** and press **Enter**. Otherwise, highlight **No** and press **Enter** to return to the previous screen and unselect those JBOD drives that have an OS or a file system installed on them.

- Highlight **OK** (at the bottom of the JBOD drive list) and press **Enter** to convert the JBOD drives to Unconfigured Good drives.


## Make JBOD

Perform these steps to change the status of Unconfigured Good drives to JBOD drives.

- Highlight **Make JBOD** on the **Configuration Management** menu and press **Enter**.

The **Make JBOD** dialog appears listing all the Unconfigured Good drives currently connected to the controller.

**Figure 31: Make JBOD Dialog**

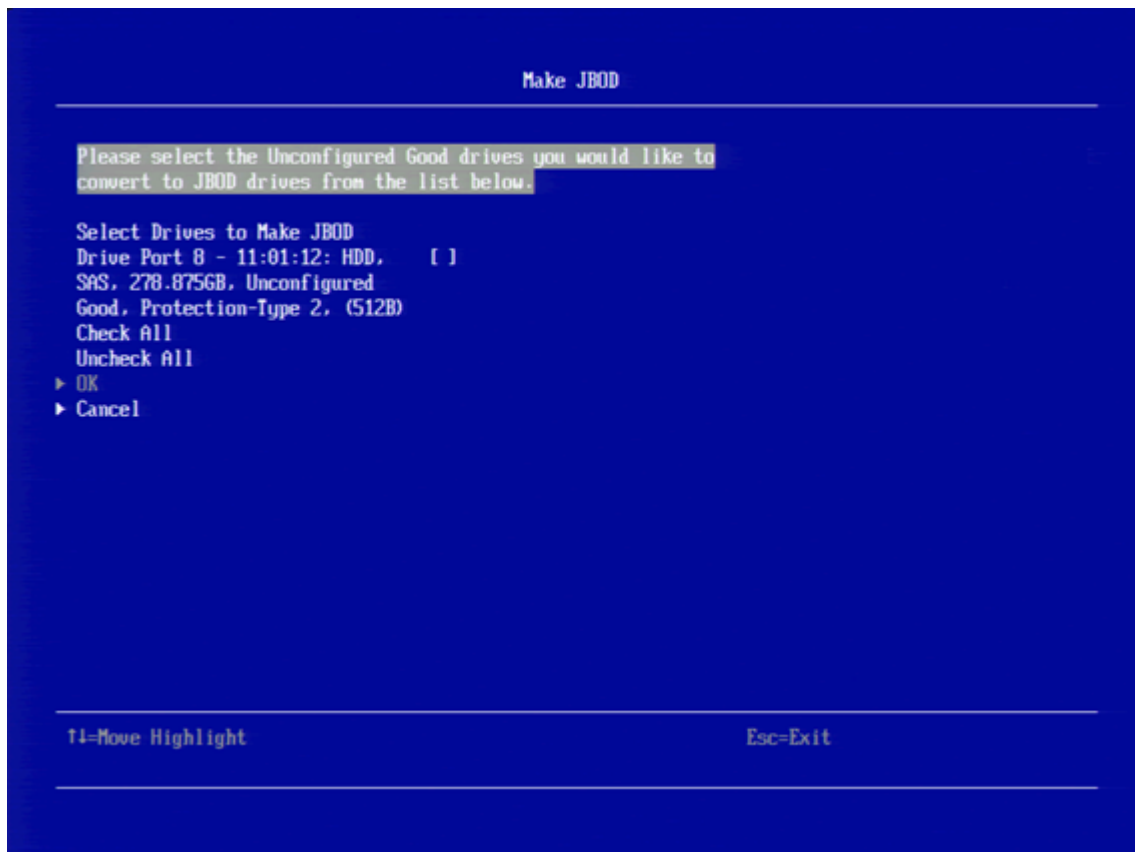

- To select a specific Unconfigured Good drive and convert it to JBOD, highlight the drive and press the spacebar to select it.
  - To select all the Unconfigured Good drives and convert them to JBOD drives, highlight **Check All** and press **Enter**.
  - (Optional) To clear all the drives that you have selected, highlight **Uncheck All** and press **Enter**.
- Highlight **OK** and press **Enter** to convert the Unconfigured Good drives to JBOD drives.

## Enabling Security on JBOD

If you have SED-enabled JBOD drive that meets the prerequisites mentioned in [Managing Configurations](#), you can enable security on it. Follow these steps to enable the security on a JBOD drives.


**ATTENTION**

All of the data on the drive is lost when you enable security on it. Therefore, back up any data that you want to keep.

1. Highlight **Enable Security on JBOD** on the **Configuration Management** menu and press **Enter**.

The **Enable Security on JBOD** dialog appears listing the SED-enabled JBOD drives currently connected to the controller.

**Figure 32: Enable Security on JBOD Dialog**

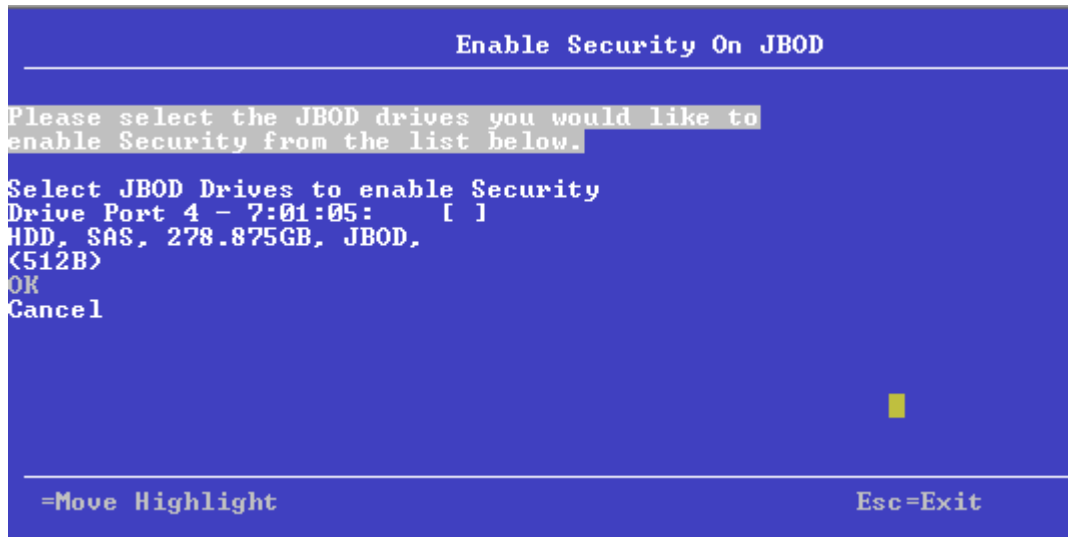

2. Highlight each JBOD drive to enable security on it and press the spacebar to select it.
3. Highlight **OK** and press **Enter** to enable security on the JBOD drive.  
A message appears stating that the existing data in the drive would be lost if you proceed and prompting for your confirmation.
4. Highlight **Confirm** and press the spacebar, then highlight **Yes** and press **Enter**.  
A success message appears.
5. Highlight **OK** and press **Enter**.  
The HII Configuration Utility enables security on the JBOD drive and returns you to the **Configuration Management** menu.

## Managing Foreign Configurations

The following dialog appears when you select **Manage Foreign Configuration** from the **Dashboard View** or the **Configuration Management** menu.

**Figure 33: Manage Foreign Configuration Dialog**

A *foreign configuration* is a virtual disk that was created on another controller and whose member drives have been moved to this controller.

The following sections explain how to preview and import a foreign configuration and how to clear a foreign configuration.

## Previewing and Importing a Foreign Configuration

You can preview a foreign configuration before importing it or clearing it. Importing a foreign configuration means activating an inactive virtual drive that you physically transferred to the controller from another system. You might be unable to import a foreign configuration if any of the following conditions exist:

- The volume state is ACTIVE.
- The volume state is either FAILED or MISSING.
- The volume uses incompatible Gen1 metadata.
- The maximum number of two RAID volumes already exist on this controller.
- The maximum number of supported physical drives are already in use in active volumes on this controller. Global hot spares also count because they must be activated along with other drives in the foreign volume.

When importing a foreign configuration, if the imported foreign virtual drive (VD) is marked as *consistent* in the source controller, the VD is marked as *not consistent* upon successful import if the target controller already has a VD configured and online. The target controller firmware has no way to determine if the import VD is consistent as other firmware operations, which can leave the drives inconsistent and shutdown might not allow the firmware to update DDF structures to reflect the state.

If a locked foreign drive is detected, then the HII Configuration Utility displays the menu option **Enter Security Key for Locked Drives** under the **Manage Foreign Configuration** menu.

The HII Configuration Utility displays the following message if you attempt to import a foreign configuration that is locked, and if drive security is disabled on the controller.

Figure 34: Enter Security Key for Locked Drives




To successfully import the foreign configuration, follow the directions in the message.

Perform these steps to preview and import a foreign configuration.

1. Highlight **Preview Foreign Configuration** on the **Manage Foreign Configuration** menu and press **Enter**.


The **Preview Configuration** dialog appears, listing information about the physical drives in the foreign configuration.

Figure 35: Preview Configuration Window 1

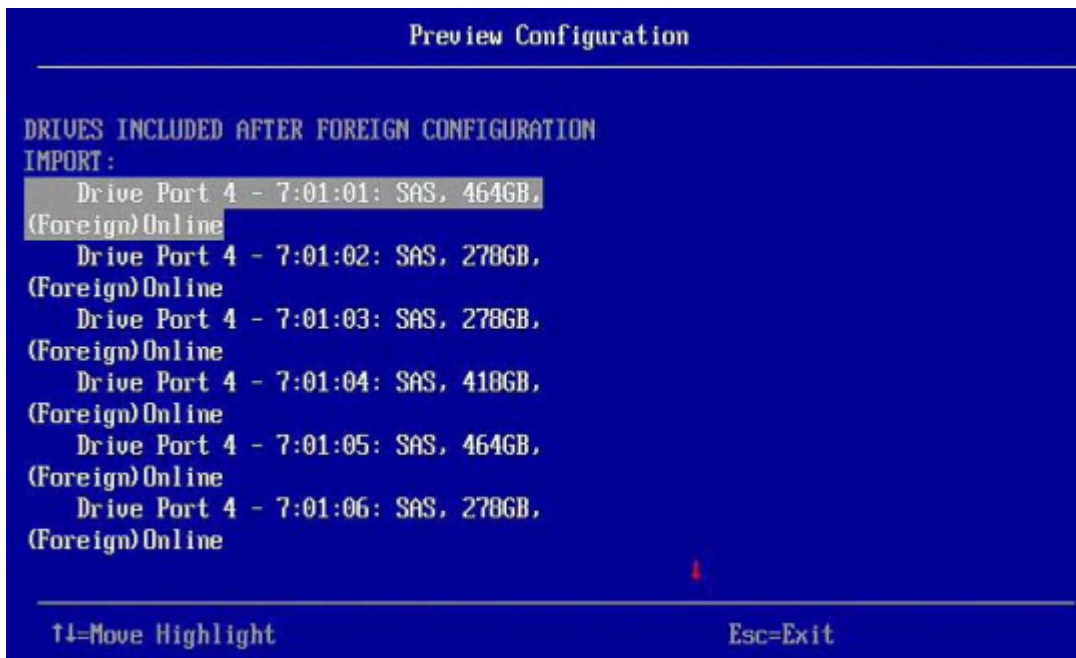

2. Scroll down, if needed, to view more information about the drives in the foreign configuration, as shown in the following figure.

**Figure 36: Preview Configuration Window 2**

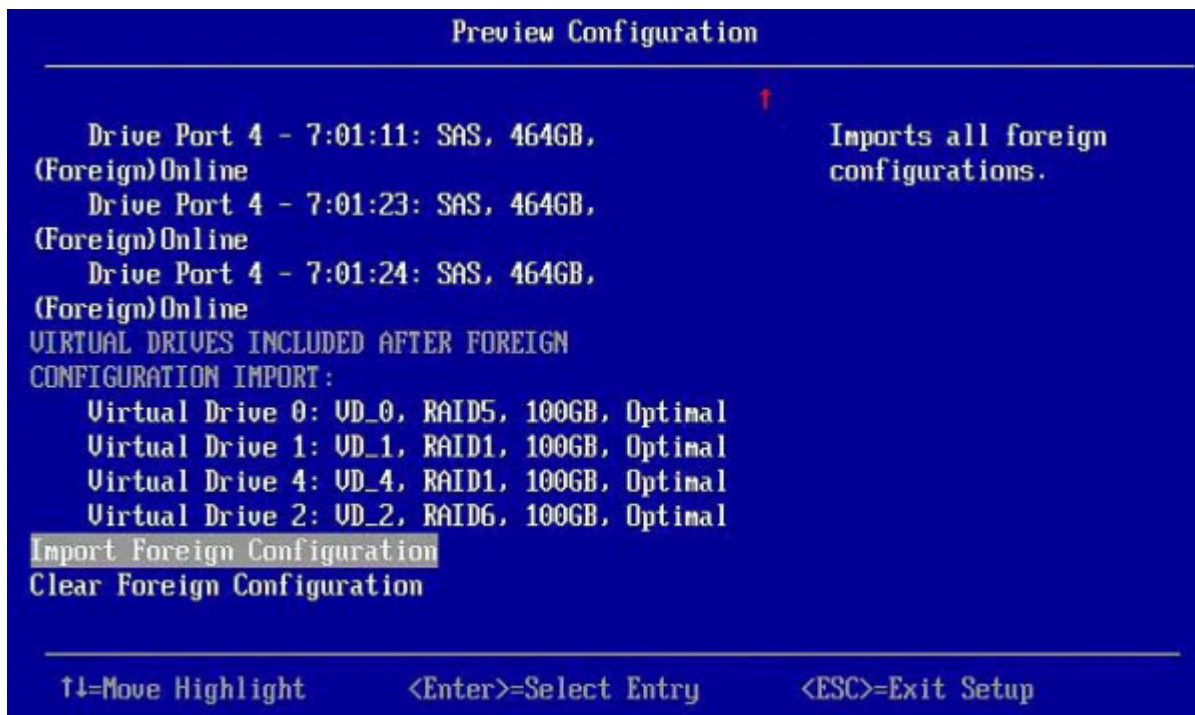

3. Review the information listed on the window.
4. Highlight **Import Foreign Configuration** and press **Enter**.  
A warning message appears that indicates the foreign configuration from the physical drives will merge with the existing configuration.
5. To confirm the import, highlight **Confirm** and press the spacebar.
6. Highlight **Yes** and press **Enter**.  
The foreign configuration is imported.

## Clearing a Foreign Configuration

Perform these steps to clear a foreign configuration.

1. Highlight **Clear Foreign Configuration** on the **Manage Foreign Configuration** menu and press **Enter**.  
A warning message appears that indicates all of the foreign VDs will be deleted.
2. To confirm clearing the foreign configuration, highlight **Confirm** and press the spacebar.
3. Highlight **Yes** and press **Enter**.  
The foreign configuration is deleted.

### NOTE

You can also delete (clear) a foreign configuration after you preview the configuration.


## Managing Controllers

When you select **Controller Management** from the **Main Menu** or from the **View Server Profile**, the **Controller Management** dialog appears, as shown in the following figure.

The top level **Controller Management** dialog lists some actions that you can perform on the controller.

- To view additional controller management properties, in the **Basic Properties** section, highlight **Advanced Controller Management** and press **Enter**.  
For more information, see [Viewing Advanced Controller Management Options](#).
- To view additional controller properties, in the **Basic Properties** section, highlight **Advanced Controller Properties**.  
For more information, see [Viewing Advanced Controller Properties](#).

**Figure 37: Controller Management Dialog**

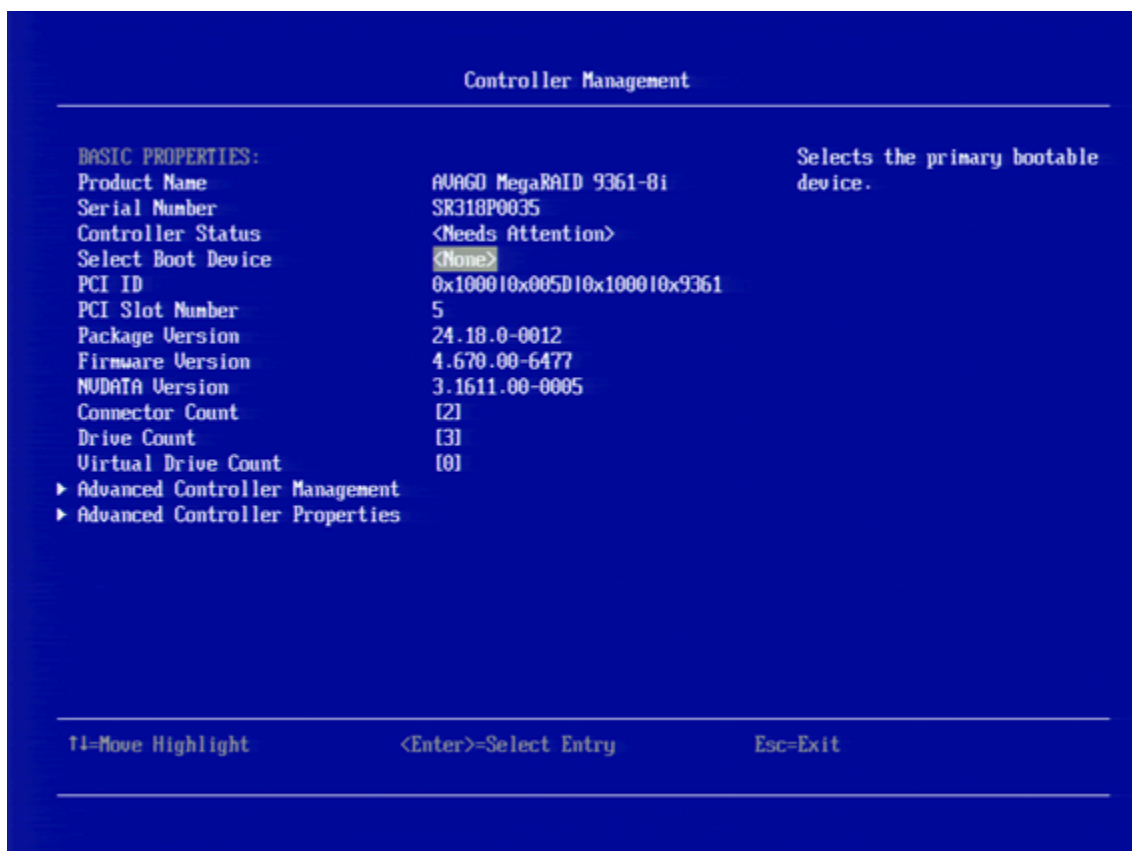

The **Controller Management** dialog lists the following basic controller properties.

**Table 25: Basic Controller Properties**

| Property      | Description                           |
|---------------|---------------------------------------|
| Product Name  | The marketing name of the controller. |
| Serial Number | The serial number of the controller.  |




| Property                         | Description   |
|----------------------------------|---|
| <b>Controller Status</b>         | The cumulative status of virtual drives and physical drives that are connected to the controller, plus the backup battery, the enclosure, and the NVDATA. The status is one of the following: <ul style="list-style-type: none"> <li>• <b>Optimal</b>, if all components are operating normally.</li> <li>• <b>Needs Attention</b>, if any component needs attention.</li> <li>• <b>Safe Mode</b>, if the controller encountered critical errors.<br/>Most features are disabled and the controller requires user attention.</li> </ul> |
| <b>Select Boot Device</b>        | This field selects the primary boot device.<br><br><b>Note:</b> This property is applicable for legacy BIOS as legacy BIOS does not support booting from 4K block-size devices. Hence, you will not be able to see the 4K block-size devices such as JBODs or VDs that get listed here for selection. However, you can use the UEFI environment for booting 4K devices.   |
| <b>PCI ID</b>                    | The PCI ID of the controller.   |
| <b>PCI Slot Number</b>           | The slot ID number of the PCI slot where the controller is installed.   |
| <b>Package Version</b>           | The version number of the package.  |
| <b>Expander Firmware Version</b> | This field shows the firmware version of the expander that is connected to the controller. This field only appears when an expander is connected to the controller.   |
| <b>Firmware Version</b>          | The version number of the controller firmware.  |
| <b>NVDATA Version</b>            | The version number of the controller NVDATA.  |
| <b>Connector Count</b>           | Number of host data ports, connectors, or both currently in use on this controller.   |
| <b>Drive Count</b>               | Number of physical drives that are attached to this controller.   |
| <b>Virtual Drive Count</b>       | Number of virtual drives defined on this controller   |

## Viewing Advanced Controller Management Options

The **Advanced Controller Management** dialog lists all the controller management properties and also includes options for performing various actions on the controller.

Figure 38: Advanced Controller Management Dialog

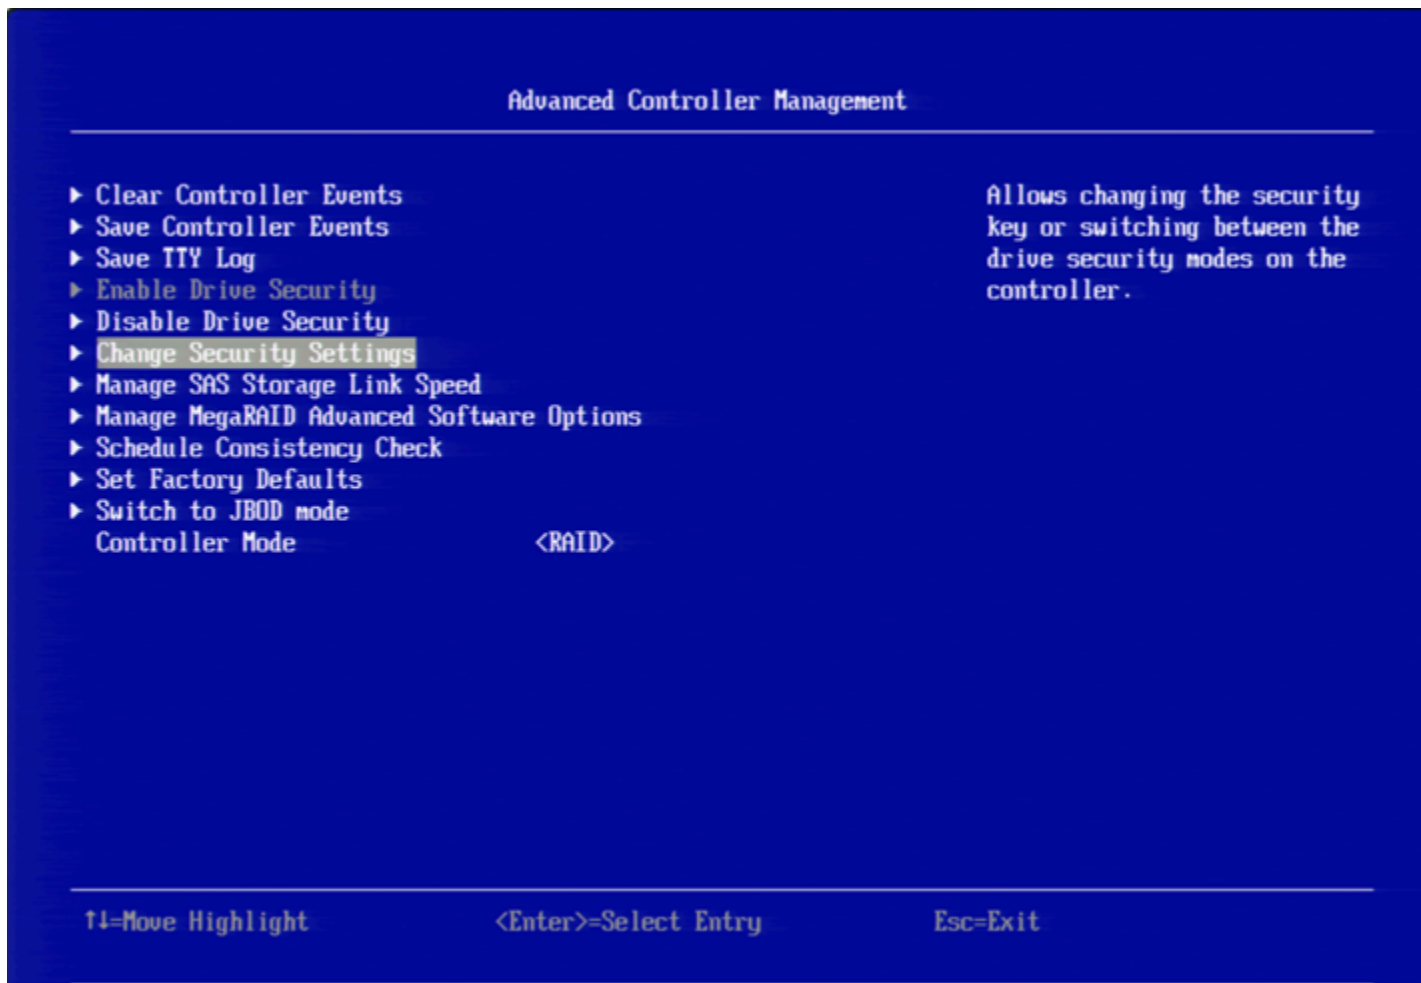

The following table describes all of the entries on the **Advanced Controller Management** dialog, including the ones that are not visible.

Table 26: Controller Management Options

| Property                        | Description  |
|---------------------------------|--|
| <b>Clear Controller Events</b>  | Clears entries from the log.   |
| <b>Save Controller Events</b>   | Saves the controller log entries to a file.  |
| <b>Save TTY Log</b>             | Saves a copy of the firmware's terminal log entries for the controller.                    |
| <b>Enable Drive Security</b>    | Enables drive security to protect the data on your system from unauthorized access or use. |
| <b>Disable Drive Security</b>   | Disables drive security.   |
| <b>Change Security Settings</b> | Changes the security settings or switches between drive security modes on the controller.  |



| Property   | Description   |
|--|---|
| <b>Manage SAS Storage Link Speed</b>             | Enables you to change the link speed between the controller and an expander, or between the controller and a drive that is directly connected to the controller.<br>For more information, see <a href="#">Managing SAS Storage Link Speeds</a> .  |
| <b>Manage PCIe Storage Interface</b>             | A lane represents a set of differential signal pairs, one pair for transmission and one pair for reception, similar to SAS phys.<br>The Manage PCIe Storage Interface feature allows you to change the lane speed between a controller and expander or between the controller and a drive that is directly connected to the controller.<br>MegaRAID 7.1 and later versions support both SAS/SATA topologies as well as PCIe topologies using the same device phys to manage the lane speed. For more information, see <a href="#">Managing PCIe Storage Interface</a> . |
| <b>Manage MegaRAID Advanced Software Options</b> | Displays the activated MegaRAID Advanced Software Options on the controller and lets you configure these options to use the advanced features in the controller. You must activate the activation key to use the advanced features.<br>The MegaRAID Advanced Software Options are displayed only if the controller supports MegaRAID software licensing.  |
| <b>Schedule Consistency Check</b>                | Schedules a consistency check operation to verify and correct the mirror and parity data for fault tolerant virtual drives.   |
| <b>Set Factory Defaults</b>                      | Resets the controller to its factory settings.  |
| <b>Switch to &lt;RAID/JBOD&gt; Mode</b>          | Used to switch between personality modes. The available personality modes are RAID and JBOD. If you switch between personality modes, for example, from RAID mode to JBOD mode, a reboot is required.   |
| <b>Manage Mode and Params</b>                    | If your system is in a personality mode, for example, RAID mode, you can use this option to change the personality mode and its parameters. The available personality modes are RAID mode and JBOD mode.  |
| <b>Controller Mode</b>                           | Displays the current personality of the controller.   |

## Viewing Advanced Controller Properties

The **Advanced Controller Properties** dialog lists all the controller properties and also includes options for performing various actions on the controller.


The top level of the **Advanced Controller Properties** dialog lists some actions that you can perform on the controller.

- To view the details of the current profile and to select your desired profile, highlight **Profile Management** and press **Enter**. For more information, see [Managing Profiles](#).
- To view and modify the controller cache, highlight **Cache and Memory** and press **Enter**.  
For more information, see [Setting Cache and Memory Properties](#).
- To view and set patrol read properties, highlight **Patrol Read**, and press **Enter**.  
For more information, see [Running a Patrol Read](#).
- To view and modify physical drive power settings, highlight **Power Settings** and press **Enter**.  
For more information, see [Changing Power Save Settings](#).
- To view and modify properties related to replacing a drive, an emergency spare, or a hot spare, highlight **Spare** and press **Enter**.

For more information, see [Setting Emergency Spare Properties](#).

- To modify the rebuild rate and other task rates for a controller, highlight **Task Rates** and press **Enter**.  
For more information, see [Changing Task Rates](#).

**Figure 39: Advanced Controller Properties Dialog**

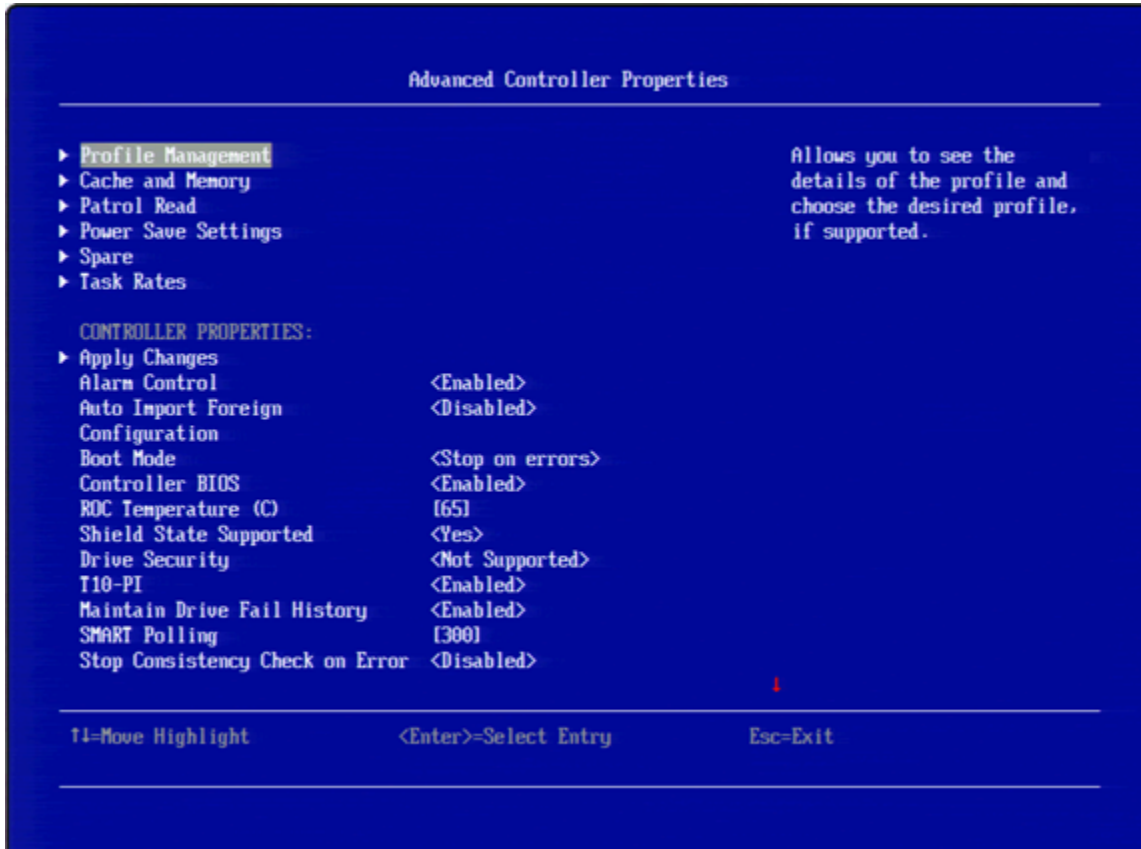

This dialog lists various properties, but all of them cannot be shown in one dialog. Scroll down to view all of the options.

#### NOTE

The red arrow appears when there is too much information to display in one dialog. The amount of information that can be displayed in one dialog depends on the capabilities of the HII browser.

Many of the entries in this dialog are view-only, but some are selectable and configurable. Perform these steps to change any user-configurable option on this dialog.

1. Move the highlight to the value for any option and press **Enter**.

A popup menu of the available options appears.

2. Highlight the value that you want and press **Enter**. For options, such as **SMART Polling** that require a number, use the + and – keys on the keypad to increase or decrease the number, and press **Enter**.

#### NOTE

Some systems permit you to enter numeric values directly, without using the + and – keys.

3. When you finish changing the controller properties, scrolling up and down on the menu as needed, move the highlight to **Apply Changes** and press **Enter**.

The changes to the controller properties are applied, and a success message appears.

The following table describes all the controller properties that are listed in the **Advanced Controller Properties** section, including the ones that are not visible.

**Table 27: Advanced Controller Properties**

| Property                                 | Description   |
|--|---|
| <b>Alarm Control</b>                     | Enables or disables the controller alarm.   |
| <b>Auto Import Foreign Configuration</b> | Enables or disables the automatic import of foreign configurations without any user intervention.   |
| <b>Boot Mode</b>                         | Specifies the option to handle errors that the firmware might encounter during the boot process. The errors might require you to take action or to acknowledge the error and permit the boot process to continue. The options are <b>Stop on error</b> , <b>Pause on error</b> , <b>Ignore errors</b> , and <b>Safe mode on errors</b> .  |
| <b>Controller BIOS</b>                   | Enables or disables the controller BIOS. The controller BIOS should be enabled if the boot device is connected to the selected RAID controller.<br>Applicable only for BIOS boot (see <a href="#">Table 25, Basic Controller Properties</a> ).  |
| <b>Controller Temperature</b>            | Indicates the temperature of the controller.  |
| <b>ROC Temperature</b>                   | Current temperature of the RAID-on-a-chip (ROC) on the controller, in degrees Celsius.  |
| <b>Shield State Supported</b>            | Indicates whether the controller supports shield state.   |
| <b>Drive Security</b>                    | Indicates the drive security (encryption) feature status on the controller.   |
| <b>Maintain Drive Fail History</b>       | Enables or disables the option to track bad physical drives through a reboot.   |
| <b>SMART Polling</b>                     | Determines the interval, in seconds, at which the controller polls for drives reporting a Predictive Drive Failure. The default is 300 seconds. To change the value, use the + and – keys on the keypad. Some systems let you edit the numeric value directly, without using the + and – keys.  |
| <b>Stop Consistency Check on Error</b>   | Enables or disables the option of stopping a consistency check operation on a redundant virtual drive if a data inconsistency is detected.  |
| <b>JBOD Mode</b>                         | Enables or disables the JBOD mode.<br><br><b>Note:</b> When the JBOD mode is enabled, the drive comes up as a JBOD drive; otherwise, it comes up as an Unconfigured Good drive.<br><br><b>Note:</b> When the JBOD mode is disabled, if one or more selected JBODs contain an operating system or a file system, a warning message appears indicating that the listed JBOD drives have an operating system or a file system and any data on them would be lost if you proceed. If you want to disable the JBOD mode, highlight <b>Confirm</b> and press the <b>spacebar</b> , then highlight <b>Yes</b> and press <b>Enter</b> . Else, highlight <b>No</b> . |
| <b>Write Verify</b>                      | Enables or disables the write verify feature during the controller cache flush. This feature verifies if the data was written correctly to the cache before flushing the cache.   |
| <b>Large IO Support</b>                  | By default, the large I/O support is enabled.   |
| <b>Enterprise Key Management</b>         | When selected, the following READ only properties are shown. <ul style="list-style-type: none"> <li>• <b>Capability:</b> Indicates whether the controller firmware supports Enterprise Key Management mode.</li> <li>• <b>Boot Agent:</b> Indicates the status of the boot agent for Enterprise Key Management.</li> <li>• <b>Configured:</b> Indicates whether the Enterprise Key Management mode is configured on the controller.</li> </ul>  |

## Managing MegaRAID Advanced Software Options

The **Manage MegaRAID Advanced Software Options** dialog lists all the activated advance software options on the controller. You can configure the MegaRAID advanced software options to use the advanced software features.

Follow these steps to enable the activation key in order to use the advanced software features:

1. In the **Dashboard View** dialog or the **Advanced Controller Management** dialog, highlight **Manage MegaRAID Advanced Software Options** and press **Enter**.

The **Manage MegaRAID Advanced Software Options** dialog appears, as shown in the following figure.

**Figure 40: Manage MegaRAID Advanced Software Options Dialog**

```
System Configuration → Dashboard View → Manage MegaRAID Advanced Software Options

MegaRAID Advanced Software Options enable special functionalities or features that may not be
available in the standard configuration of the controller.
▶ Activated MegaRAID Advanced Software Options
MegaRAID RAID6 (Unlimited)
MegaRAID RAID5 (Unlimited)
MegaRAID SafeStore (Unlimited)
MegaRAID FastPath (Unlimited)
SAFE ID [AEKXNNPK2XP5A21JCTEP AFC6J5MRC1FX6X4826A21]
Serial Number [SK932747701]
Activation Key [ ]
Activate
Deactivate All Trial Software
```

This dialog lists fields that cannot all be shown in one dialog. Scroll down to view all of the fields.

### NOTE

The red arrow appears when there is too much information to display in one dialog. The amount of information that can be displayed in one dialog depends on the capabilities of the HII browser.

Both the **Safe ID** and the **Serial Number** fields consist of predefined values internally generated by the controller.

2. Highlight **Activation Key** and press **Enter**. Enter the activation key and press **Enter**.
3. Click **Activate**.

The activation key is activated. You can now use the advanced software features.

## Scheduling a Consistency Check


The **Schedule Consistency Check** dialog appears when you select **Schedule Consistency Check** from the **Advanced Controller Management** menu.

Use this dialog to schedule consistency checks on the redundant virtual drives configured on the controller. The nonselectable entries in the **Consistency Check Start** fields indicate the date and time of the next scheduled consistency check.

Follow these steps to change the consistency check settings.

1. Highlight the **Consistency Check Frequency** field and press **Enter**.

A selectable popup menu appears.

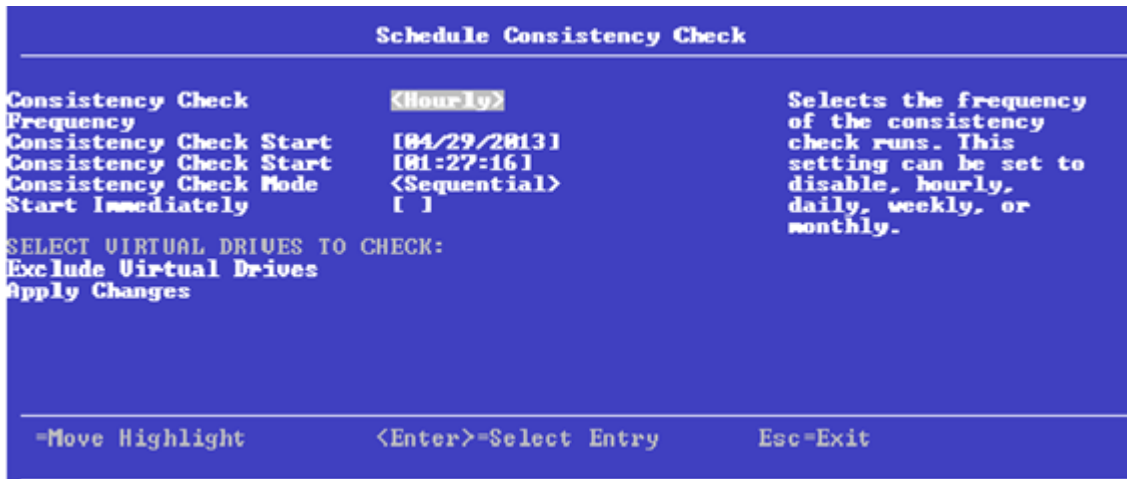**Figure 41: Schedule Consistency Check Dialog**

2. Select the desired interval at which to run consistency checks.  
The choices are **Hourly**, **Daily**, **Weekly**, or **Monthly**. Do not disable consistency checks because it reduces the level of protection for your system.
3. To change the mode of operation, highlight the **Consistency Check Mode** field and press **Enter**.  
A selectable popup menu appears.
4. Check the **Concurrent** check box to run consistency checks concurrently on all virtual drives, or select **Sequential** to run consistency checks on one virtual drive at a time.
5. Check the **Start Immediately** check box to run consistency checks immediately on all virtual drives that are *not* excluded, instead of a single virtual drive.
6. (Optional) To exclude specified virtual drives from consistency checks, highlight the **Exclude Virtual Drives** field and press **Enter**.  
The **Exclude Virtual Drives** dialog appears, listing the virtual drives defined on this controller.  
You can exclude a virtual drive from a consistency check if, for example, you are running an operation on the drive and you do not want it to be interrupted by a consistency check.
7. To exclude a virtual drive from the consistency check, highlight the field to the right of the drive name and press the spacebar.  
An X in this field means the virtual drive does not undergo a consistency check.
8. Highlight the **Select Entry** field and press **Enter**.  
The program returns you to the **Schedule Consistency Check** dialog.
9. Highlight the **Select Entry** field on the **Schedule Consistency Check** dialog and press **Enter**.  
The consistency check changes are now registered.

## Managing Personality Mode


If your system is in personality mode (RAID or JBOD Mode), the firmware supports auto-configure options to allow the controller to function as appropriate for the user environment.

Personality mode can be configured to present a different controller name. The firmware switches the PNPID of the controller and reconfigures the controller features and usage models.

You can use the **Manage Personality Mode** setting to change the personality mode and its parameters.

1. In the **Advanced Controller Management** dialog, highlight **Manage Personality Mode** option and press **Enter**.  
The **Manage Personality Mode** dialog appears.

**Figure 42: Manage Personality Mode Dialog**

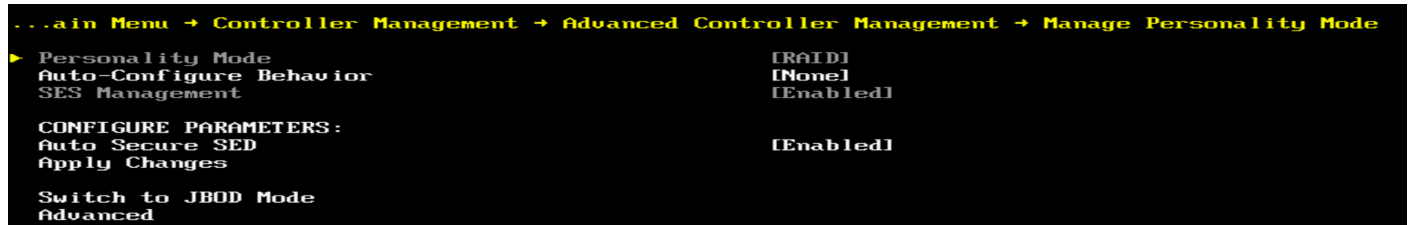

2. Select the Personality Mode. The available options are **JBOD** and **None**.  
If you choose the option **None**, you cannot enable or disable the **Auto Secure SED** option.
3. Highlight **Apply Changes** and press **Enter**.
4. Highlight **Confirm** and press the **spacebar**, then highlight **Yes** and press **Enter**.


## Saving or Clearing Controller Events

The following window appears when you select **Save Controller Events** from the **Advanced Controller Management** menu.

### NOTE

An error message appears if the controller events log is empty.

**Figure 43: Save Controller Events Dialog**

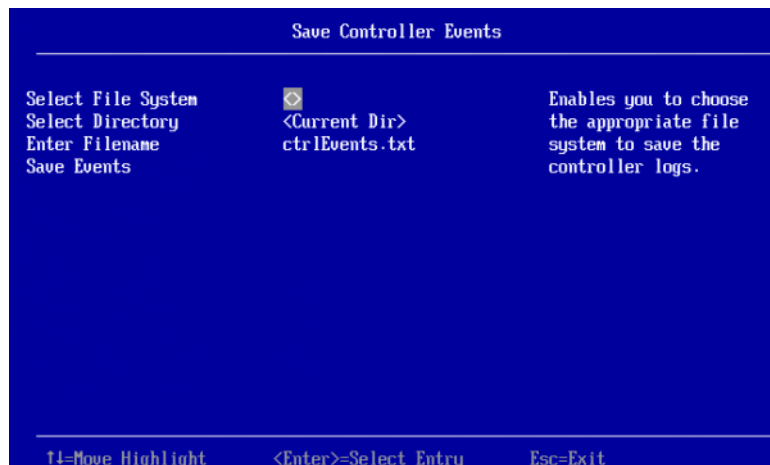

Perform these steps to save controller event log entries to a file.

1. To select a different file system from the one listed in the **Select File System** field, highlight the current file system name and press **popup**.  
An error message appears if there is no file system.



2. Select a file system from the popup menu and press **Enter**.
3. To save the controller events file to a different directory from the one listed in the **Select Directory** field, highlight the current directory name and press **Enter**.
4. Select a directory name from the popup menu and press **Enter**.
5. To enter a different name for the controller event log file, highlight the current file name and press **Enter**.
6. Type the new file name in the popup dialog and press **Enter**.
7. Highlight **Save Events**, and press **Enter** to save the event log entries to the file.

To clear controller events, highlight **Clear Controller Events** in the **Advanced Controller Management** dialog. When the confirmation message appears, highlight **OK** and press **Enter**.

## Enabling or Disabling Drive Security

The following dialog appears when you select **Enable Drive Security** from the **Advanced Controller Management** menu.

**Figure 44: Enable Drive Security (Choose Drive Security Mode) Dialog**



Enable drive security to protect the data on your system from unauthorized access or use. Local Key Management (LKM) is the method that the HII Configuration Utility provides to manage drive security. LKM uses security keys within the controller and does not require any external entity to implement. Therefore, it is the preferred security mode for configurations that involve a smaller number of computer systems.

Broadcom UEFI/HII drivers support interactive password primitive. If the OEM wants to use “Pause for password at boot” feature, which is part of the security feature, the system BIOS must support ECR 1085 and 1174; otherwise you will not be able to use this feature.


The system BIOS should use password primitive's prompt as a dialog title because this is an interactive password, and it is controlled by IHV. For example, if the password primitive's prompt is `Enter Your Input Here`, the dialog title should use the same name.

Follow these steps to enable LKM security on your configuration.

1. Highlight the **Local Key Management (LKM)** field and, if required, press the spacebar to enter an X in this field.
2. Highlight **OK** and press **Enter**.

The following dialog appears.

**Figure 45: Enable Drive Security Dialog**

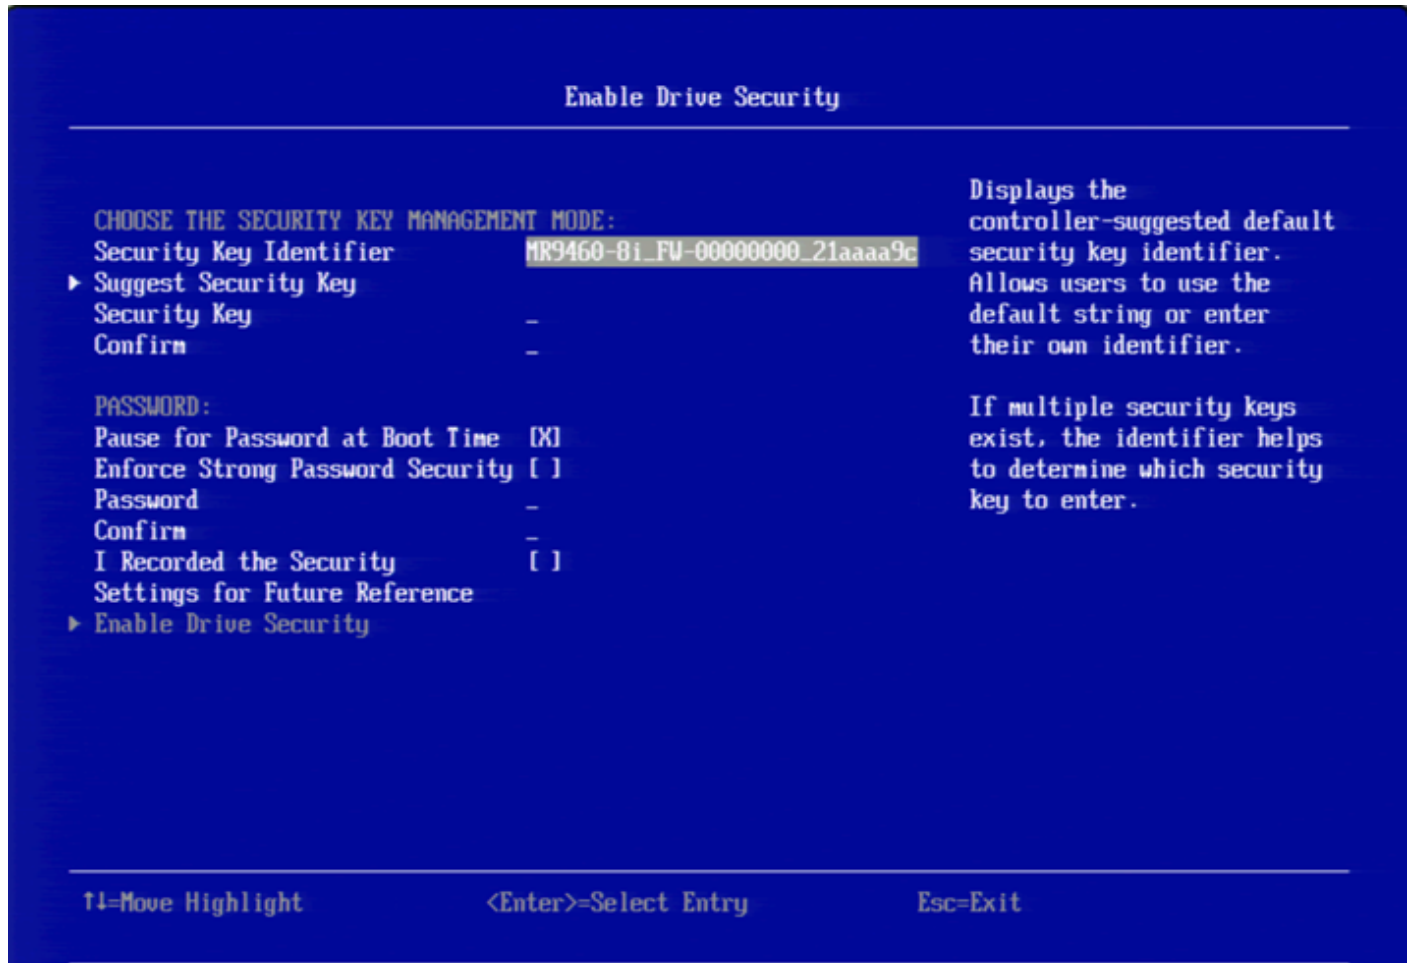

The highlighted field is the security key identifier, which appears whenever you need to enter the security key. If you have more than one security key, the identifier helps you determine which security key to enter.

3. To change the security key identifier, press **Enter** and enter the new identifier in the popup window.
4. To request the controller to suggest a drive security key, highlight **Suggest Security Key** and press **Enter**.
5. To enter your own security key, highlight the **Security Key** field, press **Enter**, and type the security key.

The **Security Key** field is case-sensitive. The security key must be between 8 and 32 characters and must contain at least one number, one lowercase letter, one uppercase letter, and one nonalphanumeric character (for example, > @ +).

6. After entering the security key, highlight **Confirm** and press **Enter**. Enter the security key again to confirm it.

The security key must match exactly the characters you entered in the **Security Key** field.



7. If you do not want the controller to require a password at boot time, deselect the **Pause for Password at Boot** option by highlighting it and pressing the spacebar.

This option is selected by default.

8. To enforce strong password restrictions, highlight **Enforce Strong Password Security** and press the spacebar.

A strong password must be between 8 and 32 characters and must contain at least one number, one lowercase letter, one uppercase letter, and one nonalphanumeric character (for example, > @ +).

9. Highlight the **Password** field, press **Enter**, and type the boot time password.

10. Highlight **Confirm** and re-enter the password.

The password must match exactly the characters you entered in the **Password** field.

11. Record the drive security information and store it in a safe place.

12. Highlight the **I Recorded The Security Settings** field and press the spacebar to select it.

13. Highlight **Enable Drive Security** and press **Enter**.

14. When the popup window appears, confirm that you want to enable drive security and select **Yes**.


Drive security is enabled for the drives connected to this controller.

Follow these steps to disable LKM drive security:

1. Select **Disable Drive Security** from the **Advanced Controller Management** menu.

The following warning appears.

**Figure 46: Disable Drive Security Warning**

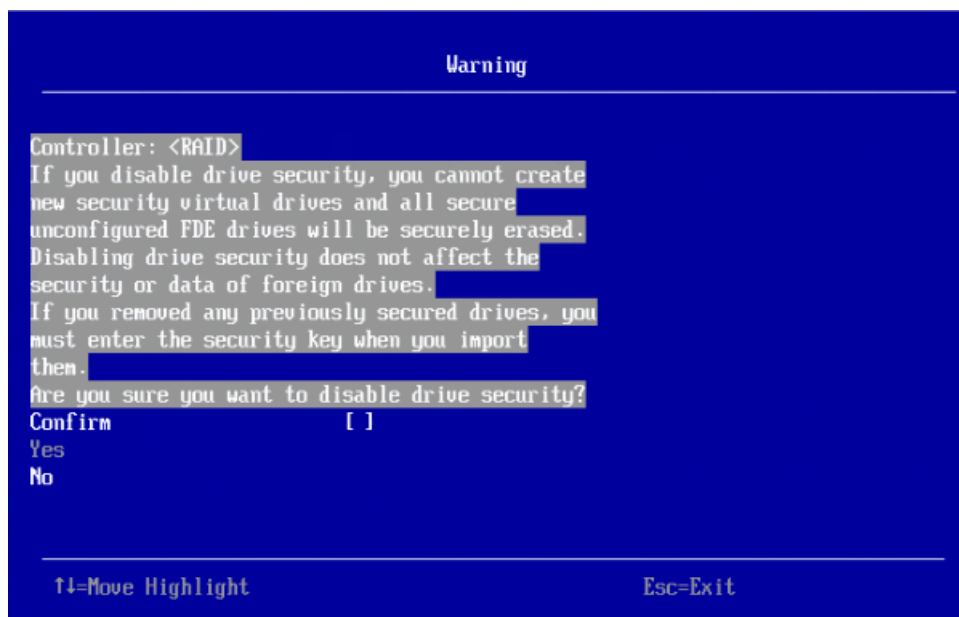

2. Read the warning and be sure you understand what will happen if you disable the drive security.
3. Highlight **Confirm** and press the spacebar to select it.
4. Highlight **Yes** and press **Enter**.  
Drive security is disabled.

## Changing Security Settings

The **Change Security Key** dialog appears when you select **Change Security Key** from the **Advanced Controller Management** menu.

Perform these steps to change the security settings.

1. Highlight **OK** and press **Enter**.

The following dialog appears.

**Figure 47: Change Security Settings Dialog**



By default, the same security key identifier is retained.

2. To change the security key identifier, press the spacebar to deselect **Use the Existing Security Key Identifier**.
3. Highlight the **Enter a New Security Key Identifier** field, press **Enter**, and enter the new security key identifier in the popup window.
4. Highlight the **Enter Existing Security Key** field and press **Enter**.

You are required to enter the security key to prevent unauthorized changes to the security settings.

5. Type the current security key in the popup window and press **Enter**.
6. Highlight **Suggest Security Key** and press Enter to have the system create a new security key.
7. To enter your own new security key, highlight the **Enter A New Security Key** field, press **Enter**, and type the new security key.

This field is case-sensitive. The security key must be between eight and thirty-two characters and must contain at least one number, one lowercase letter, one uppercase letter, and one non-alphanumeric character (for example, > @ +).
8. After entering the new security key, highlight **Confirm** and press **Enter**. Enter the security key again to confirm it.

The security key must match exactly the characters you entered in the **Enter a New Security Key** field.
9. If you do not want the controller to require a password at boot time, deselect the **Pause for Password at Boot Time** option by highlighting it and pressing the spacebar.

The contents of this field will be empty when you select this check box.  
This option is selected by default.
10. To enforce strong password restrictions, highlight **Enforce Strong Password Security** and press the spacebar.

A strong password must be between eight and thirty-two characters and must contain at least one number, one lowercase letter, one uppercase letter, and one non-alphanumeric character (for example, > @ +).
11. Highlight the **Password** field, press **Enter**, and type the new boot time password.
12. Highlight **Confirm** and reenter the new password.

The password must match exactly the characters you entered in the **Password** field.
13. Record the drive security information and store it in a safe place.
14. Highlight the **I Recorded The Security Settings** field and press the spacebar to select it.
15. Highlight **Save Security Settings** and press **Enter**.
16. When the popup window appears, confirm that you want to change the security settings and select **Yes**.

The security changes are entered for the drives connected to this controller.

## Saving the TTY Log

The following dialog appears when you select **Save TTY Log** from the **Advanced Controller Management** menu.

**Figure 48: Save TTY Log Dialog**


| Save TTY Log   |            |   |
|--|------------|---|
| File Systems   | <HANTOOL>  | Enables you to choose the appropriate directory to save the controller logs. The default (root) directory will be selected upon entering this form. |
| Select File System                                       |            |   |
| Directories  | <DOS>      |   |
| Select Directory   |            |   |
| Enter Filename   | ttyLog.txt |   |
| Entries to Save  | <All>      |   |
| Save Log   |            |   |
| ⬅=Move Highlight      <Enter>=Select Entry      Esc=Exit |            |   |

Follow these steps to save the TTY log entries to a file.

- To select a different file system from the one listed in the **File Systems** field, highlight the current file system name, and press **Enter**.  
An error message appears if there is no file system.
- Select a file system from the popup menu, and press **Enter**.
- Highlight **Select File System** and press **Enter**.
- To save the TTY log events file to a different directory from the one listed in the **Directories** field, highlight the current directory name, and press **Enter**.
- Select a directory name from the popup menu, and press **Enter**.
- Highlight **Select Directory**, and press **Enter**.
- To enter a different name for the TTY log file, highlight the current file name, and press **Enter**.
- Type the new file name in the popup window, and press **Enter**.
- To select how many TTY log entries to save, highlight the **Entries to Save** field, and press **popup**.
- Select an option from the popup menu, and press **Enter**.  
Your choices are **2 KB**, **4 KB**, **8 KB**, **16 KB**, or **All**.
- Highlight **Save Log** and press **Enter** to save the log entries to the file.

## Managing SAS Storage Link Speeds

The Manage SAS Storage Link Speed feature lets you change the link speed between the controller and an expander or between the controller and a drive that is directly connected to the controller. The following dialog appears when you select **Manage SAS Storage Link Speed** on the **Advanced Controller Management** dialog. The default setting for all phys is **Auto**.

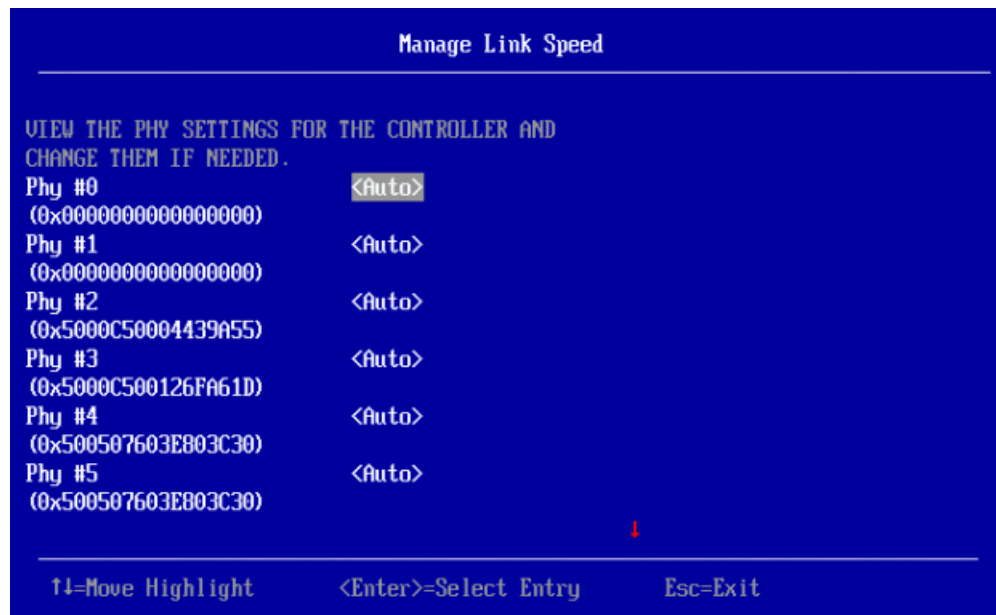**Figure 49: Manage Link Speed Dialog**

Follow these steps to change the link speed for one or more phys:

1. Highlight the field to the right of the phy number and press **popup**.
2. Select an option from the popup menu.


The link speed values are **Auto**, **3 GB/s**, **6 GB/s**, and **12 GB/s**.

3. Scroll to the bottom of the phy list, highlight **OK**, and press **Enter**.

## Managing PCIe Storage Interface

The manage PCIe storage interface allows you to manage and change the lane speed and link width between a controller and an expander or between the controller and a drive that is directly connected to the controller. For managing the PCIe storage interface, navigate to **Manage PCIe Storage Interface** on the **Advanced Controller Management** dialog. By default, the lane speed in the controller is **8 GT/s** or the value last saved by you.

Figure 50: Manage PCIe Storage Interface Dialog

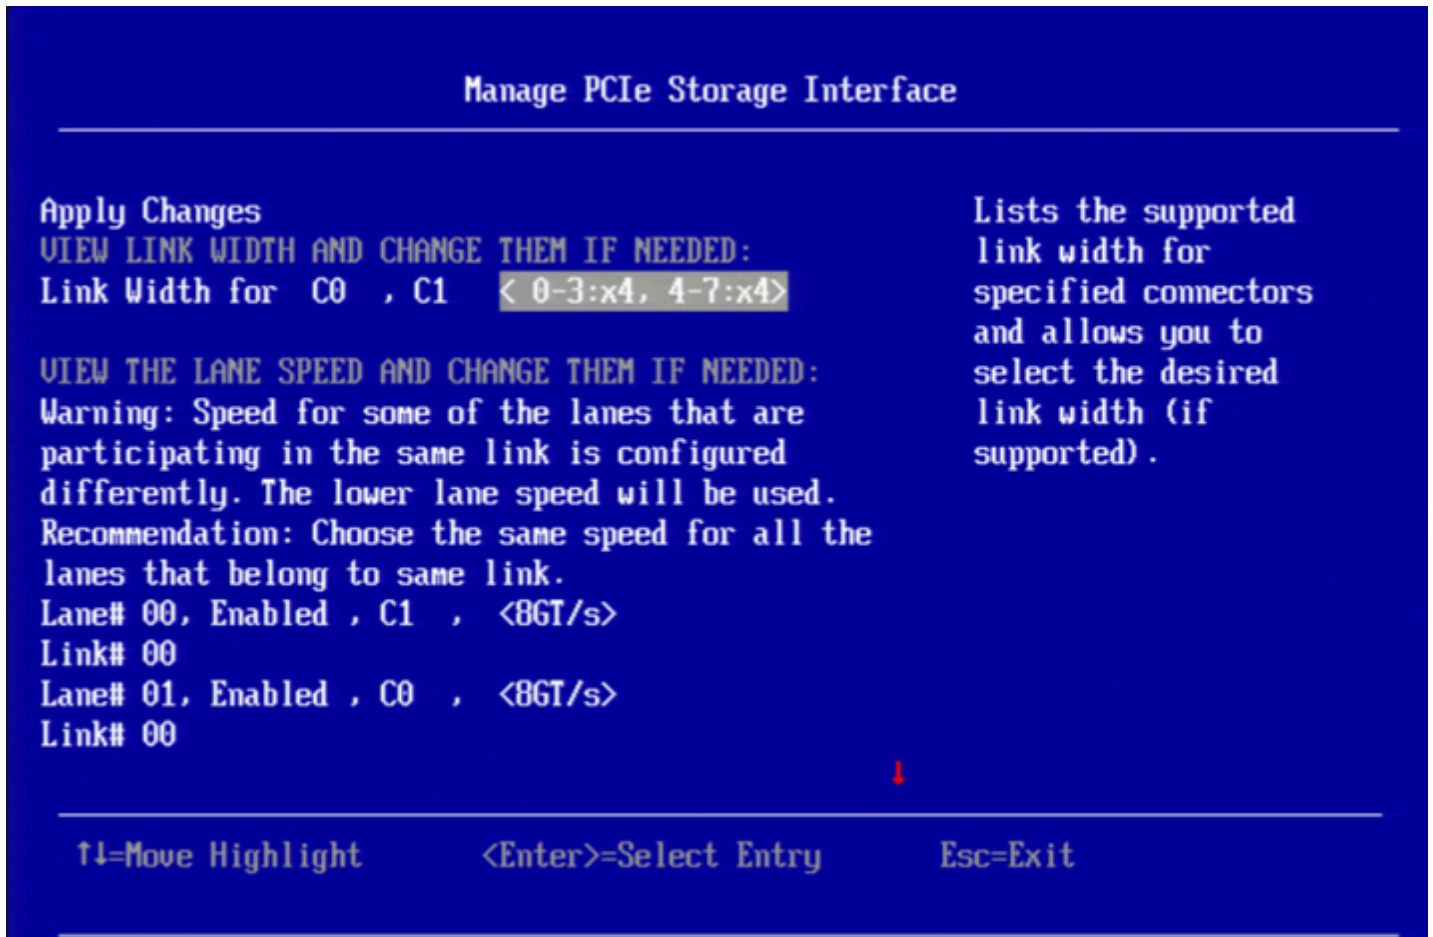

Follow these steps to change the lane speed for one or more phys:

1. Highlight the field to the right of the phy number and press **Enter**.
2. Select an option from the popup menu.  
The link speed values are **Unknown**, **2.5 GT/s**, **5 GT/s**, and **8 GT/s**.
3. Scroll to the bottom of the phy list, highlight **Apply Changes**, and confirm by pressing the spacebar, then highlight **Yes** and press **Enter**.

## Managing Profiles

Profile management allows you to have multiple configurations supported under each personality mode. Profiles customize the controller to deliver the best performance for that configuration. For example, a profile with no PCIe device support can support a higher Queue Depth than a profile that supports 32 PCIe devices. When you choose profile management through HII, the firmware provides a list of profiles that you can select for the current personality.

When you select **Profile Management** from **Advanced Controller Properties**, the following dialog is displayed.

Figure 51: Profile Management Dialog



The **Profile Management** dialog lists the following details.

Table 28: Profile Management Dialog Details

| Property                  | Description  |
|---------------------------|--|
| <b>Personality Mode</b>   | Indicates the current personality of the controller.   |
| <b>Number of Profiles</b> | Indicates the number of profiles supported for the current personality of the controller.  |
| <b>Choose Profile</b>     | Indicates the name of the profile for the current personality of the controller. It also allows you to choose an appropriate profile from the available list.<br><br><b>Note:</b> When you have selected a particular controller profile, for example <code>PCIe4</code> as your profile, using the <b>Set Factory Defaults</b> option which is available under the <b>Actions</b> menu does not change your selected profile. For example, if <code>PD 64</code> is the default controller profile and if you have selected <code>PCIe4</code> as your controller profile, the selected profile ( <code>PCIe4</code> ) is retained by the system even if you use <b>Set Factory Defaults</b> option to restore factory settings on your controller. |



| Property                    | Description   |
|-----------------------------|---|
| <b>Profile ID</b>           | Indicates the unique identity of the selected profile.<br><b>Note:</b> The maximum number of PDs can fall in the range of 8 - 64. Check with the OEM to determine your maximum. |
| <b>Requested Profile ID</b> | Indicates the requested profile. This is displayed only after you have selected the required profile from the available list of profiles.                                       |
| <b>Compatible</b>           | Indicates whether the chosen profile is compatible with your current drive group topology.  |
| <b>Max PD Count</b>         | Indicates the maximum number of physical drives supported by the controller for the selected profile.   |
| <b>Max VD Count</b>         | Indicates the maximum number of virtual drives supported by the controller for the selected profile.  |
| <b>Max PCIe Count</b>       | Indicates the maximum PCIe drives supported by the controller for the selected profile.   |
| <b>Write Back Supported</b> | Indicates if the Write Back functionality is supported.   |

Follow these steps to set or change the profile:

1. On the **Profile Management** dialog, highlight **Choose Profile** and press **Enter**.
2. From the drop-down list, highlight the required profile and press **Enter** to select it.

**Table 29: Available Profiles**

| Personality | Profile ID | Profile Name       | Description  |
|-------------|------------|--------------------|--|
| RAID        | 10         | <b>PD 64</b>       | This profile supports a maximum of 64 physical and virtual drives. This profile does not support any NVMe drives.        |
| RAID        | 11         | <b>PCIe4</b>       | This profile supports a maximum of 64 virtual drives and a maximum of 4 NVMe drives.                                     |
| RAID        | 12         | <b>PD240</b>       | This profile supports a maximum of 240 physical and virtual drives. This profile does not support NVMe drives.           |
| RAID        | 13         | <b>PD64-PCIe4</b>  | This profile supports a maximum of 64 physical and virtual drives and supports a maximum of 4 NVMe drives.               |
| JBOD        | 20         | <b>PD 240</b>      | This profile supports a maximum of 240 SAS/SATA drives. This profile does not support NVMe drives. (RAID 0, 1, 10 only). |
| JBOD        | 21         | <b>PD 64-PCIe8</b> | This profile supports a total of 64 SAS/SATA/NVMe drives. This profile supports a maximum of 8 NVMe drives.              |
| JBOD        | 23         | <b>PD 64</b>       | This profile supports up to 240 SAS/SATA drives. This profile does not support NVMe drives.                              |

3. Highlight **Set Profile** and press **Enter**.
4. Highlight **OK** and press **Enter** to switch to your selected profile.
5. Reboot the system for the changes to take effect.

## Downgrading the Firmware When Profiles Are Selected

If you have selected a particular profile from the **Profile Management** dialog and are trying to downgrade to a previous firmware version, you may not be able to downgrade because the profile selected by you may not be available in the



previous firmware version. In these cases, you must change the profile in your current version of the firmware and then downgrade to a previous version.

For example, if you are using MegaRAID version 7.3 and you have selected PD240 (Profile ID 12) as the profile (PD240 supports a maximum of 240 physical and virtual drives; it does not support NVMe drives) and try to downgrade to MegaRAID 7.2 or MegaRAID 7.1, the downgrade fails because the MegaRAID version 7.2 does not support the PD240 profile. In this case, you must change the profile ID to 10 (PD 64) and then downgrade.


**Table 30: Profiles and Drive Support**

| Personality | Profile ID | Profile Name       |  |
|-------------|------------|--------------------|--|
| RAID        | 10         | <b>PD 64</b>       | Optimized for 64 or fewer SAS/SATA drives.<br>No NVMe drives supported.<br>Maximum of 64 virtual drives.                           |
| RAID        | 11         | <b>PCIe4</b>       | Optimized for 4 or fewer NVMe drives.<br>No SAS/SATA drives supported.<br>Maximum of 64 virtual drives.                            |
| RAID        | 12         | <b>PD240</b>       | Optimized for 240 or fewer SAS/SATA drives.<br>No NVMe drives supported.<br>Maximum 240 Virtual Drives.                            |
| RAID        | 13         | <b>PD64-PCIe4</b>  | Flexibility for 64 total SAS/SATA/NVME drives.<br>Maximum of 4 NVMe drives.<br>Maximum 64 Virtual Drives.                          |
| JBOD        | 20         | <b>PD 240</b>      | Optimized for 240 or fewer SAS/SATA drives.<br>No NVMe drives supported.<br>Maximum 240 WT Virtual Drives. RAID (0, 1, 10 only).   |
| JBOD        | 21         | <b>PD 64-PCIe8</b> | Flexibility for 64 total SAS/SATA/NVME drives.<br>Maximum of 8 NVMe drives.<br>Maximum 64 WT Virtual Drives. RAID (0, 1, 10 only). |
| JBOD        | 23         | <b>PD 64</b>       | Optimized for 240 or fewer SAS/SATA drives.<br>No NVMe drives supported.<br>Maximum of 240 WB Virtual Drives.                      |

## Setting Cache and Memory Properties

The following dialog appears when you select **Cache and Memory** from the **Advanced Controller Properties** dialog.

Figure 52: Cache and Memory Dialog

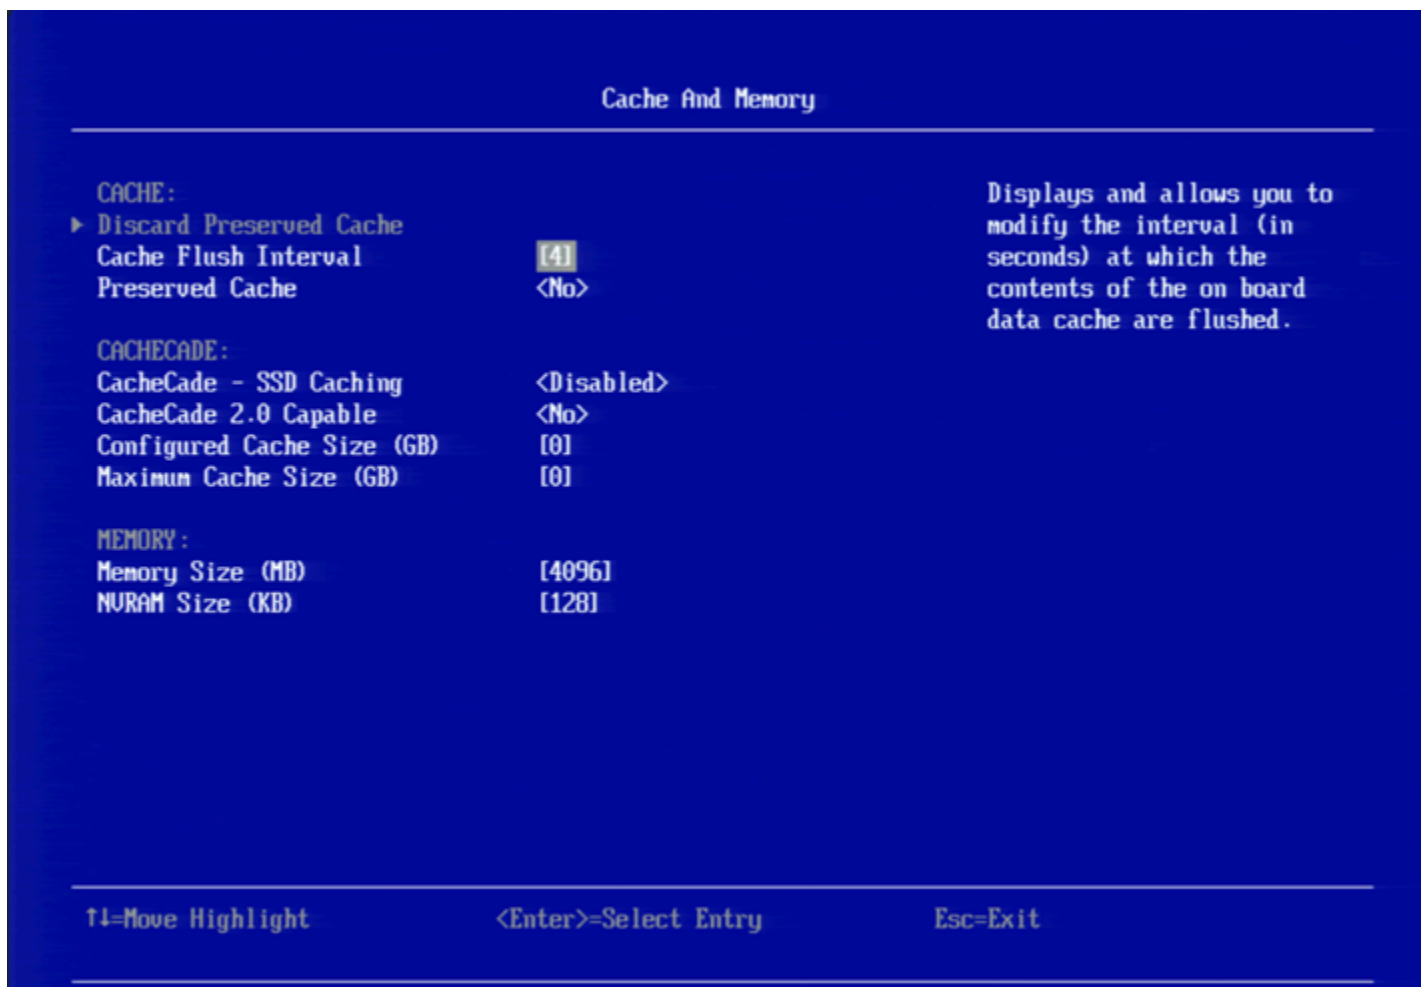

Follow these steps to set cache and memory properties:

1. To discard the preserved cache for the controller, highlight **Discard Preserved Cache** and press **Enter**.

**NOTE**

If any foreign configurations exist, import them before discarding the preserved cache. Otherwise, you might lose data that belongs with the foreign configuration.

2. To change the interval, in seconds, at which the contents of the onboard data cache are flushed, highlight **Cache Flush Interval** and press **Enter**. Specify a numeric value and press **Enter**.
3. If you want the controller to preserve cache because of missing or offline virtual drives (the cache is preserved until the virtual drive is imported or the cache is discarded), highlight **Preserved Cache**, and press **Enter**. Select either **Yes** or **No** and press **Enter**.
4. Highlight **Apply Changes** and press **Enter**.  
The new settings are saved in the controller properties.

## Running a Patrol Read

The following dialog appears when you select **Patrol Read** from the **Advanced Controller Properties** dialog.

**Figure 53: Patrol Read Dialog**

A patrol read operation scans and resolves potential problems on configured physical drives.

You can set the patrol read properties and start the patrol read operation, or you can start the patrol read without changing the properties:

Follow these steps to set patrol read properties.

#### NOTE

You can only view the properties and options supported by your controller.

- To select a mode for the patrol read operation, highlight **Mode** and press **Enter**. Select any of the following modes and press **Enter**.
  - Auto**: Patrol read runs continuously on the controller based on a schedule. You do not need to start it manually.
  - Manual**: Patrol read can be started or stopped manually.
  - Disabled**: Patrol read does not run.
- To specify a rate for the percentage of system resources dedicated to perform a patrol read operation on configured drives, highlight **Rate**, specify a rate as a numeric value and press **Enter**.  
The maximum numeric value that you can enter as the rate is 100.
- To select a patrol read setting for unconfigured space, highlight **Setting for Unconfigured Space**, and press **Enter**. Select either **Enabled** or **Disabled** and press **Enter**.
- Highlight **Apply Changes** and press **Enter**.  
The new settings are saved in the controller properties.


To start a patrol read without changing the patrol read properties, follow these steps:

1. Highlight **Start** in the **Patrol Read** dialog and press **Enter**.
2. A message box appears stating that the operation has been successful. Click **OK** to return to the **Patrol Read** dialog. **Suspend** and **Stop** are now active.

## Changing Power Save Settings

The following dialog appears when you select **Power Save Settings** from the **Advanced Controller Properties** dialog.

**Figure 54: Power Save Settings Dialog**

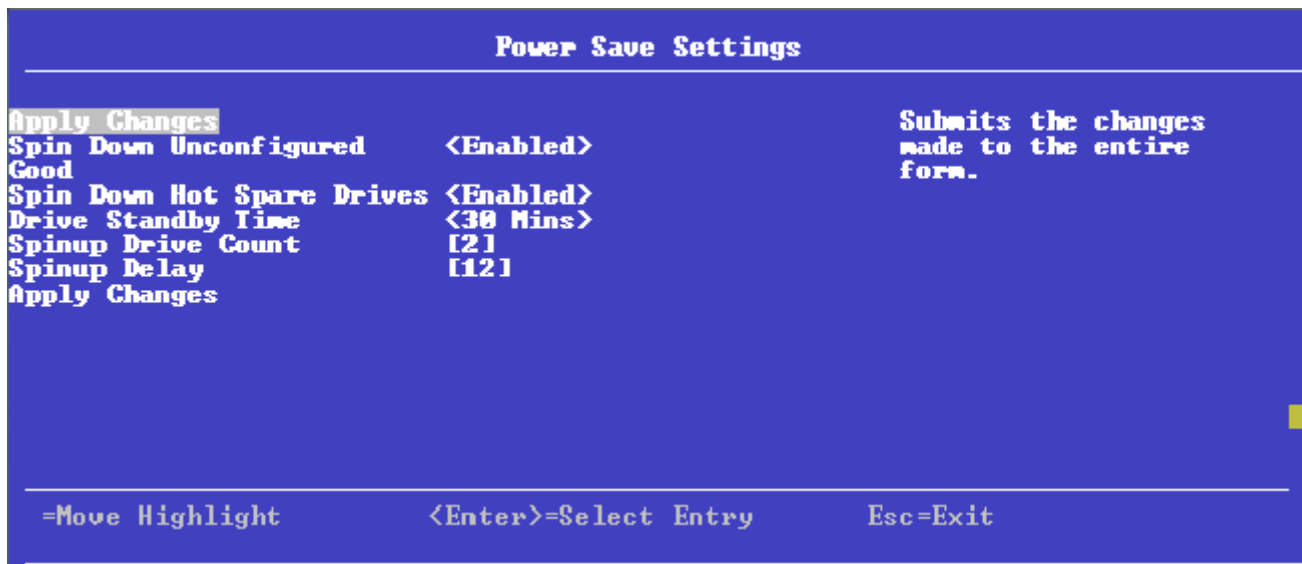

The preceding dialog lets you choose if you want unconfigured drives, hot spares, and configured drives to enter the power-save mode. When the unconfigured drives, hot spares, and configured drives are in power-save mode, they can be spun down.

Follow these steps to change the power-save settings:

### NOTE

You can only view the properties and options supported by your controller.

Drives enter power save mode only during the non-preboot environment.

1. To enable or disable spinning down of unconfigured good drives, highlight **Spin Down Unconfigured Good** and press **Enter**. Select **Enable** or **Disable** and press **Enter**.
2. To enable or disable spinning down of hot spares, highlight **Spin Down Hot Spare Drives** and press **Enter**. Select **Enable** or **Disable** and press **Enter**.
3. To specify a drive's idle time, after which the drive goes into the power save mode, highlight **Drive Standby Time** and press **Enter**. Specify the time duration and press **Enter**.

The drive standby time can be 30 minutes, 1 hour, 1.5 hours, or 2 hours through 24 hours.

4. To select the desired power-save mode, highlight **Power Save Mode** and press **Enter**. Select a mode (**None**, **Auto**, **Max** and **Max without Cache**) and press **Enter**.
5. To specify the maximum number of drives that spin up simultaneously, highlight **Spinup Drive Count** and press **Enter**. Specify a numeric value and press **Enter**.
6. To control the interval (in seconds) between spin up of drives connected to the controller, highlight **Spinup Delay** and press **Enter**. Specify the time in seconds and press **Enter**.  
The delay prevents a drain on the system's power supply that would occur if all drives spun up at the same time.
7. If you do not want to schedule the drive active time, highlight **Do Not Schedule Drive Active Time** and press **Enter**.
8. To specify the Quality of Service window start time, highlight **Qos Window Start Time** and press **Enter**. Specify a start time and press **Enter**.
9. To specify the Quality of Service window end time, highlight **Qos Window End Time** and press **Enter**. Specify an end time and press **Enter**.
10. Highlight **Apply Changes** and press **Enter**.

The new settings are saved in the controller properties.

## Setting Emergency Spare Properties

The following dialog appears when you select **Spare** from the **Advanced Controller Properties** dialog.

Figure 55: Spare Dialog



When a drive within a redundant virtual drive fails or is removed, the MegaRAID firmware automatically rebuilds the redundancy of the virtual drive by providing an emergency spare drive, even if no commissionable dedicated drive or global hot spare drive is present.


Follow these steps to set emergency spare properties:

- To specify whether it is acceptable to commission otherwise incompatible global hot spare drives, unconfigured good drives or both as emergency hot spare drives, highlight **Emergency Spare** and press **Enter**. Select any of the following modes and press **Enter**.
  - **Global Hotspare**
  - **Unconfigured Good**
  - **Unconfigured Good and Global Hotspare**
  - **None**
- To specify whether it is acceptable to commission emergency hot spare drives for PFA events, highlight **Emergency for SMARTer** and press **Enter**. Select an option (**Enabled** or **Disabled**) and press **Enter**.
- To enable or disable the ability to have drive slots in the system backplane or in a storage enclosure dedicated as hot spare slots, highlight **Persistent Hot Spare** and press **Enter**. Select either **Enabled** or **Disabled** and press **Enter**. If enabled, replacement of a hot spare drive in the same slot automatically configures the drive as a hot spare.
- To enable or disable the option to copy data back from a hot spare drive to a physical drive, highlight **Replace Drive** and press **Enter**. Select either **Enabled** or **Disabled** and press **Enter**.
- To enable or disable the option to start a Drive Replace operation, if a Self-Monitoring Analysis and Report Technology (SMART) error is detected on a physical drive, highlight **Replace Drive on SMART Error** and press **Enter**. Select either **Enabled** or **Disabled** and press **Enter**.
- Highlight **Apply Changes** and press **Enter**.  
The new settings are saved in the controller properties.

## Changing Task Rates

The following dialog appears when you select **Task Rates** from the **Advanced Controller Properties** dialog.

Figure 56: Task Rates Dialog

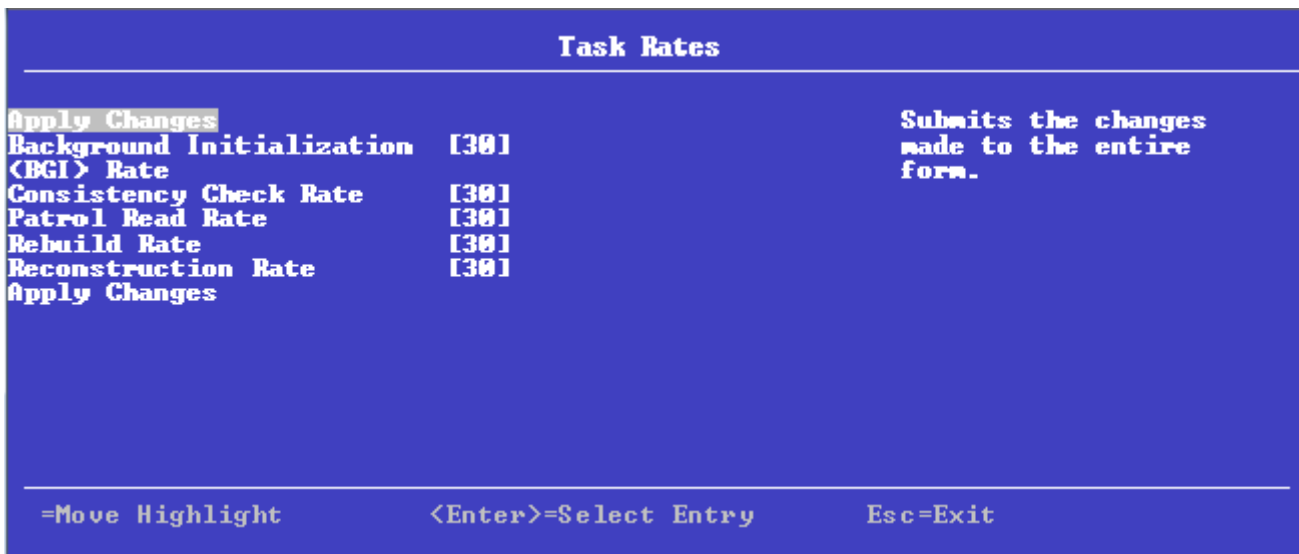

You can change the Rebuild rate and other task rates for a controller in the preceding dialog.

Follow these steps to change the task rates.


**NOTE**

You can only view the properties and options supported by your controller.

1. To change the percentage of system resources dedicated to performing a BGI on a redundant virtual drive, highlight **Background Initialization <BGI> Rate** and press **Enter**. Specify a number from 0 to 100 and press **Enter**.  
The BGI rate is the percentage of the compute cycles dedicated to running a background initialization of drives on this controller. You can configure the BGI rate between 0 percent and 100 percent. At 0 percent, the initialization operation runs only if the firmware is not doing anything else. At 100 percent, the initialization operation has a higher priority than I/O requests from the operating system. For best performance, use an initialization rate of approximately 30 percent.
2. To specify a rate for the percentage of system resources dedicated to performing a consistency check operation on a redundant virtual drive, highlight **Consistency Check Rate**, and press **Enter**. Specify a number from 0 to 100 and press **Enter**.  
The consistency check rate is the percentage of the compute cycles dedicated to running a consistency check on drives on this controller. You can configure the consistency check rate between 0 percent and 100 percent. At 0 percent, the consistency check operation runs only if the firmware is not doing anything else. At 100 percent, the consistency check operation has a higher priority than I/O requests from the operating system. For best performance, use a consistency check rate of approximately 30 percent.
3. To specify a rate for the percentage of system resources dedicated to performing a patrol read operation on configured physical drives, highlight **Patrol Read Rate** and press **Enter**. Specify a number from 0 to 100 and press **Enter**.  
The patrol read rate is the percentage of the compute cycles dedicated to running a patrol read on drives on this controller. You can configure the patrol read rate between 0 percent and 100 percent. At 0 percent, the patrol read runs only if the firmware is not doing anything else. At 100 percent, the patrol read has a higher priority than I/O requests from the operating system. For best performance, use a patrol read rate of approximately 30 percent.
4. To specify a rate for the percentage of system resources dedicated to rebuilding data on a new drive after a storage configuration drive has failed, highlight **Rebuild Rate** and press **Enter**. Specify a number from 0 to 100 and press **Enter**.  
The rebuild rate is the percentage of the compute cycles dedicated to rebuilding failed drives in virtual drives on this controller. You can configure the rebuild rate between 0 percent and 100 percent. At 0 percent, the Rebuild operation runs only if the firmware is not doing anything else. At 100 percent, the Rebuild operation has a higher priority than I/O requests from the operating system. For best performance, use a rebuild rate of approximately 30 percent.
5. To specify a rate for the percentage of system resources dedicated to performing a RAID Level Migration (RLM) or an Online Capacity Expansion (OCE) on a virtual drive, highlight **Reconstruction Rate** and press **Enter**. Specify a number from 0 to 100 and press **Enter**.  
The reconstruction rate is the percentage of the compute cycles dedicated to reconstructing data on drives on this controller. You can configure the reconstruction rate between 0 percent and 100 percent. At 0 percent, the reconstruction operation runs only if the firmware is not doing anything else. At 100 percent, the reconstruction operation has a higher priority than I/O requests from the operating system. For best performance, use a reconstruction rate of approximately 30 percent.
6. Highlight **Apply Changes** and press **Enter**.  
The new settings are saved in the controller properties.

## Upgrading the Firmware

The following dialog appears when you select **Update Firmware** from the **Dashboard View**. For a list of limitations, see [Online Firmware Upgrade and Downgrade](#).

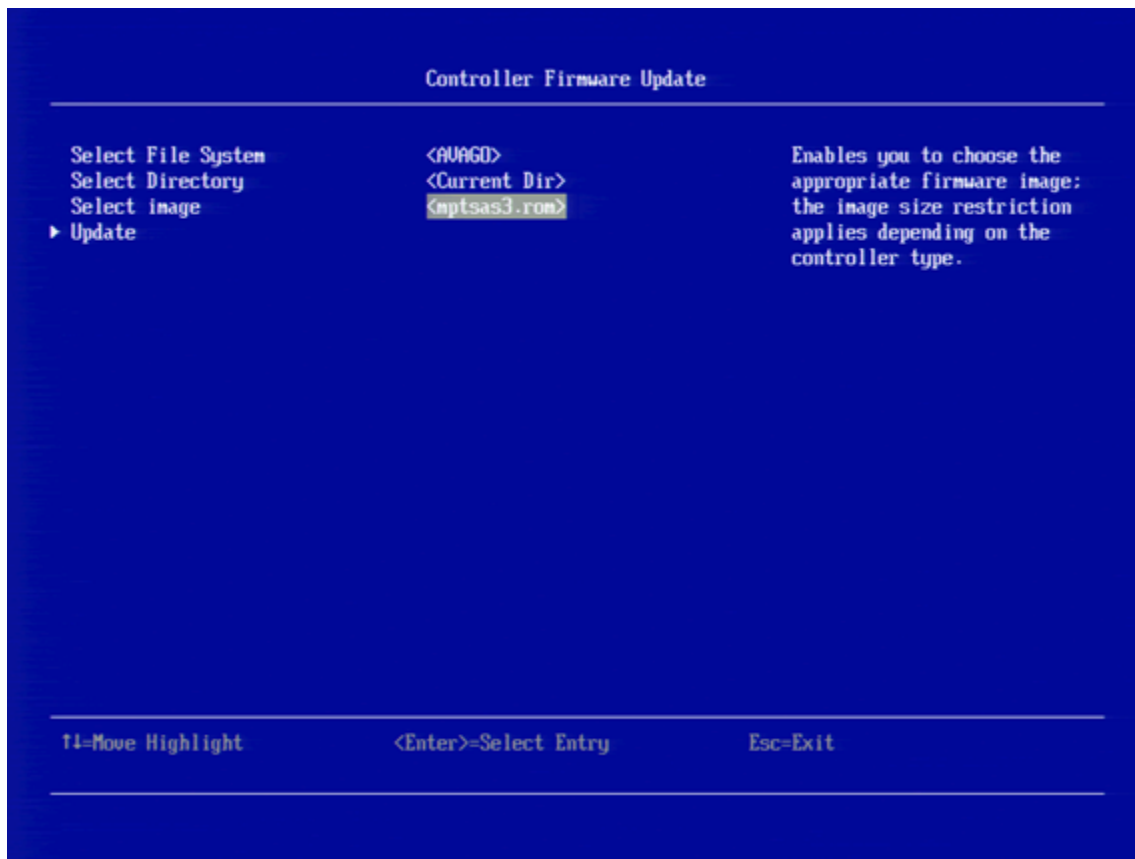
**Figure 57: Controller Firmware Update Dialog**

Follow these steps to upgrade the firmware:

1. To specify the file system where the `.rom` update file resides, highlight **Select File System** and press **Enter**. Select the file system and press **Enter**.
2. To specify the directory where the `.rom` file resides, highlight **Select Directory** and press **Enter**. Browse to the required the directory and press **Enter**.  
The current directory is normally highlighted. You can browse to only one level higher or one level lower.
3. To specify the `.rom` file, highlight **Select Image** and press **Enter**. Select the `.rom` file and press **Enter**.
4. Highlight **Update** and press **Enter**.  
The following **Warning** dialog appears.



Figure 58: Warning Dialog

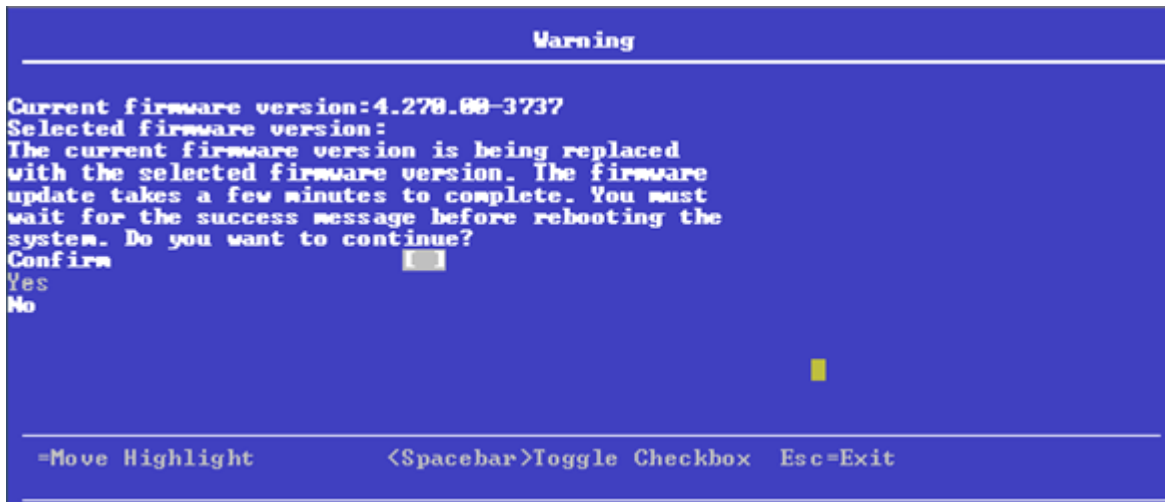

5. Highlight the **Confirm** check box and press the spacebar to select the check box.


6. Click **Yes** to continue with the firmware update.

After the controller is successfully updated with the new firmware code, a message box appears stating the same. Highlight **OK** and click **Enter** in the message box to return to the **Controller Management** dialog.

## Managing Virtual Drives


When you select **Virtual Drive Management** on the **Main Menu**, the **Virtual Drive Management** dialog appears, as shown in the following figure.

Figure 59: Virtual Drive Management Dialog

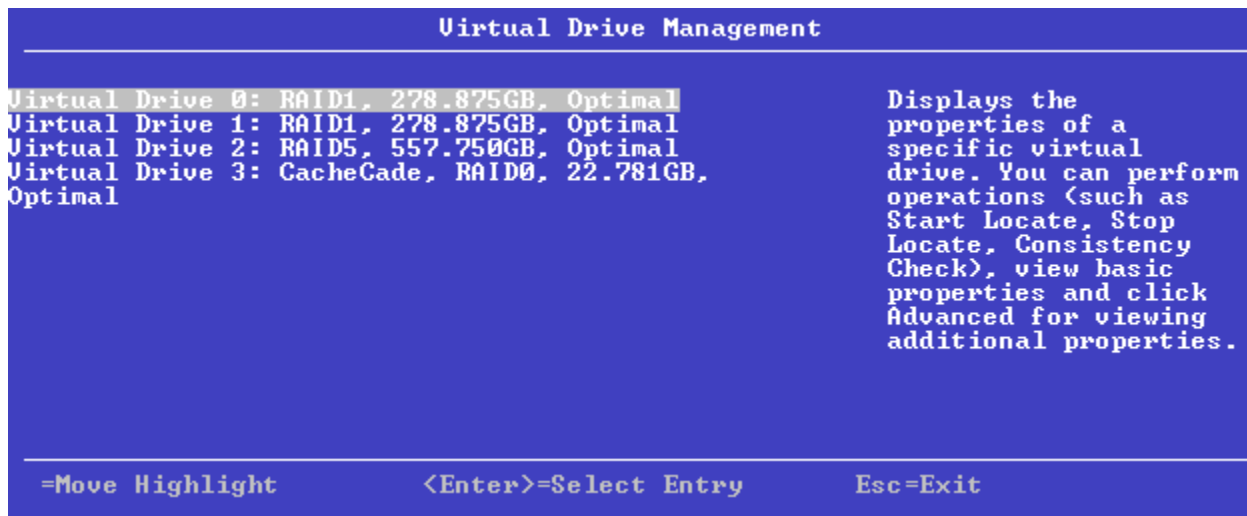

The menu lists the virtual drives that currently exist on the controller. Highlight the virtual drive that you want to manage and press **Enter**. The following dialog appears.

Figure 60: Virtual Drive Management Dialog

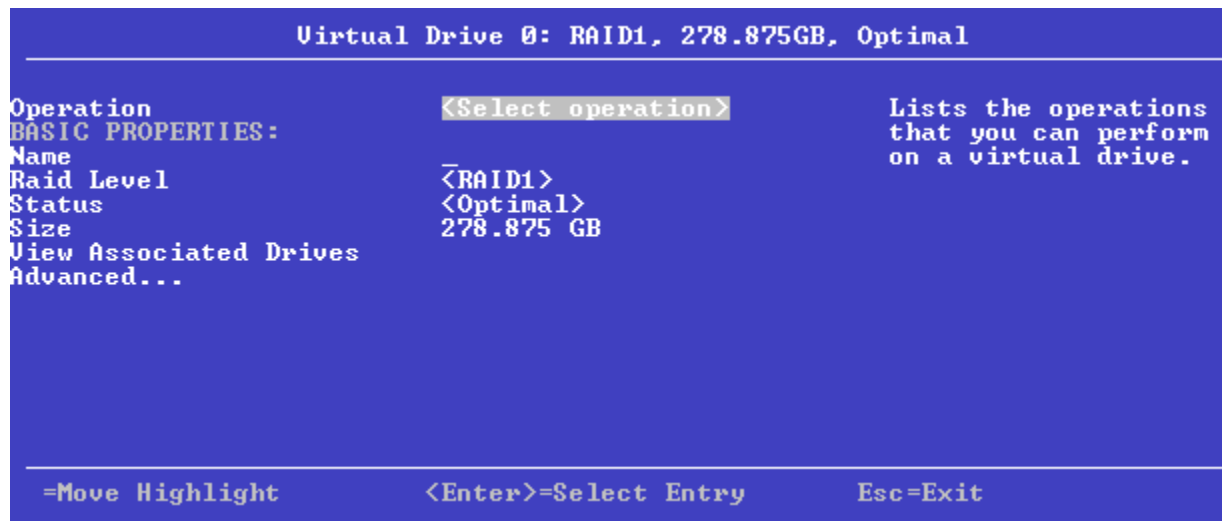

This dialog lists the following basic virtual drive properties.

Table 31: Basic Virtual Drive Properties

| Property          | Description  |
|-------------------|--|
| <b>Name</b>       | The name that is assigned to the virtual drive. To assign a name or to change the name, highlight the field, press <b>Enter</b> , and type the new name in the popup window.   |
| <b>RAID Level</b> | The RAID level of the virtual drive.   |
| <b>Status</b>     | The current status of the virtual drive.   |
| <b>Size</b>       | The capacity of the virtual drive, in <b>MB</b> or <b>GB</b> .<br><br><b>Note:</b> Virtual drive size of floating data types up to three decimal places is supported. Some of the screens in this chapter may not show this feature. |

For information on how to perform virtual drive operations, see [Selecting Virtual Drive Operations](#).


For information on how to view the physical drives associated with the virtual drive, see [Viewing Associated Drives](#).

For information on how to view and change advanced virtual drive settings, see [Viewing and Managing Virtual Drive Properties and Options](#).

## Selecting Virtual Drive Operations

The following popup menu appears when you highlight **Operation** in the **Virtual Drive** window and press **Enter**.

Figure 61: Virtual Drive Operations Popup Menu

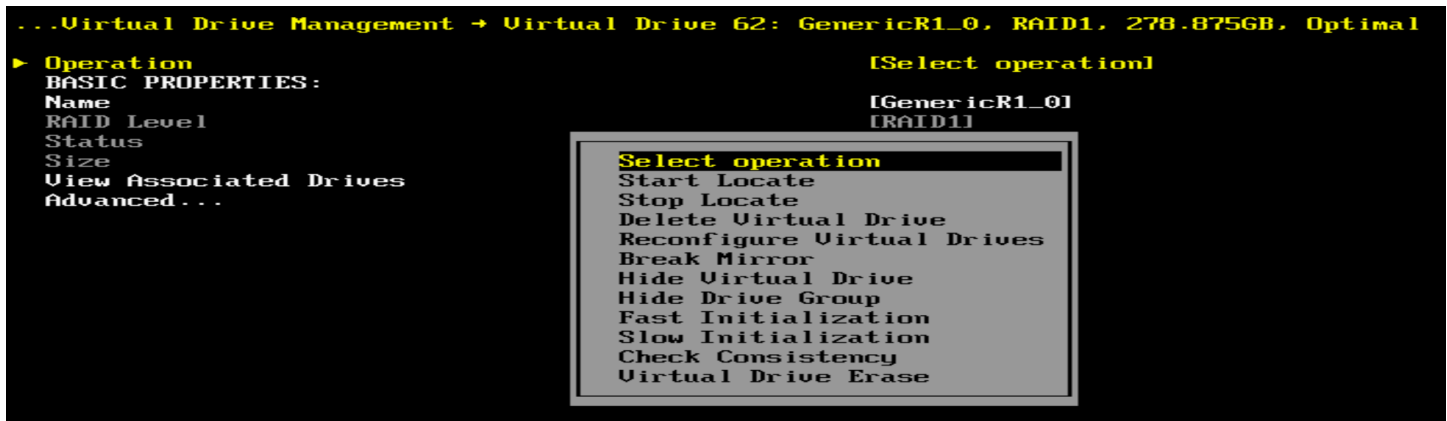

Other options, such as **Secure Virtual Drive**, **Check Consistency**, and **Expand Virtual Drive**, might also appear, depending on the current configuration of the system.

Highlight the operation that you want to select and press **Enter**. Then highlight the word **Go** that appears beneath **Operation** and press **Enter** to start the operation for the currently selected virtual drive.

The following sections explain how to run the operations.

### Locating Physical Drives in a Virtual Drive

To locate the physical drives in a virtual drive by flashing their LEDs, perform these steps:

1. Highlight **Start Locate** on the popup menu and press **Enter**.
2. Highlight the word **Go** that appears beneath **Operation** and press **Enter**.  
A success message appears.
3. Highlight **OK** and press **Enter** to return to the **Virtual Drive** dialog.  
The LEDs on the physical drives start flashing if the drive firmware supports this feature.
4. Observe the location of the drives with the flashing LEDs.
5. To stop the LEDs from flashing, access the popup menu again, highlight **Stop Locate**, and press **Enter**.
6. Highlight the word **Go** that appears beneath **Operation** and press **Enter**.  
A success message appears.
7. Highlight **OK** and press **Enter** to return to the **Virtual Drive** dialog.  
The LEDs on the physical drives stop flashing.

### Deleting a Virtual Drive



#### CAUTION

All data on a virtual drive is lost when you delete it. Back up data you want to keep before you delete a virtual drive.

The delete virtual drive action is performed on the currently selected virtual drive. To select a different virtual drive for deletion, press **Esc** to return to the **Virtual Drive Selection** dialog and select the virtual drive.

To delete a virtual drive, perform these steps:

1. Highlight **Delete Virtual Drive** on the popup menu and press **Enter**.
2. Highlight the word **Go** that appears beneath **Operation** and press **Enter**.  
The **Delete Virtual Drive** warning message appears.
3. Highlight **Confirm** and press the spacebar to confirm the deletion, then highlight **Yes** and press **Enter**.  
The virtual drive is deleted.

#### **NOTE**

The group initialization process is time-consuming when it is performed simultaneously on multiple drives when I/O transactions are in progress. You cannot close the **Group Initialization** dialog and perform any other operation on the LSA application until this process completes.

## **Hiding a Virtual Drive**

To hide a virtual drive, perform these steps:

1. Highlight **Hide Virtual Drive** on the popup menu and press **Enter**.
2. Highlight the word **Go** that appears beneath **Operation** and press **Enter**.  
The **Hide Virtual Drive** warning message appears.
3. Highlight **Confirm** and press the spacebar to confirm the deletion, and then highlight **Yes** and press **Enter**.  
The virtual drive is hidden.

## **Unhiding a Virtual Drive**

To unhide a virtual drive, perform these steps:

1. Highlight **Un-Hide Virtual Drive** on the popup menu and press **Enter**.
2. Highlight the word **Go** that appears beneath **Operation** and press **Enter**.  
The **Un-Hide Virtual Drive** warning message appears.
3. Highlight **Confirm** and press the spacebar to confirm the deletion, and then highlight **Yes** and press **Enter**.  
The virtual drive is unhidden.

## **Hiding a Drive Group**

To hide a drive group to which the virtual drive is associated, perform these steps:

1. Highlight **Hide Drive Group** on the popup menu and press **Enter**.
2. Highlight the word **Go** that appears beneath **Operation** and press **Enter**.  
The **Hide Drive Group** warning message appears.
3. Highlight **Confirm** and press the spacebar to confirm the deletion, and then highlight **Yes** and press **Enter**.  
The drive group is hidden.

## Unhiding a Drive Group

To unhide a drive group to which the virtual drive is associated, perform these steps:

1. Highlight **Un-Hide Drive Group** on the popup menu and press **Enter**.
2. Highlight the word **Go** that appears beneath **Operation** and press **Enter**.

The **Un-Hide Drive Group** warning message appears.

3. Highlight **Confirm** and press the spacebar to confirm the deletion, and then highlight **Yes** and press **Enter**.

The drive group is unhidden.

## Reconfiguring a Virtual Drive


You can reconfigure a virtual drive by changing its RAID level, by adding physical drives to it or by doing both of these actions. When performing these changes, however, you must observe the maximum drive and minimum drive restrictions for the various RAID levels. See [Table 24, RAID Levels](#), for more information.

To reconfigure a virtual drive, perform these steps:

1. Highlight **Reconfigure Virtual Drive** on the popup menu and press **Enter**.
2. Highlight the word **Go** that appears beneath **Operation** and press **Enter**.

The following dialog appears.

**Figure 62: Reconfigure Virtual Drives Dialog**

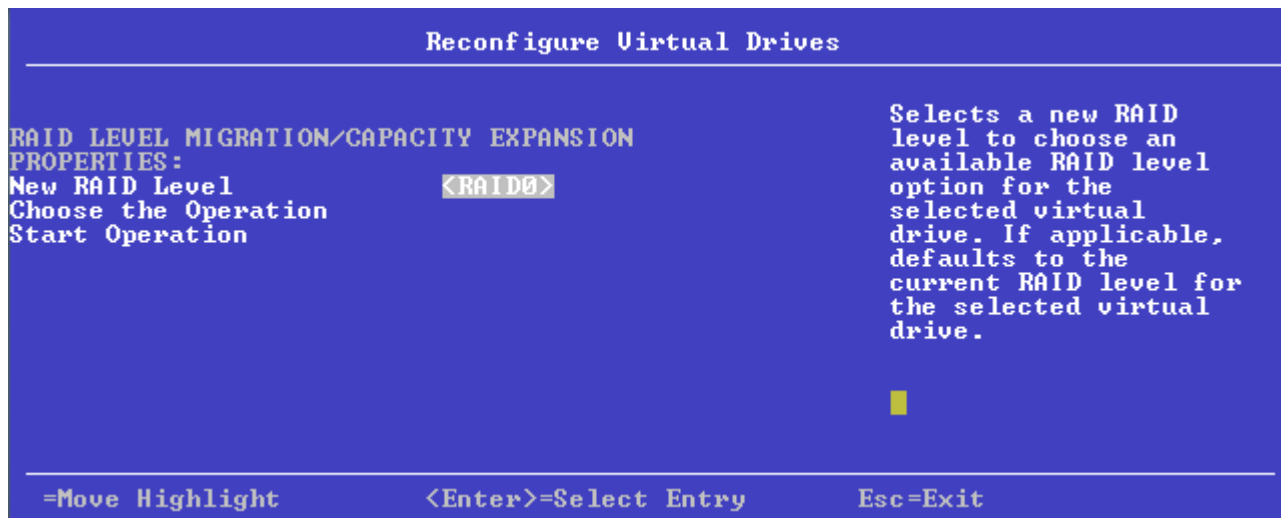

3. To change the RAID level of the selected virtual drive, highlight **New RAID Level** and press **Enter**.
4. Select a RAID level from the popup menu.
5. Depending on the source and the target RAID levels, you can either add drives or remove drives. Highlight **Choose the Operation** and press **Enter**.
6. Choose either **Add Drives** or **Remove Drives**.

### Adding Drives to a Configuration

Perform the following steps to add unconfigured drives to a configuration while reconfiguring a virtual drive.

1. If you select the **Add Drives** option and press **Enter**.
2. (Optional) To change the default **Select Media Type** value, highlight this field, press **Enter**, and select an option from the popup menu.

The choices are **HDD**, **SSD**, or **Both**. However, **Both** is defaulted as a choice. Combining HDDs and SSDs in a virtual drive is not supported.

3. (Optional) To change the default **Select Interface Type** value, highlight this field, press **Enter**, and select an option from the popup menu.

The choices are **SAS**, **SATA**, **PCIe**, and **All**. Depending on the configuration of your system, combining SAS and SATA drives in a virtual drive might not be supported.

#### NOTE

PCIe does not appear as a valid choice if the controller does not support PCIe.

4. To select unconfigured drives to add to the configuration, highlight the drives and press the spacebar. A small red arrow at the bottom of the dialog indicates you can scroll down to view more drives.

#### NOTE

The red arrow appears when there is too much information to display in one dialog. The amount of information that can be displayed in one dialog depends on the capabilities of the HII browser.

Alternatively, use the **Check All** and **Uncheck All** options at the bottom of the list of drives to select or deselect all available drives.

#### NOTE

Be sure to select the number of drives required by the specified RAID level; otherwise, the HII Configuration Utility displays an error message when you try to create the virtual drive. For example, RAID 1 virtual drives use exactly two drives and RAID 5 virtual drives use three or more drives. See [Table 24, RAID Levels](#) for more information.

5. When you have selected the unconfigured drives to add, highlight **Apply Changes** and press **Enter**.

#### NOTE

If you have selected drives of varying sizes, the HII Configuration Utility displays a message warning you that the remaining free capacity on the larger drives will be unusable.

The HII Configuration Utility returns you to the **Reconfigure Virtual Drives** dialog.

### Removing Drives from a Configuration

Perform the following steps to remove drives from a configuration while reconfiguring a virtual drive.

**NOTE**

Usable Capacity Reduction is not possible without a RAID level migration.

1. If you select the **Remove Drives** option and press **Enter**, the following dialog appears.

**Figure 63: Select Drives – Remove Drives Dialog**

```

... Drive 62: GenericR1_0, RAID1, 278.875GB, Optimal → Reconfigure Virtual Drives → Select Drives
To migrate from current RAID Level to New RAID Level, you can either Add the drives or Remove the
drives.
▶ Choose the operation you want to perform [Remove Drives]

SELECT THE DRIVE TO REMOVE:
Drive C1 :01:14: HDD, SAS, 465.250GB, Online, [ ]
Span#0, (512B)
Drive C1 :01:11: HDD, SAS, 465.250GB, Online, [ ]
Span#0, (512B)
Check All
Uncheck All
Apply Changes

```

2. To select the drives to remove from the configuration, highlight the drives and press the spacebar. A small red arrow at the bottom of the dialog indicates you can scroll down to view more drives.

**NOTE**

The red arrow appears when there is too much information to display in one dialog. The amount of information that can be displayed in one dialog depends on the capabilities of the HII browser.

Alternatively, use the **Check All** and **Uncheck All** options at the bottom of the list of drives to select or deselect all available drives.

3. When you have selected the drives to remove, highlight **Apply Changes** and press **Enter**.

The HII Configuration Utility returns you to the **Reconfigure Virtual Drives** dialog.

## Initializing a Virtual Drive

To initialize a virtual drive, perform these steps:

**ATTENTION**

All data on the virtual drive is lost when you initialize it. Before you start this operation, back up any data that you want to keep.

1. Highlight **Fast Initialization** or **Slow Initialization** on the popup menu and press **Enter**.

A fast initialization overwrites the first and last 8 MB of the virtual drive, clearing any boot records or partition information. A slow (full) initialization overwrites all blocks and destroys all data on the virtual drive.

2. Highlight the word **Go** that appears beneath **Operation** and press **Enter**.

The **Initialize Virtual Drive Warning** dialog appears.

3. Highlight **Confirm** and press the spacebar to confirm the operation, then highlight **Yes** and press **Enter**.

A progress indicator shows the percentage completion of the initialization process. This indicator refreshes automatically.

## Erasing a Virtual Drive

To erase data on a virtual drive, perform these steps:

**ATTENTION**

All data on the virtual drive is lost when you erase it. Before you start this operation, back up any data that you want to keep.

**NOTE**

After the data is erased, you have the option to keep the blank virtual drive, which you can use to store other data, or to delete the virtual drive completely.

1. Highlight **Virtual Drive Erase** on the popup menu and press **Enter**.

Two additional fields appear.

2. Highlight **Erase Mode** and press **Enter**.

3. Select **Simple**, **Normal**, or **Thorough** from the popup menu.

A Simple erase writes a pattern to the virtual drive in a single pass. The other erase modes make additional passes to erase the data more thoroughly.

4. (Optional) Highlight **Delete After Erase** and press the spacebar to select it.

5. Highlight **Go** and press **Enter**.

The **Virtual Drive Erase** warning message appears.

6. Highlight **Confirm** and press the spacebar to confirm the operation, then highlight **Yes** and press **Enter**.

A progress indicator shows the percentage completion of the operation. This indicator refreshes automatically. After the completion of the operation, the virtual drive is erased.

## Securing a Virtual Drive

A Secure Virtual Drive operation enables security on a virtual drive. You can only disable the security by deleting the virtual drive. Perform these steps to secure a virtual drive.

1. Highlight **Secure Virtual Drive** on the popup menu and press **Enter**.

The **Secure Virtual Drive** warning appears.

2. Highlight **Confirm** and press the spacebar to confirm the operation, then highlight **Yes** and press **Enter**.

The virtual drive is secured.

## Running a Consistency Check

Follow these steps to run a consistency check on the currently selected redundant virtual drive.

1. Highlight **Check Consistency** on the popup menu and press **Enter**.

**NOTE**

The **Check Consistency** option does not appear on the menu if the currently selected virtual drive is either RAID 0 or RAID 00 (nonredundant).

2. Highlight **Go** and press **Enter**.

The **Consistency Check Success** dialog appears.

As the message indicates, the consistency check is now running.

3. Highlight **OK** and press **Enter**.

The Progress indicator in the dialog shows the percentage progress of the consistency check. To refresh the indicator, exit the dialog and re-enter it.

4. To stop or suspend the consistency check, highlight **Stop** or **Suspend** and press **Enter**.

5. To resume a suspended consistency check, highlight **Resume** and press **Enter**.

A progress indicator shows the percentage completion of the operation. This indicator refreshes automatically.



For more information about consistency checks, see [Scheduling a Consistency Check](#).

## Expanding a Virtual Drive

Expanding a virtual drive means increasing its capacity. Existing data on the virtual drive is not impacted by the expansion. Follow these steps to expand the currently selected virtual drive.

1. Select **Expand Virtual Drive** from the popup menu.

The **Expand Virtual Drive** dialog appears.

The dialog shows the current capacity of the selected virtual drive, the available capacity that can be added to it, and the capacity of the expanded virtual drive, if all available capacity is added.

2. To change the amount of available capacity, highlight the **Enter a Percentage of Available Capacity** field and use the minus key (–) on the keypad to reduce the percentage.

### NOTE

Some systems permit you to enter numeric values directly, without using the + and – keys.

3. When you have set the capacity to the desired level, highlight **OK** and press **Enter**.

The capacity of the virtual drive is expanded.

## Viewing Associated Drives

The **View Associated Drives** dialog appears when you select **View Associated Drives** at the bottom of the **Virtual Drive** window.

The dialog lists all the physical drives associated with the currently selected virtual drive. Follow these steps to view information about the associated drives.

1. To select a different virtual drive, highlight **Selected Virtual Drive**, press **Enter**, and select an entry from the popup menu.
2. Highlight one of the associated drives, and press the spacebar to select it.
3. Highlight **View Drive Properties** and press **Enter**.

The **View Drive Properties** window for the drive appears.

4. View the information on the **View Drive Properties** window.

For more information, see [Viewing Advanced Drive Properties](#).


## Viewing and Managing Virtual Drive Properties and Options

The following dialog appears when you select **Advanced** from the **Virtual Drive** dialog. (The second dialog shows the rest of the options that are visible when you scroll down.)

### NOTE

The properties and options that are shown in the dialog apply to the currently selected virtual drive. To manage properties for a different virtual drive, press **Esc** until you return to the **Virtual Drive Selection** menu, select the desired virtual drive, and navigate back to this dialog.

Figure 64: Advanced Virtual Drive Properties 1 Dialog

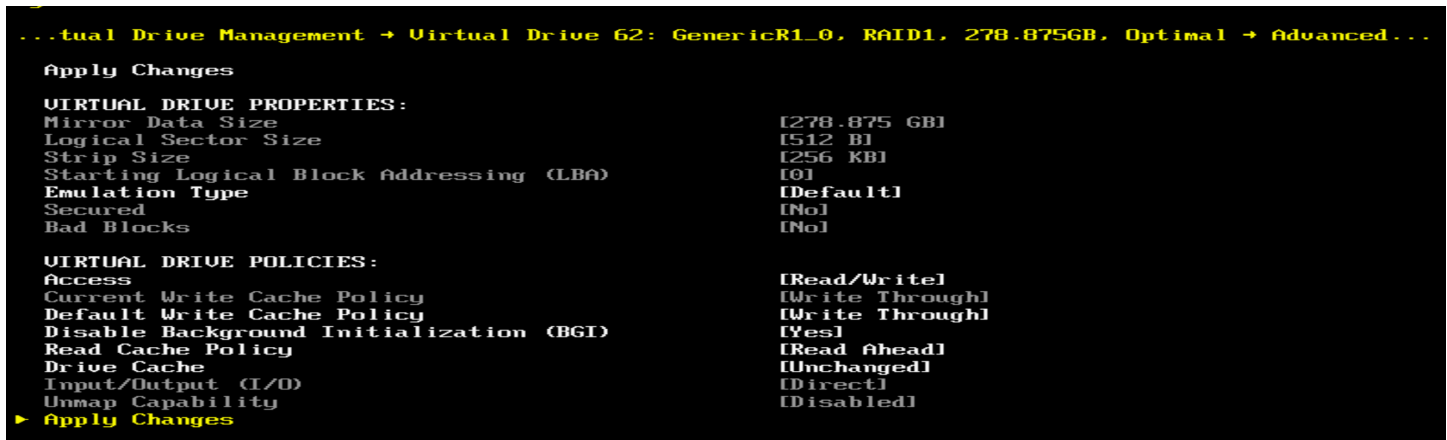

The following table describes the virtual drive properties listed in this dialog.

Table 32: Virtual Drive Properties

| Property                                       | Description  |
|--|--|
| <b>Logical Sector Size</b>                     | The logical sector size of this virtual drive. The possible options are <b>4 KB</b> and <b>512 B</b> . |
| <b>Segment Size</b>                            | The segment size used on this virtual drive.   |
| <b>Starting Logical Block Addressing (LBA)</b> | The address of the first location of a block of data stored on the virtual drive.                      |
| <b>Bad Blocks</b>                              | Indicates whether the virtual drive has bad blocks.  |

Following the virtual drive properties listed in the dialog are virtual drive policies that you can select and change. To change any policy, highlight the field, press **Enter**, and select a value from the popup menu. When you finish changing policy settings, highlight **Apply Changes** at the top or the bottom of the selections and press **Enter**.

The following table describes the virtual drive policies.

Table 33: Virtual Drive Policies

| Property                          | Description   |
|-----------------------------------|---|
| <b>Access</b>                     | The access policy for the virtual drive. The options are <b>Read/Write</b> , <b>Read Only</b> , and <b>Blocked</b> .  |
| <b>Current Write Cache Policy</b> | Displays the current write cache policy. The possible values are as follows: <ul style="list-style-type: none"> <li><b>Write-Through (WThru)</b><br/>The controller sends a data transfer completion signal to the host when the virtual drive has received all of the data and has completed the write transaction to the drive.</li> <li><b>Write-Back (WBack)</b><br/>The controller sends a data transfer completion signal to the host when the controller cache has received all of the data in a drive write transaction. Data is written to the virtual drive in accordance with policies set up by the controller. These policies include the amount of dirty and clean cache lines, the number of cache lines available, and the elapsed time from the last cache flush.</li> <li><b>Force Write Back.</b></li> </ul> |
| <b>Default Write Cache Policy</b> | Displays the default write cache policy of the virtual drive.   |


| Property                                       | Description   |
|--|---|
| <b>Disable Background Initialization (BGI)</b> | Specifies whether background initialization is enabled or disabled. When BGI is enabled, the firmware runs the initialization process in the background. When BGI is disabled, the initialization process does not start automatically and does not run in the background.  |
| <b>Read Cache Policy</b>                       | <p>Displays the read cache policy for the virtual drive. For any profile, if the drive is an SSD drive, the <b>No Read Ahead</b> and <b>Always Read Ahead</b> options are displayed. However, <b>No Read Ahead</b> is the <i>default</i> read policy. The possible options follow:</p> <ul style="list-style-type: none"> <li>• <b>Default</b><br/>A virtual drive property that indicates whether the default read policy is <b>Always Read Ahead</b> or <b>No Read Ahead</b>.</li> <li>• <b>Always Read Ahead</b> - Permits the controller to read sequentially ahead of the requested data and allows the controller to store the additional data in the cache memory. Here, the controller anticipates that the data is required frequently. Even though Always Read Ahead policy speeds up the reads for sequential data, but little improvement is seen when accessing the random data.</li> <li>• <b>No Read Ahead</b> - Disables the Always Read Ahead capability of the controller.</li> </ul> |
| <b>Drive Cache</b>                             | The disk cache policy for the virtual drive. The possible values are <b>Unchanged</b> , <b>Enable</b> , and <b>Disable</b> .  |
| <b>Input/Output (I/O)</b>                      | <p>The I/O policy for the virtual drive. The possible values are as follows:</p> <ul style="list-style-type: none"> <li>• <b>Direct</b>: Data reads are not buffered in the cache memory. Data is transferred to the cache and the host concurrently. If the same data block is read again, it comes from the cache memory. The I/O policy applies to reads on a specific virtual drive. It does not affect the read-ahead cache.</li> <li>• <b>Cached</b>: All reads are buffered in cache.</li> </ul>   |

## Managing Physical Drives

When you select **Drive Management** on the **Main Menu**, the **Drive Management Selection** dialog appears.

The menu lists all the physical drives that are connected to the controller. Highlight the drive you want to manage and press Enter. The following dialog appears.

Figure 65: Drive Management Dialog

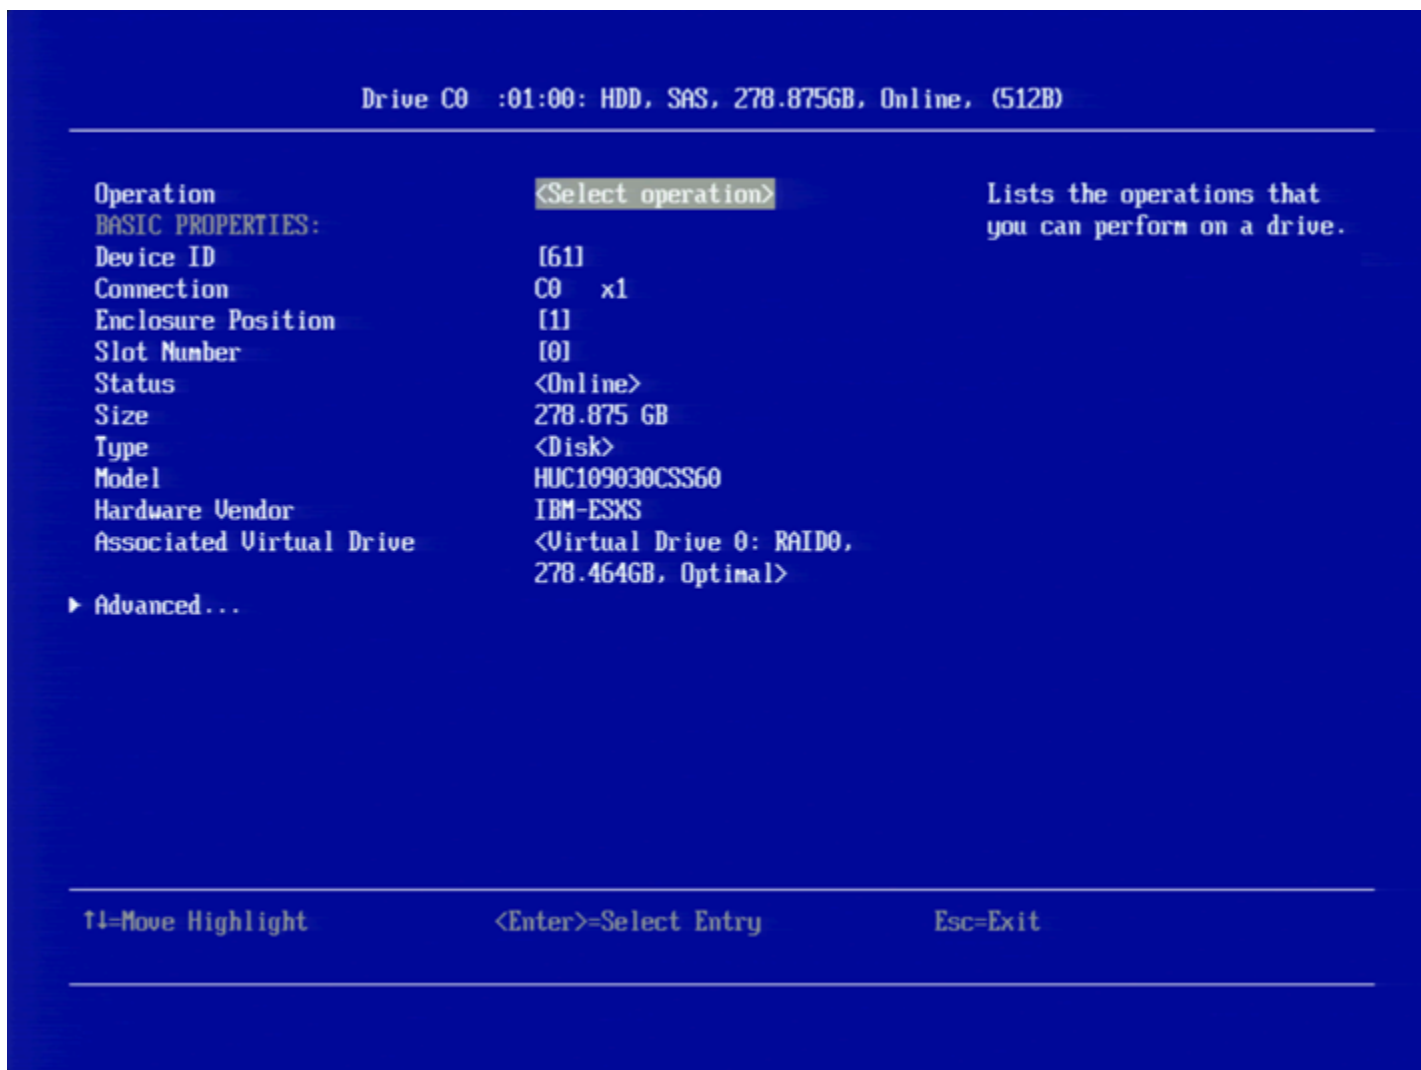

The preceding dialog lists the following basic drive properties for the selected drive.

Table 34: Basic Physical Drive Properties

| Property                               | Description   |
|--|---|
| <b>Device ID</b>                       | The device ID of the currently selected drive.  |
| <b>Connection</b>                      | The connection of the drive.  |
| <b>Enclosure Position/Backplane ID</b> | The position of the enclosure or the backplane.   |
| <b>Slot Number</b>                     | The slot number of the drive.   |
| <b>Status</b>                          | The status of the drive, such as <b>Online</b> , <b>Ready</b> , <b>Available</b> , or <b>Failed</b> .   |
| <b>Size</b>                            | The drive capacity, in GB. Drive size of floating data type up to three decimal places is supported. Some of the screens in this chapter may not show this feature. |
| <b>Type</b>                            | The device type of the drive, which is normally <b>Disk</b> .   |
| <b>Model</b>                           | The model number of the drive.  |

| Property                            | Description   |
|-------------------------------------|---|
| <b>Hardware Vendor</b>              | The hardware vendor of the drive.   |
| <b>Associated Virtual Drive</b>     | If this physical drive is currently used in a virtual drive, this field lists information about the virtual drive. Highlight this field and press Enter to view a popup window with additional information about the virtual drive.   |
| <b>View Associated Drive Groups</b> | If this physical drive is associated with drive groups, this field lists information about the drive groups. Highlight this field and press Enter to view a popup window with a list of associated drive groups. Highlight a drive from the list and press Enter to view additional information about the drive group, such as associated virtual drives, the capacity allocation, and the assigned dedicated hot spare drives, if any. |


For information on performing drive operations, see [Performing Drive Operations](#).

For information on viewing and changing drive settings and properties, see [Viewing Advanced Drive Properties](#).

## Performing Drive Operations

When you highlight the **Select operation** field and press **Enter**, a popup drive operations menu appears.

**Figure 66: Select Drive Operations Menu**

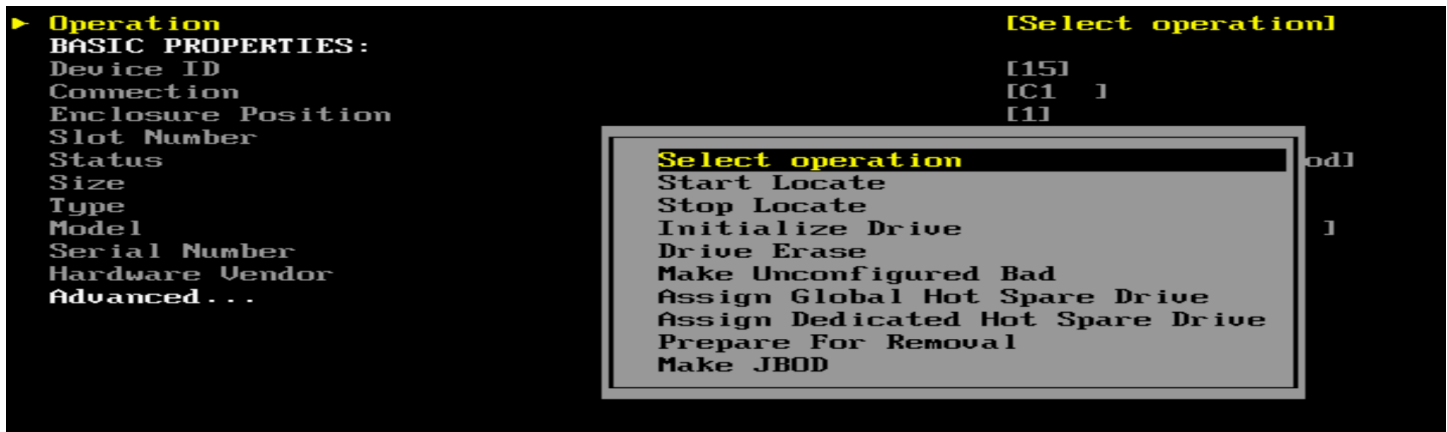

**Start Locate** and **Stop Locate** are the available options for any selected drive. The other menu options vary based on the status of the drive, which can be **Online**, **Offline**, **JBOD**, **Unconfigured Good**, **Unconfigured Bad**, **Global Hot Spare**, and **Dedicated Hot Spare**.

The following sections describe the available drive operations.

### NOTE

The drive operations run on the currently selected drive. To run an operation on a different drive, press **Esc** to return to the **Drive Selection** menu, highlight the drive that you want to select, press **Enter** to select it, and return to this dialog.

## Locating a Drive

Perform these steps to locate a physical drive by flashing its LED.

1. Open the popup drive operations menu, highlight **Start Locate**, and press **Enter**.
2. Highlight **Go**, which appears beneath **Operation**, and press **Enter**.

A success message appears.

3. Highlight **OK** on the success message and press **Enter**.  
The LED on the selected drive starts flashing, if the drive firmware supports this feature.
4. Observe the location of the drive with the flashing LED.
5. To stop the LED from flashing, highlight **Stop Locate** on the popup menu and press **Enter**.
6. Highlight **Go**, which appears beneath **Operation**, and press **Enter**.  
A success message appears.
7. Highlight **OK** on the success message and press **Enter**, to exit the message dialog.

## Making a Drive Unconfigured Bad, Unconfigured Good, or JBOD

When you force a drive offline, it enters the *Unconfigured Bad* state.

When you power off a controller and insert a new physical drive, if the inserted drive does not contain valid DDF metadata, the drive status is listed as either JBOD (Just a Bunch of Disks) or Unconfigured Good when you power on the system again. When the JBOD mode is enabled, the drive comes up as a JBOD drive; otherwise, it comes up as an Unconfigured Good drive.

A new drive in the JBOD drive state is exposed to the host operating system as a stand-alone drive. You cannot use the JBOD drives to create a RAID configuration because they do not have valid DDF records. You must first convert the drives into *Unconfigured Good*.

If a drive contains valid DDF metadata, its drive state is **Unconfigured Bad** or **Foreign**.

A drive must be in *Unconfigured Good* status before you can use it as a hot spare or use it as a member of a virtual drive. Follow these steps to change the status of an Unconfigured Bad, or an Unconfigured Good, or a JBOD drive.

1. Open the popup drive operations menu, highlight **Make Unconfigured Good**, **Make Unconfigured Bad**, or **Make JBOD**, and press **Enter**.
2. Highlight **Go**, which appears beneath **Operation**, and press **Enter**.

### ATTENTION

If you have selected the **Make Unconfigured Good** operation, and if the JBOD that you have selected has an operating system or a file system on it, a warning message appears indicating that the JBOD has an operating system or a file system and any data on it would be lost if you proceed with the conversion. If you want to proceed, highlight **Confirm** and press the spacebar, then highlight **Yes** and press **Enter**. Otherwise, highlight **No** and press **Enter** to return to the previous screen. To run this operation on a different drive, press **Esc** to return to the **Drive Selection** menu and select another drive.

A message appears indicating that the operation was successful.

3. Highlight **OK** on the success message and press **Enter**.

### NOTE

To refresh the status of the drive displayed in the dialog, exit back to the **Main Menu**, then re-enter the **Drive Management** dialog.

## Enabling Security on JBOD

If you have SED-enable JBOD that meets the prerequisites mentioned in [Managing Configurations](#), you can enable security on it. Follow these steps:

1. Open the popup drive operations menu, highlight **Enable Security on JBOD** and press **Enter**.
2. Highlight **Go**, which appears beneath **Operation**, and press **Enter**.  
A success message appears.

- Highlight **OK** and press **Enter**.

## Replacing a Drive


You might want to replace a drive that is a member of a redundant virtual drive that is connected to the controller if the drive shows signs of failing. Before you start this operation, be sure that an available Unconfigured Good replacement drive is available. The replacement drive must have at least as much capacity as the drive you are replacing.

Follow these steps to replace a drive.

- Open the popup drive operations menu, highlight **Replace Drive** and press **Enter**.
- Highlight **Go**, which appears beneath **Operation**, and press **Enter**.

The following dialog appears.

**Figure 67: Replace Drive Dialog**

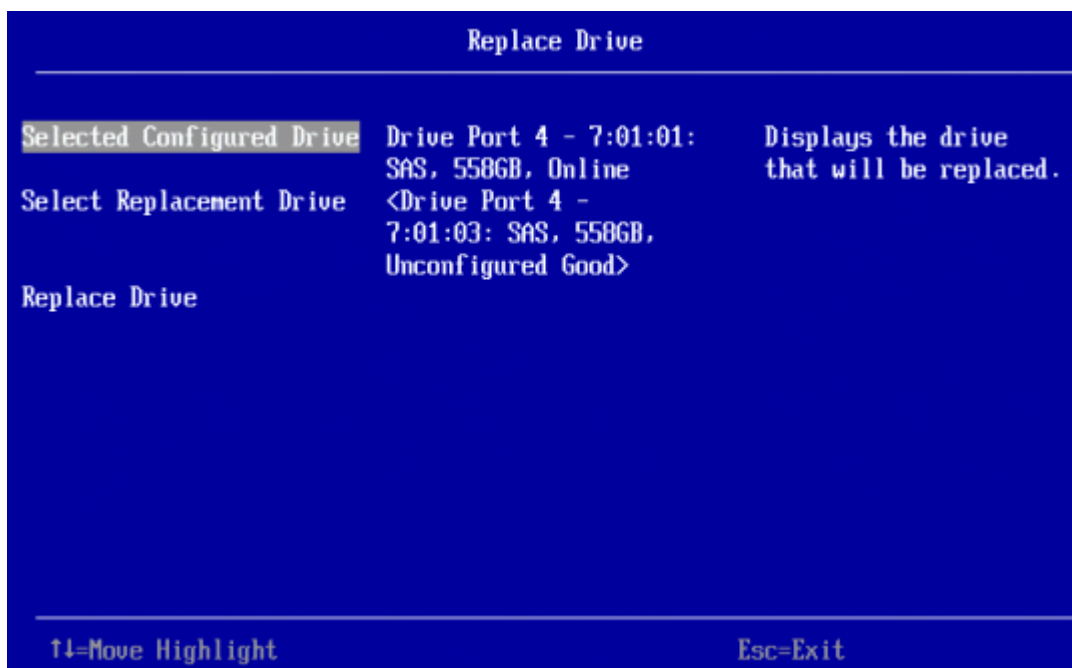

- Highlight **Select Replacement Drive** and press **Enter**.

A popup list of available replacement drives appears. In this example, only one replacement drive is available.

- Select the replacement drive and press **Enter**.
- Highlight **Replace Drive** and press **Enter**.

A success message appears, and the replacement process begins as the data on the drive is rebuilt on the replacement drive.

- Click **OK**.

You are returned to the **Drive Management** menu. The status of the drive changes from **Online** to **Replacing**. You can perform other tasks in the HII Configuration Utility while the replacement operation runs.

## Placing a Drive Offline

Perform these steps to force a physical drive offline. If you perform this operation on a good drive that is part of a redundant virtual drive with a hot spare, the drive rebuilds to the hot spare drive. The drive that you force offline goes into the Unconfigured Good state.

1. Open the popup drive operations menu, highlight **Place Drive Offline** and press **Enter**.
2. Highlight **Go**, which appears beneath **Operation** and press **Enter**.  
The **Place Drive Offline** warning appears.
3. Highlight **Confirm**, and press the spacebar to confirm the operation.
4. Highlight **Yes** and press **Enter**.  
The selected drive is forced offline.

## Placing a Drive Online

Perform these steps to force a selected member drive of a virtual drive online after it has been forced offline.

1. Open the popup drive operations menu, highlight **Place Drive Online** and press **Enter**.
2. Highlight **Go** and press **Enter**.  
The **Place Drive Online** warning appears.

### ATTENTION

Do not force a drive that is part of a redundant array online.

3. Highlight **Confirm** and press the spacebar to confirm the operation.
4. Highlight **Yes** and press **Enter**.  
A message appears indicating that the action has been completed.
5. Highlight **Yes** and press **Enter** to return to the previous dialog.  
The drive is now online.

## Marking a Drive Missing

Perform the following steps to mark a drive missing.

### NOTE

To set a drive that is part of an array as missing, you must first set it as offline. After the drive is set to offline, you can then mark the drive as missing.

1. Open the popup drive operations menu, highlight **Mark Drive as Missing** and press **Enter**.
2. Highlight **Go** and press **Enter**.  
A warning message appears.
3. Highlight **Confirm** and press the space bar to confirm the operation.
4. Highlight **Yes** and press **Enter**.  
A message appears indicating that the action has been completed.
5. Highlight **OK** and press **Enter** to return to the previous dialog.  
The drive is marked as missing.



## Replacing a Missing Drive

Perform the following steps to replace the drive that is marked as missing.

1. Open the popup drive operations menu, highlight **Replace Missing Drive** and press **Enter**.
2. Highlight **Go** and press **Enter**.  
A warning message appears.
3. Highlight **Confirm** and press the space bar to confirm the operation.
4. Highlight **Yes** and press **Enter**.  
A message appears indicating that the action has been completed.
5. Highlight **OK** and press **Enter** to return to the previous dialog.  
The drive that was marked as missing is replaced.

## Assigning a Global Hot Spare Drive

Global hot spare drives provide protection to redundant virtual drives on the controller. If you select an Unconfigured Good drive, you can assign it as a global hot spare drive. Perform these steps to assign a global hot spare.

1. Open the popup drive operations menu, highlight **Assign Hot Spare Drive** and press **Enter**.
2. Highlight **Go**, which appears beneath **Operation** and press **Enter**.  
The hot spare selection dialog appears.
3. Highlight **Assign Global Hot Spare Drive** and press **Enter**.  
The status of the selected drive changes to hot spare.

### NOTE

To refresh the status of the drive displayed in the dialog, exit back to the **Main Menu**, then re-enter the **Drive Management** dialog.

## Assigning a Dedicated Hot Spare Drive

Dedicated hot spare drives provide protection to one or more specified redundant virtual drives on the controller. If you select an Unconfigured Good drive, you can assign it as a dedicated spare drive. Perform these steps to assign a dedicated hot spare.

1. Open the popup drive operations menu, highlight **Assign Dedicated Spare Drive**, and press **Enter**.
2. Highlight **Go**, which appears beneath **Operation**, and press **Enter**.  
The following dialog appears.

**Figure 68: Associate Virtual Drives to the Dedicated HotSpare Drive Dialog**

```

...465.250GB, Unconfigured Good, (512B) → Associate Drive Groups to The Dedicated Hot Spare Drive
▶ Drive Group #1, RAID1, 278.875GB [ 1
  Check All
  Uncheck All
  OK
  Cancel

```

The preceding figure lists a single entry for each existing drive group. If you create a partial virtual drive on the same drive group, you can view a single entry with the cumulative size.

3. Select the drive groups to which this hot spare drive is dedicated, by highlighting each drive group and by pressing the spacebar.

Alternatively, use the **Check All** or **Uncheck All** commands to select or deselect all of the drive groups.

4. When your selection is complete, highlight **OK** and press **Enter**.

When you return to the previous dialog, the status of the selected drive changes to hot spare.

#### **NOTE**

To refresh the status of the drive displayed in the dialog, exit back to the **Main Menu** and then re-enter the **Drive Management** dialog.

## **Unassigning a Hot Spare Drive**

If the currently selected drive is a hot spare drive, you can unassign and return the drive to an Unconfigured Good status.

Perform these steps to unassign a hot spare drive.

#### **ATTENTION**

If you unassign a global hot spare drive or a dedicated hot spare drive, you reduce the protection level of the data on the VD's.

1. Open the popup drive operations menu, highlight **Unassign Hot Spare Drive**, and press **Enter**.
2. Highlight **Go**, which appears beneath the **Operation** and press **Enter**.

The **Unassign Hotspare Drive** warning appears.

3. Highlight **Confirm** and press the spacebar to confirm the operation.
4. Highlight **Yes** and press **Enter**.

A confirmation message appears.

5. Click **OK** to return to the **Drive Management** menu.

The drive that was formerly a hot spare now appears as Unconfigured Good.

#### **NOTE**

To refresh the status of the drive displayed in the dialog, exit back to the **Main Menu** and then re-enter the **Drive Management** dialog.

## **Initializing or Erasing a Drive**

Follow these steps to initialize or erase the currently selected drive. An initialize operation fills the drive with zeroes. An erase operation initializes the drive with a pattern of zeros and ones.

#### **ATTENTION**

All data on the drive is lost when you initialize or erase it. Back up any data that you want to keep before initializing or erasing a drive.

1. Open the popup drive operations menu, highlight **Initialize Drive** or **Erase Drive** and press **Enter**.
2. If you select **Drive Erase**, highlight the **Erase Mode** field and press **Enter**.
3. Select **Simple**, **Normal**, or **Thorough** from the popup menu and press **Enter**.
4. Highlight **Go** and press **Enter**.

The **Initialize Virtual Drive** message appears. (The message is similar to that of erasing a drive.)

- Highlight **Confirm** and press the spacebar to confirm the operation.
- Highlight **Yes** and press **Enter**.

A message appears indicating that the initialization or erase operation has started.

- Highlight **Yes** and press **Enter** to return to the previous window.

This dialog displays a progress indicator that shows the percentage completion of the operation. The dialog also displays a `Stop` command, as shown in the following figure.

**Figure 69: Initialize Progress Indicator**

```

...Drive Management → Drive C1 :01:11: HDD, SAS, 465.250GB, Unconfigured Good, (512B)
▶ Operation                               [Select operation]
Progress                                  [Initialize Drive 0%]
Stop
BASIC PROPERTIES:
Device ID                                 [?]
Connection                                [C1 ]
Enclosure Position                        [1]
Slot Number                               [11]
Status                                    [Unconfigured Good]
Size                                       [465.250 GB]
Type                                       [Disk]
Model                                      [ST9500620SS ]
Serial Number                             [9XF1STPJ]
Hardware Vendor                           [SEAGATE ]
Advanced...

```

- To stop the initialization or erase process, highlight **Stop** and press **Enter**.

#### NOTE

The progress indicator refreshes automatically.

## Rebuilding a Drive

The manual rebuild option is available only under certain conditions, as described here. If a hot spare drive is available, a rebuild starts automatically if a physical drive in a redundant array fails or is forced offline. If the **Emergency Spare** controller property is set to **Unconfigured Good** or **Global Hotspare**, firmware automatically uses an Unconfigured Good drive to rebuild a failed or offline drive if no hot spares are available.

The manual rebuild option is available only if a member drive of a virtual drive fails, there are no available hot spare drives, and the **Emergency Spare** controller property is set to **None**.

Follow these steps to start a manual Rebuild operation on an Unconfigured Good drive.

- Open the popup drive operations menu, highlight **Rebuild** and press **Enter**.
- Highlight **Go** and press **Enter**.

A progress indicator shows the percentage completion of the Rebuild operation. This indicator refreshes automatically, and the `Rebuild Drive Success` message appears.

## Securely Erasing a Drive

Perform these steps to securely erase the currently selected FDE-capable drive. This option is available only if the controller supports security and if security is configured.

#### ATTENTION

All data on the drive is lost when you erase it. Before starting these operations, back up any data that you want to keep.

Perform these steps to securely erase an FDE-capable drive:

1. Open the popup drive operations menu, highlight **Cryptographic Erase** and press **Enter**.
2. Highlight **Go** and press **Enter**.  
The **Cryptographic Erase** warning appears.
3. Highlight **Confirm** and press the spacebar to confirm the operation.
4. Highlight **Yes** and press **Enter**.  
A message appears indicating that the cryptographic erase operation has started.
5. Highlight **Yes** and press **Enter** to return to the previous dialog.  
This dialog now displays a progress bar and a `Stop` command.
6. To stop the cryptographic erase process, highlight **Stop**, and press **Enter**.

#### **NOTE**

A progress indicator shows the percentage completion of the operation. This indicator refreshes automatically.

## **Removing a Physical Drive**

Perform these steps to remove a physical drive:

1. Open the popup drive operations menu, highlight **Prepare for Removal** and press **Enter**.
2. Highlight **Go** and press **Enter**.  
A warning message appears.
3. Highlight **Confirm** and press the spacebar to confirm the operation.
4. Highlight **Yes** and press **Enter**.  
A message appears indicating that the action has been completed.
5. Highlight **Yes** and press **Enter** to return to the previous dialog.  
The drive is removed.

## **Making a JBOD**

If your controller is in JBOD behavior mode and if you have not created any JBODs so far, the Make JBOD appears as an option when you navigate to the **<Select operation>** under **Drive Operations** dialog.

#### **NOTE**

The Make JBOD option only appears for Unconfigured Good drives.

Perform the following steps to Make a JBOD:

1. Open the popup drive operations menu, highlight **Make JBOD** and press **Enter**.
2. Highlight **Go** and press **Enter** to make an unconfigured good drive as a JBOD drive.

## **Erasing a JBOD**

The **JBOD Erase** appears as an option when you navigate to the **<Select operation>** under **Drive Operations** dialog when the following conditions have been met:

- The controller is in JBOD behavior mode,
- you have created JBODs, and
- the selected drive is JBOD.


Perform the following steps to erase a JBOD:

1. Open the popup drive operations menu, highlight **JBOD Erase** and press **Enter**.
2. Highlight **Go** and press **Enter** to delete a JBOD.

## Viewing Advanced Drive Properties

The following dialog appears when you select **Advanced** on the **Drive Management** menu. The property information in this dialog cannot be modified.

**Figure 70: Advanced Drive Properties Dialog**

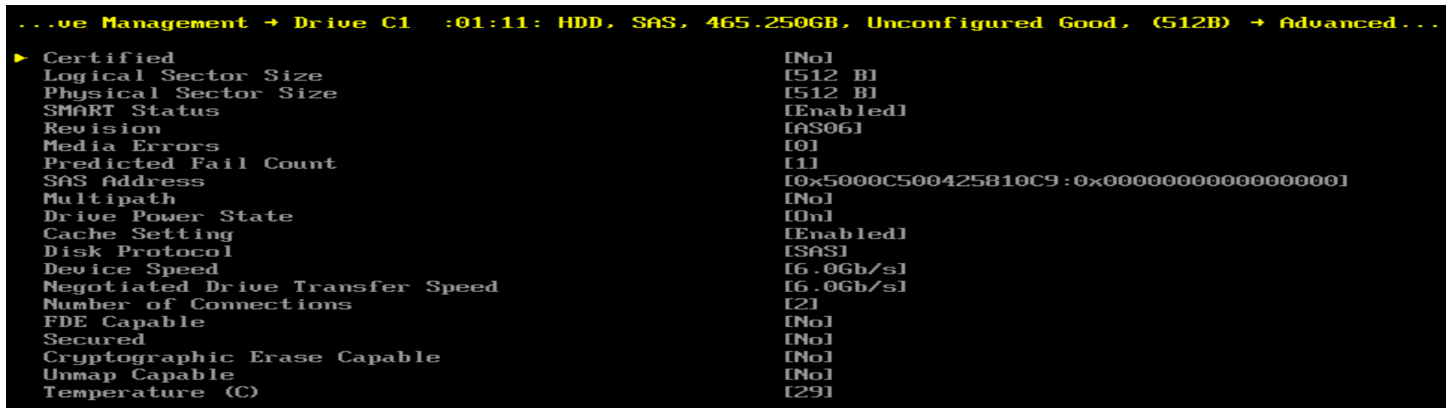

**NOTE**

A red arrow appears when there is too much information to display in one dialog. The amount of information that can be displayed in one dialog depends on the capabilities of the HII browser.

The following table describes the entries that are listed on the **Advanced Drive Properties** dialog.

**Table 35: Advanced Drive Properties**

| Property                    | Description  |
|-----------------------------|--|
| <b>Vendor Certified</b>     | Indicates whether the selected drive is vendor-certified. In some configurations, you can only use certified drives to create configurations.  |
| <b>Logical Sector Size</b>  | The logical sector size of this drive. The possible options are <b>4 KB</b> or <b>512 B</b> .  |
| <b>Physical Sector Size</b> | The physical sector size of this drive. The possible options are <b>4 KB</b> or <b>512 B</b> .   |
| <b>SMART Status</b>         | Indicates whether the Self-Monitoring Analysis and Reporting Technology (SMART) feature is enabled or disabled on the drive. The SMART feature monitors the internal performance of all motors, heads, and drive electronics to detect predictable drive failures. |
| <b>Revision</b>             | The firmware revision level of the drive.  |
| <b>Connected Port</b>       | The port on which the drive is connected.  |
| <b>Media Errors</b>         | The number of physical errors detected on the disk media.  |
| <b>Predicted Fail Count</b> | A property indicating the number of errors that have been detected on the disk media.  |
| <b>SAS Address</b>          | Indicates the SAS address of the connected drive.<br>If you have connected NVMe drives, this field indicates the World-Wide Identifier (WWID) of the connected NVMe drive.   |

| Property                                  | Description   |
|---|---|
| <b>WWID</b>                               | World-Wide Identifier of the connected drive in hexadecimal format.                           |
| <b>Emergency Spare</b>                    | Indicates whether the drive is commissioned as an emergency spare.                            |
| <b>Commissioned Hot Spare</b>             | Indicates if any hot spare drive (dedicated, global, or emergency) has been commissioned.     |
| <b>Cache Setting</b>                      | Indicates if the drive cache is enabled or disabled.  |
| <b>Available Size (GB)</b>                | The available size of the drive, in GB.   |
| <b>Used Space</b>                         | The configured space of the drive, in GB.   |
| <b>Disk Protocol</b>                      | Indicates whether the drive uses SAS, SATA, or PCIe protocol.                                 |
| <b>Negotiated Drive Transfer Speed</b>    | The negotiated link speed for data transfer to and from the drive.                            |
| <b>Number of Connections</b>              | The number of connections on the drive. SAS drives have two ports.                            |
| <b>FDE Capable</b>                        | Indicates whether the drive is capable of encryption.   |
| <b>Secured</b>                            | Indicates whether the drive is secured.   |
| <b>Cryptographic Erase Capable</b>        | Indicates if a secured drive is erasable.   |
| <b>Temperature</b>                        | Indicates whether the drive temperature.  |
| <b>Unmap Capable</b>                      | Indicates whether the unmap capability is enabled or disabled for the drive.                  |
| <b>Unmap Capability for Configuration</b> | Indicates if the unmap capability is enabled or disabled for the current drive configuration. |

## Managing Hardware Components

When you select **Hardware Components** on the **Main Menu**, the **Hardware Components** menu appears, as shown in the following figure.

Figure 71: Hardware Components Menu




The preceding figure lists the status of the temperature sensors, fans, power supplies, and other hardware components (such as batteries) installed in the system.

Select **Battery Management** or **Enclosure Management** to view more detailed information.

## Managing Batteries

The following dialog appears when you select **Battery Management** on the **Advanced Hardware Components** menu.

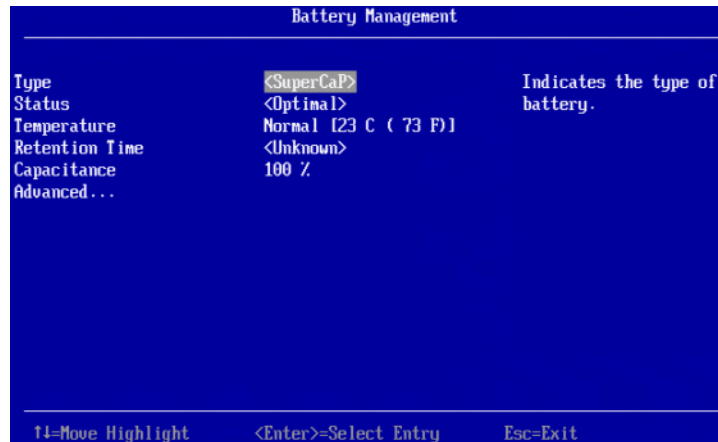
**Figure 72: Battery Management Dialog**

The following table describes the basic battery properties.

**Table 36: Basic Battery Management Properties**

| Property              | Description  |
|-----------------------|--|
| <b>Type</b>           | Type of the battery, such as Super Cap.  |
| <b>Status</b>         | Current status of the battery, such as <b>Optimal</b> . The battery status field has six states. If the battery operation is normal, the state is Optimal. <ul style="list-style-type: none"> <li>• <b>Optimal</b></li> <li>• <b>Missing</b></li> <li>• <b>Failed</b></li> <li>• <b>Degraded</b></li> <li>• <b>Degraded [Needs Attention]</b></li> <li>• <b>Unknown</b></li> </ul> |
| <b>Temperature</b>    | Indicates the current temperature of the battery. Also indicates whether the current temperature of the battery is normal or high.   |
| <b>Retention Time</b> | The number of hours the battery can support with the capacity it now has. The possible values are <b>48+ hours</b> , <b>Unknown</b> , or an exact number of hours between 1 and 48.  |
| <b>Capacitance</b>    | Available capacitance of the battery, stated as a percentage.  |

To view advanced battery properties, highlight **Advanced** and press Enter. The following dialog appears.

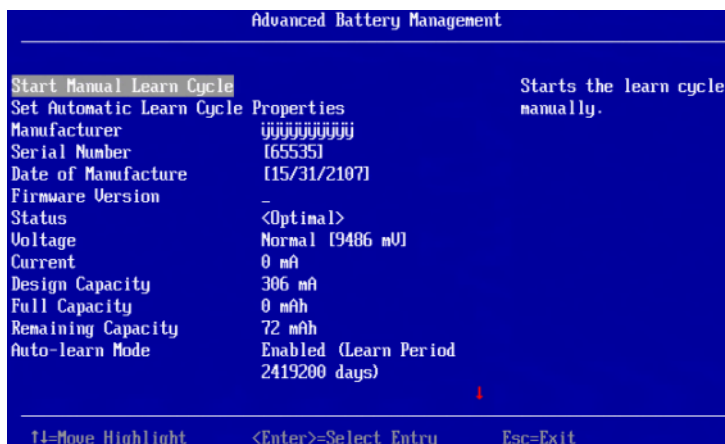**Figure 73: Advanced Battery Management Dialog**

The small red arrow at the bottom of the dialog indicates that you can scroll down to view more advanced battery management properties.

**NOTE**

The red arrow appears when there is too much information to display in one dialog. The amount of information that can be displayed in one dialog depends on the capabilities of the HII browser.

The following table describes the advanced battery properties and the other options on this dialog. Properties marked with an asterisk are user selectable. All other properties are view only.

**Table 37: Advanced Battery Management Properties**

| Property                                     | Description  |
|--|--|
| <b>Start Manual Learn Cycle*</b>             | Highlight this field and press Enter to start a manual battery learn cycle.  |
| <b>Set Automatic Learn Cycle Properties*</b> | Highlight this field and press Enter to set the properties for an automatic battery learn cycle.   |
| <b>Manufacturer</b>                          | Manufacturer of the battery.   |
| <b>Serial Number</b>                         | Serial number of the battery.  |
| <b>Date of Manufacture</b>                   | Manufacturing date of the battery.   |
| <b>Firmware Version</b>                      | Firmware version of the battery.   |
| <b>Status</b>                                | Status of the battery. If the status is <b>Learning</b> , <b>Degraded</b> , or <b>Failed</b> , a reason is listed for the status.  |
| <b>Voltage</b>                               | Voltage level of the battery, in mV. Also indicates if the current battery voltage is normal or low.   |
| <b>Current</b>                               | Current of the battery, in mA.   |
| <b>Design Capacity</b>                       | Theoretical capacity of the battery.   |
| <b>Full Capacity</b>                         | Full charge capacity of the battery.   |
| <b>Remaining Capacity</b>                    | Remaining capacity of the battery.   |
| <b>Auto-learn Mode</b>                       | Indicates whether auto-learn mode is enabled or disabled. A learn cycle is a battery calibration operation that the controller performed periodically to determine the battery condition. This operation cannot be disabled. |
| <b>Next Learn Cycle Time</b>                 | Date and hour of the next scheduled learn cycle.   |



## Setting Automatic Learn Cycle Properties

The **Set Automatic Learn Cycle Properties** dialog appears when you select **Set Automatic Learn Cycle Properties** on the **Advanced Battery Management** dialog.

The small red arrow at the bottom of the dialog indicates that you can scroll down to view more options.

### NOTE

The red arrow appears when there is too much information to display in one dialog. The amount of information that can be displayed in one dialog depends on the capabilities of the HII browser.

To generate an event as a reminder to start a learn cycle manually, highlight the field next to **Generate an event**, and press the spacebar.

To enable or disable automatic learn cycle mode, highlight the field next to **Learn Cycle**, press **Enter**, and make a selection from the popup menu.

The **Day**, **Time**, **No. of Days**, and **No. of Hours** fields are also user selectable through popup menus. The **Next Learn Cycle Time** field shows the time of the next learn cycle.

Use the **Apply**, **OK**, and **Cancel** fields at the bottom of the selections (not visible in this figure) to apply, confirm or cancel any changes to the learn cycle options.

## Managing Enclosures

To manage enclosures and view enclosure properties, select **Enclosure Management** from the **Advanced Hardware Components** menu.

The **Enclosure Management** dialog shows the Vendor ID, Enclosure ID, Enclosure Model, Enclosure Location, Product Revision Level, and Number of slots for the selected enclosure.


Figure 74: Enclosure Management Dialog

```
System Configuration → Dashboard View → Main Menu → Hardware Components → Enclosure Management
▶ Select Enclosure                               [Enclosure C1  x4:0001]
Vendor ID                                         [DELL          ]
Enclosure ID                                     [65]
Enclosure Model                                  [MD1220        ]
Enclosure Location                              [Internal]
Product Revision Level                          [1.01]
Number of slots                                 [24]
Attached Drives                                 [Drive C1 :01:00: HDD, SAS, 136.218GB, Online,
                                                (512B)]
View Enclosure Status
```

To select a different enclosure, highlight the **Select Enclosure** field, press **Enter**, and select the enclosure from the popup menu.

To view a popup menu of the drives that are connected to the enclosure, highlight the **Attached Drives** field and press **Enter**.

To view more information about the enclosure status, highlight **View Enclosure Status** and press **Enter**. The following dialog appears.

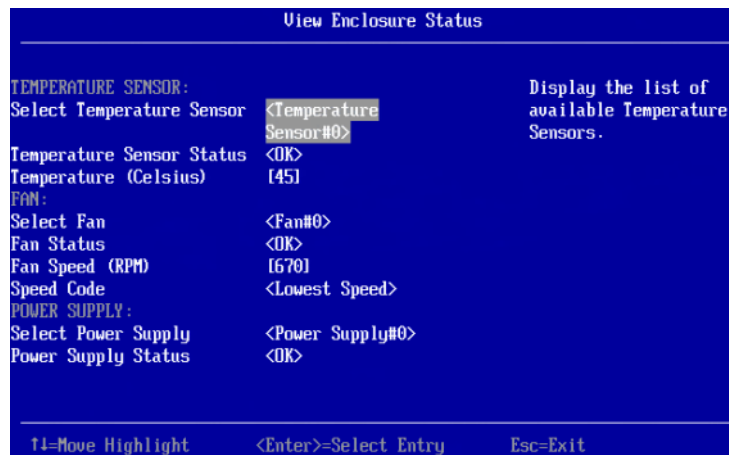**Figure 75: View Enclosure Status Dialog**

The **View Enclosure Status** dialog shows information about the temperature sensors, fans, and power supplies installed in the selected enclosure. To view a selectable popup menu of the installed sensors, fans, or power supplies, highlight the appropriate **Select** field, and press **Enter**.

# StorCLI

---

## Overview

The StorCLI tool is a command line interface that is designed to be easy to use, consistent, and easy to script. StorCLI is a unified Storage Command Line Interface, which can be used on **Software RAID (SWR)**, **MegaRAID**, and **Initiator-Target (IT)** Controllers from Gen3 onwards.

### NOTE

The legacy commands are deprecated from this guide.

## Controllers Supported by the StorCLI Tool

The StorCLI tool works with the MegaRAID and Software RAID (SWR) product lines. The StorCLI tool supports the following controllers:

- MegaRAID 12Gb/s SAS RAID controllers
- Software RAID (SWR) controllers
- Initiator-Target (IT) controllers

## Supported Operating Systems

The following table lists the supported operating systems.

**Table 38: Supported Operating Systems**

| Supported Operating Systems | Version/Flavors   |
|-----------------------------|---|
| <b>Microsoft</b>            | <b>Microsoft Windows Client versions</b> <ul style="list-style-type: none"> <li>• Windows Client 10</li> <li>• Windows 8.1</li> <li>• Windows 8</li> </ul> <b>Microsoft Windows Server versions</b> <ul style="list-style-type: none"> <li>• Windows Server 2019</li> <li>• Windows Server 2016</li> <li>• Windows Server 2012 R2</li> <li>• Windows Server 2012</li> </ul>   |
| <b>Linux</b>                | <b>Red Hat</b> <ul style="list-style-type: none"> <li>• Red Hat Enterprise Linux 7.4</li> <li>• Red Hat Enterprise Linux 7.3</li> <li>• Red Hat Enterprise Linux 7.2</li> <li>• Red Hat Enterprise Linux 7.1</li> <li>• Red Hat Enterprise Linux 7.0</li> <li>• Red Hat Enterprise Linux 6.8</li> <li>• Red Hat Enterprise Linux 6.7</li> <li>• Red Hat Enterprise Linux 6.6</li> </ul> <b>SUSE</b> <ul style="list-style-type: none"> <li>• SUSE Linux Enterprise Server 12 SP3</li> <li>• SUSE Linux Enterprise Server 12 SP2</li> <li>• SUSE Linux Enterprise Server 12 SP1</li> <li>• SUSE Linux Enterprise Server 12</li> <li>• SUSE Linux Enterprise Server 11 SP4</li> <li>• SUSE Linux Enterprise Server 11 SP3</li> <li>• SUSE Linux Enterprise Server 11 SP2</li> </ul> <b>PowerPC</b> <ul style="list-style-type: none"> <li>• Linux PowerPC for little-endian and big-endian (32 bit and 64 bit)</li> </ul> |
| <b>VMware</b>               | <ul style="list-style-type: none"> <li>• VMware ESXi 6.5 Update 1</li> <li>• VMware ESXi 6.5</li> <li>• VMware ESXi 6.0 Update 2</li> <li>• VMware ESXi 6.0 Update 1</li> <li>• VMware ESXi 6.0</li> <li>• VMware ESXi 5.5 Update 3</li> <li>• VMware ESXi 5.5 Update 2</li> <li>• VMware ESXi 5.5 Update 1</li> </ul>  |
| <b>Citrix XenServer</b>     | <ul style="list-style-type: none"> <li>• Citrix XenServer 7.2</li> <li>• Citrix XenServer 7</li> <li>• Citrix XenServer 6.5</li> <li>• Citrix XenServer 6.5 SP1</li> </ul>  |
| <b>CentOS</b>               | <ul style="list-style-type: none"> <li>• CentOS-7.4</li> <li>• CentOS-7.2</li> <li>• CentOS-7.1</li> <li>• CentOS-6.8</li> <li>• CentOS-6.7</li> </ul>  |
| <b>Fedora</b>               | Fedora 24 Workstation   |

| Supported Operating Systems           | Version/Flavors  |
|---------------------------------------|--|
| FreeBSD                               | <ul style="list-style-type: none"> <li>FreeBSD 11</li> <li>FreeBSD 10.3</li> <li>FreeBSD 10.2</li> </ul>         |
| Ubuntu                                | <ul style="list-style-type: none"> <li>Ubuntu 14.04</li> <li>Ubuntu 16.04.1 LTS</li> <li>Ubuntu 16.10</li> </ul> |
| Unified Extensible Firmware Interface | UEFI environment   |
| ARM                                   | Linux, Windows, and UEFI   |

## Installing StorCLI on MegaRAID Controllers

The following topics detail the steps that are required to install the StorCLI tool for MR controllers on various operating systems.

### Installing the StorCLI Tool on Microsoft Windows Operating Systems

The Windows StorCLI binary is provided in a binary format, and no separate installation is required.

1. Copy the binary file from the Broadcom website.
2. Place the binary file in the directory from which you want to run StorCLI, and run the tool.

Because Windows PowerShell is not fully supported by the StorCLI tool, use either one of the following techniques to run commands in the StorCLI tool in Windows PowerShell:

- Enclose commands in double quotation marks; for example,
 

```
storcli "/cx show"
```
- Launch the command prompt from within Windows PowerShell to run the StorCLI commands.

#### NOTE

The StorCLI tools must be run with the administrator privileges.

### Installing the StorCLI Tool on the UEFI Environment

The UEFI StorCLI binary is provided in a binary format, and no separate installation is required.

#### NOTE

StorCLI default logging requires a minimum of 20 MB of free space.

1. Copy the binary file from the Broadcom website or from the CD provided to you onto a USB drive.
2. Using the USB drive, place the binary file in the directory from which you want to run the Storage Command Line Interface, and run the tool.

After the binaries are copied, you can start executing the StorCLI commands.

### Installing the StorCLI Tool on Linux Operating Systems

To install the StorCLI tool on Linux operating systems, perform the following steps:

1. Unzip the StorCLI tool package.
2. To install the StorCLI RPM feature, run the `rpm -ivh <StorCLI- x.xx-x.noarch.rpm >` command.

By default, the StorCLI tool will be installed in the `/opt/MegaRAID/storcli` location.

3. To upgrade the StorCLI RPM feature, run the `rpm -Uvh <StorCLI- x.xx-x.noarch.rpm >` command.

## Installing the StorCLI Tool on VMware Operating Systems

To install the StorCLI tool on VMware operating systems, run the following from the command line:

```
esxcli software vib install -v=<path-to-vib-package> --no-sig-check
```

### NOTE

StorCLI default logging requires a minimum of 20 MB of free space.

Example:

```
esxcli software vib install -v=/vmfs/volumes/datastore1/StorCliMN/vmware-esx-StorCli-1.01.04.vib
```

### NOTE

Broadcom provides three variants of StorCLI tool for VMware to be compatible with ESXi versions and MegaRAID (MR) drivers:

**VMware-NDS** – This package must be used with MegaRAID/IT drivers, `lsi_mr3`, which is a native driver.

The **VMware-NDS** package can be executed with both native and legacy drivers.

## StorCLI Tool Command Syntax

This section describes the StorCLI command syntax and the valid values for each parameter in the general command syntax.

- In large configurations, running two instances of the StorCLI tool in parallel (at the same time) is not recommended.
- To get the output in JSON format, add `J` at the end of the command syntax. For example:  

```
storcli /cx show <property1>|<property2> J
```
- Background operations are blocked in the UEFI environment, and these operations are resumed in the operating system environment.
- StorCLI discovers MegaRAID controllers in a driver-less UEFI environment only if the firmware is in operational or ready state.
- On ARM-UEFI platforms, StorCLI does not detect the controller if there is no ARM-UEFI driver present.

The StorCLI tool syntax uses the following general format:

```
<[object identifier]> <verb> <[adverb | attributes | properties]> <[key=value]>
```

The StorCLI tool supports the object identifiers listed in the following table.

**Table 39: Object Identifiers in the StorCLI Command Syntax**

| Object Identifier              | Description   |
|--------------------------------|---|
| No object identifier specified | If no object identifier exists, the command is a system command.      |
| /cx                            | This object identifier is for controller x.                           |
| /call                          | This object identifier is for sending the command to all controllers. |
| /c x/v x                       | This object identifier is for a virtual drive x on controller x.      |
| /c x/vall                      | This object identifier is for all virtual drives on controller x.     |
| /cx/ex                         | This object identifier is for an enclosure x on controller x.         |
| /cx/eall                       | This object identifier is for all enclosures on controller x.         |

| Object Identifier | Description   |
|-------------------|---|
| /cx/fall          | This object identifier is for all foreign configurations on controller x.                       |
| /cx/lrx           | This is the object identifier for the lane speed x on controller x                              |
| /cx/ex/sx         | This object identifier for the drive is slot x on enclosure x on controller x.                  |
| /cx/sx            | This object identifier represents the drives that are directly attached to controller x.        |
| /call/sall        | This object identifier represents all the drives that are directly attached to all controllers. |
| /cx/ex/sall       | This object identifier is for all the drives on enclosure x on controller x.                    |
| /cx/dx            | This object identifier is for the drive group x on enclosure x on controller x.                 |
| /cx/dall          | This object identifier is for the all drive groups on enclosure x on controller x.              |
| /cx/px            | This object identifier is for a phy operation x on controller x.                                |
| /cx/pall          | This object identifier is for all phy operations on controller x.                               |
| /cx/bbu           | This object identifier is for a BBU on controller x.  |
| /cx/cv            | This object identifier is for a CacheVault x on controller x.                                   |

**NOTE**

If enclosures are not used to connect physical drives to the controller, you do not specify the enclosure ID in the command.

The StorCLI tool supports the following verbs.

**Table 40: Verbs in the StorCLI Command Syntax**

| Verb       | Description   |
|------------|---|
| add        | This verb adds virtual drives, JBODs, and so on to the object identifier.                               |
| compare    | This verb compares an input value with a system value.  |
| del        | This verb deletes a drive, value, or property of the object identifier.                                 |
| download   | This verb downloads and flashes a file to the target.   |
| expand     | This verb expands the size of the virtual drive.  |
| erase      | This verb erases a particular region on the controller, depending on the argument specified.            |
| flush      | This verb flushes a controller cache or a drive cache.  |
| flasherase | This verb erases the flash memory on the controller.  |
| get        | This verb obtains the data from the controller.   |
| import     | This verb imports the foreign configuration into the drive.   |
| insert     | This verb replaces the configured drive that is identified as missing, and starts an automatic rebuild. |
| pause      | This verb pauses an ongoing operation.  |
| resume     | This verb resumes paused operation.   |
| restart    | This verb restarts the controller without a system reboot.  |
| set        | This verb sets a value of the object identifier.  |
| show       | This verb shows the value and properties of the object identifier.                                      |
| split      | This verb enables you to perform a break mirror operation on a drive group.                             |
| suspend    | This verb suspends a particular operation that is being performed.                                      |

| Verb                                   | Description  |
|--|--|
| start                                  | This verb starts an operation.   |
| stop                                   | This verb stops an operation that is in progress. A stopped process cannot be resumed. |
| spinup                                 | This verb spins up the drives connected to the controller.                             |
| spindown                               | This verb spins down an unconfigured drive and prepares it for removal.                |
| secure erase<br>Cryptographic<br>Erase | This verb erases the lock key of a secure drive.                                       |
| transform                              | This verb downgrades the firmware memory on the controller.                            |

- <[adverb | attributes | properties]>  
Specifies what the verb modifies or displays.
- <[key=value]>  
Specifies a value, if a value is required by the command.

## StorCLI Default Logging

Default logging functionality has been enabled in StorCLI. When a default log file is created, the file is saved as `storcli.log`. Each time default logging occurs, the information is added to the `storcli.log`. Once the log file reaches a maximum size of 3 MB, a new log file is created. There can be up to four log files at any given time. For example:

- `storcli.log`
- `storcli.log.1`
- `storcli.log.2`
- `storcli.log.3`

Due to default logging, there is a space limitation in light operating systems such as VMware or UEFI.

### NOTE

StorCLI default logging requires a minimum of 20 MB of free space.

There are two conditions under which StorCLI logging occurs.

- When the `storcliconf.ini` file is present in the same directory as the StorCLI binary.  
Logging happens to the file name specified in the `ini` file. This is useful in situations where default logging will not work.  
For example, a segmentation fault occurs or a crash happens in StorCLI binary. In these situations, collect a StorCLI log file by placing the `storcliconf.ini` file in the same working directory as StorCLI.
- When the `storcliconf.ini` file is not present in the same directory as the StorCLI binary.  
Default logging occurs automatically.

Use the `nolog` option to disable logging for any command.

For example, include the `nolog` option in the `storcli /cx show nolog` command to prevent default logging.

## StorCLI Controller Commands

StorCLI is a command line utility tool. StorCLI is not case sensitive. The order in which you specify the command options should be the same as in this document in order to ensure proper command execution. Incorrect or duplicate values for variables could result in the last variable being executed or in a command failure.



The version of the StorCLI and the operating system on which StorCLI is being executed are also displayed at the beginning of StorCLI output.

This section describes the commands supported by StorCLI.

## System Commands

### System Show Commands

StorCLI supports the following system `show` commands:

```
storcli show
storcli show all
storcli show ctrlcount
storcli show help
storcli v
```

The detailed description for each command follows.

#### **storcli show**

This command shows a summary of controller and controller-associated information for the system. The summary includes the number of controllers, the host name, the operating system information, and the overview of existing configuration.

#### **storcli show all**

This command shows the list of controllers and controller-associated information, information about the drives that need attention, and advanced software options.

#### **storcli show ctrlcount**

This command shows the number of controllers connected to the system.

#### **storcli show help**

This command shows help for all commands at the system level.

#### **storcli v**

This command shows the version of the StorCLI. The version of the StorCLI and the operating system on which StorCLI is being executed are also displayed at the beginning of StorCLI output.

## Controller Commands

Controller commands provide information and perform actions related to a specified controller. The StorCLI utility supports the controller commands described in this section.

## Show and Set Controller Properties Commands

**Table 41: Controller Commands Quick Reference Table**

| Commands                             | Value Range   | Description                              |
|--------------------------------------|---|--|
| <code>show &lt;properties&gt;</code> | See <a href="#">Table 42</a> .  | Displays specific controller properties. |
| <code>set &lt;properties&gt;</code>  | See <a href="#">Table 42</a> .  | Sets controller properties.              |
| <code>show</code>                    | <code>all</code> : Shows all properties of the virtual drive.<br><code>freespace</code> : Shows the free space available in the controller.<br>See <a href="#">Controller Show Commands</a> . | Displays physical drive information.     |

This section provides command information for the `show` and `set` controller properties.

### NOTE

You cannot set multiple properties with a single command.

### **`storcli /cx show <property>`**

This command shows the current value of the specified property on the specified controller.

General example output:

```
storcli /c0 show bgrate
Controller = 0
Status = Success
Description = None
Controller Properties:
=====
-----
Ctrl_Prop Value
-----
BGI Rate 45%
-----
```

You can show the following properties using the `storcli /cx show <property>` command.

```
storcli /cx show abortconerror
storcli /cx show activityforlocate
storcli /cx show alarm
storcli /cx show aso
storcli /cx show autobgi
storcli /cx show autoconfig
storcli /cx show autorebuild
storcli /cx show badblocks
storcli /cx show backplane
storcli /cx show batterywarning
storcli /cx show bgi
storcli /cx show bios
storcli /cx show bootdrive
storcli /cx show bootwithpinnedcache
storcli /cx show cachebypass
storcli /cx show cacheflushint
```

```
storcli /cx show cc
storcli /cx show ccrate
storcli /cx show coercion
storcli /cx show configureautobalance
storcli /cx show consistencycheck|cc
storcli /cx show copyback
storcli /cx show directpdmapping
storcli /cx show dimmerswitch|ds
storcli /cx show dpm
storcli /cx show ds
storcli /cx show eccbucketleakrate
storcli /cx show eccbucketsize
storcli /cx show eghs
storcli /cx show erase
storcli /cx show failpdonsmarterror
storcli /cx show flush|flushcache cachecade
storcli /cx show flushwriteverify
storcli /cx show foreignautoimport
storcli /cx show hddthermalpollinterval
storcli /cx show init
storcli /cx show jbod
storcli /cx show largeiosupport
storcli /cx show loadbalancemode
storcli /cx show limitmaxratesata
storcli /cx show maintainpdfailhistory
storcli /cx show migrate
storcli /cx show migraterate
storcli /cx show ncq
storcli /cx show ocr
storcli /cx show parityreadcachebypass
storcli /cx show patrolread|pr
storcli /cx show pci
storcli /cx show perfmode
storcli /cx show personality
storcli /cx show pi
storcli /cx show prcorrectunconfiguredareas
storcli /cx show preservedcache
storcli /cx show profile
storcli /cx show prrate
storcli /cx show rebuildrate
storcli /cx show rehostinfo
storcli /cx show restorehotspare
storcli /cx show safeid
storcli /cx show smartpollinterval
storcli /cx show sgpioforce
storcli /cx show spinupdelay
storcli /cx show spinupdrivecount
storcli /cx show ssdthermalpollinterval
storcli /cx show time
storcli /cx show usefdeonlyencrypt
storcli /cx show wbsupport
```

**storcli /cx set <property> = <value>**

General example output:

```
storcli /c0 set bgirate=40
Controller = 0
Status = Success
Description = None
Controller Properties :
=====
-----
Ctrl_Prop Value
-----
BGI Rate 40%
-----
```

The following commands are examples of the properties that can be set using the `storcli /cx set <property>=<value>` command structure.

**NOTE**

In the following list and table, setting a property to `on` enables that feature and setting a property to `off` disables that feature.

```
storcli /cx set abortconerror=[on|off]
storcli /cx set activityforlocate=[on|off]
storcli /cx set alarm=[on|off|silence]
storcli /cx set autoconfig=[none|R0 [immediate]|JBOD] > [usecurrent]
storcli /cx set autoconfig [sesgmt=[on|off]] [secured=[on|off]] [multipath=[on|off]]
  [multiinit=[on|off]] [discardpinnedcache=<Val>] [failPDOnReadME=[on|off]]
  [Lowlatency=low|off]]
storcli /cx set backplane [mode=[0|1|2|3]] [expose=[on|off]]
storcli /cx set batterywarning=[on|off]
storcli /cx set bgirate=<value>
storcli /cx set bootwithpinnedcache=[on|off]
storcli /cx set cachebypass=[on|off]
storcli /cx set cacheflushinterval=<value>
storcli /cx set ccrate=<value>
storcli /cx set coercion=<value>
storcli /cx set consistencycheck|cc=[off|seq|conc] [delay=<value>]
  [starttime=<yyyy/mm/dd hh>] [excludevd=x-y,z]
storcli /cx set copyback=[on|off] type=[smartssd|smarthdd|all]
storcli /cx set dimmerswitch|ds=[on|off] [type=[1|2|4]]
storcli /cx set directpdmapping=[on|off]
storcli /cx set driveactivityled=[on|off]
storcli /cx set eccbucketleakrate=<value>
storcli /cx set eccbucketsize=<value>
storcli /cx set eghs [state=[on|off]] [smarter=[on|off]] [eug=[on|off]]
storcli /cx set failpdonsmartererror=[on|off]
storcli /cx set flushwriteverify=[on|off]
storcli /cx set foreignautoimport=[on|off]
storcli /cx set immediateio=[on|off]
storcli /cx set jbod=[on|off]
storcli /cx set loadbalancemode=<value>
storcli /cx set maintainpdfailhistory=[on|off]
storcli /cx set migraterate=<value>
```

```

storcli /cx set ncq=[on|off]
storcli /cx set parityreadcachebypass=<on|off>
storcli /cx set patrolread|pr[ [=on mode=[auto|manual]] |off]]
storcli /cx set perfmode=<value>
storcli /cx set personality=[RAID|HBA|JBOD]
storcli /cx set pi [state=[on|off]] [import=[on|off]]
storcli /cx set prcorrectunconfiguredareas=[on|off]
storcli /cx set profile profileid=<value>
storcli /cx set prrate=<value>
storcli /cx set rebuildrate=<value>
storcli /cx set restorehotspare=[on|off]
storcli /cx set sesmonitoring=[on|off]
storcli /cx set SGPIOforce=[on|off]
storcli /cx set smartpollinterval=<value>
storcli /cx set spinupdelay=<value>
storcli /cx set spinupdrivecount=<value>
storcli /cx set stoponerror=[on|off]
storcli /cx set supportssdpatrolread=[on|off]
storcli /cx set termlog[=on|off|offthisboot]
storcli /cx set time=<yyyymmdd hh:mm:ss|systemtime>
storcli /cx set usefdeonlyencrypt=[on|off]

```

The following table lists and describes the properties for the `show` and `set` commands.

**Table 42: Properties for Show and Set Commands**

| Cmd  | Property Name     | Set Command Range       | Description  |
|------|-------------------|-------------------------|--|
| set  | abortccconerror   | =[on off]               | Aborts the consistency check when it detects an inconsistency.   |
| set  | activityforlocate | =[on off]               | If set to <code>on</code> , the LEDs usually used to show drive activity are used for drive locate instead.  |
| set  | alarm             | =[on off silence]       | Enables ( <code>on</code> ) or disables ( <code>off</code> ) the alarm on critical errors. The option <code>silence</code> silences the alarm.<br>This option is supported only on MegaRAID controllers that have a physical buzzer.<br>If set to <code>on</code> , the alarm sounds on critical errors.<br>If set to <code>off</code> , any active alarms are silenced and the alarm will not sound on any errors, including critical errors.<br>If set to <code>silence</code> , any currently sounding alarm stops, but starts again after a reboot if another critical error is present and the alarm is <code>on</code> . |
| show | aso               |                         | Displays the <code>aso</code> status.  |
| set  | aso               | deactivatetrialkey      | Displays the enabled Advanced Software Options.  |
| set  | aso               | key=<key value>         |  |
| set  | aso               | key=<key value> preview |  |

| Cmd  | Property Name  | Set Command Range   | Description  |
|------|----------------|---|--|
| set  | aso            | rehostcomplete  |  |
| set  | aso            | transfertovault   |  |
| set  | assemblynumber | =<xxxx>   | —  |
| show | autobgi        |   | Displays the autobgi status.   |
| show | autoconfig     |   | Displays the autoconfig status.  |
| set  | autoconfig     | =[R0   JBOD   NONE]   | Sets the behavior to R0 , JBOD , or NONE .   |
| show | autorebuild    |   | Displays the autorebuild status.   |
| set  | autorebuild    | =[on   off]   | —  |
| show | badblocks      |   | Displays bad blocks of the CacheVault™ module.   |
| set  | backplane      | expose=[on   off]   | Enables (on ) or disables (off ) device drivers to expose enclosure devices; for example, expanders, SEPs. |
| set  | backplane      | mode=0 : Use autodetect logic of backplanes, such as SGPIO and I <sup>2</sup> C SEP using GPIO pins.<br>mode=1 : Disable autodetect SGPIO.<br>mode=2 : Disable I <sup>2</sup> C SEP autodetect.<br>mode=3 : Disable both the autodetects. | Configures enclosure detection on a non-SES/expander backplane.  |
| set  | batterywarning | =[on   off]   | Enables (on ) or disables (off ) battery warnings.   |
| show | bgi            |   | Displays the bgi (background initialization) status.   |
| set  | bgirate        | =0 to 100   | Sets the background initialization rate in percentage.   |
| show | bios           |   | Displays the bios status.  |
| set  | bios           | [state=[on   off]]<br>[Mode=[SOE   PE   IE   SME]]<br>[abs=[on   off]]<br>[DeviceExposure=<value>]  | —  |
| show | bootdrive      |   | Displays the bootdrive status.   |
| set  | cachebypass    | =[on   off]   | Enables (on ) or disables (off ) the cache bypass performance improvement feature.                         |
| set  | cacheflushint  | =0 to 255,<br>Default value: 4  | Sets the cache flush interval in seconds.  |
| show | cc             |   | Displays the cc (consistency check) status.  |
| set  | ccrate         | =0 to 100   | Sets the consistency check rate in percentage.   |
| set  | coercion       | =0 : No coercion<br>=1 : 128 MB<br>=2 : 1 GB  | Sets the drive capacity in coercion mode.  |

| Cmd  | Property Name     | Set Command Range  | Description  |
|------|-------------------|--|--|
| set  | config            | file=<fileName>  | Saves the controller and the controller properties to the specified file.  |
| set  | configautobalance | = [on off]   | —  |
| show | configautobalance |  | Displays the configautobalance status.   |
| set  | consistencycheck  | = [on off]   | See <a href="#">Consistency Check</a> .  |
| set  | copyback          | = [on off]<br>type= [smartssd smarthdd all]  | Enables or disables copyback for drive types. The available choices are:<br>smartssd – Copyback enabled for SSD drives.<br>smarthdd – Copyback enabled for HDD drives.<br>all – Copyback enabled for both SSD drives and HDD drives. |
| set  | debug             | type=<value><br>option=<value><br>[level=<value in hex>]<br>reset all  | —  |
| set  | dimmerswitch ds   | See <a href="#">Virtual Drive Power Settings Commands</a> .  | See <a href="#">Virtual Drive Power Settings Commands</a> .  |
| set  | directpdmapping   | = [on off]   | When using enclosures, set the directpdmapping property to off to disable it; otherwise, set it to on to enable it.  |
| show | dpm               |  | Displays the dpm status.   |
| set  | driveactivityled  | = [on off]   | Activates or deactivates the Drive Activity LED.   |
| show | ds                | =OFF type=[1 2 3 4]<br>=ON type=[1 2]<br>[properties]<br>=ON type=[3 4]<br>DefaultLdType=<val><br>[properties]<br>[properties] | Displays the Dimmer Switch status.   |
| set  | eccbucketleakrate | 0 to 65535   | Sets the leak rate of the single-bit bucket in minutes (one entry removed per leak-rate).  |
| set  | eccbucketsize     | 0 to 255   | Sets the size of ECC single-bit-error bucket (logs event when full).   |
| set  | eghs              | eug= [on off]  | Enables (on) or disables (off) the commissioning of Unconfigured Good drives as Emergency Hot Spare (EHSP) drives.   |
| set  | eghs              | smarter= [on off]  | Enables (on) or disables (off) the commissioning of Emergency Hot Spare (EHSP) drives for Predictive Failure (PFA) events.   |
| set  | eghs              | state= [on off]  | Enables (on) or disables (off) the commissioning of otherwise incompatible global hot spare drives as Emergency Hot Spare (EHSP) drives.   |

| Cmd  | Property Name          | Set Command Range  | Description  |
|------|------------------------|--------------------|--|
| show | erase                  |                    | Displays the <code>erase</code> status.  |
| set  | factory defaults       |                    | —  |
| set  | failpdonsmarterror     | = [on off]         | Enables (on) or disables (off) the <i>Fail PD on SMARTer</i> property.   |
| show | flush flushcache       | cachecade          | Displays the CacheCade™ flush status.  |
| set  | flushwriteverify       | = [on off]         | Enables (on) or disables (off) the Write Verify feature. This feature verifies if the data was written correctly to the cache before flushing the controller cache.  |
| set  | flushwriteverify       | = [on off]         | —  |
| show | foreignautoimport      |                    | On – Displays the <code>foreignautoimport</code> status on startup.<br>Off – Does <i>not</i> display the <code>foreignautoimport</code> status automatically on startup.   |
| set  | foreignautoimport      | = [on off]         | Imports a foreign configuration automatically, at boot.  |
| show | hddthermalpollinterval |                    | Displays the <code>hddthermalpollinterval</code> status.   |
| set  | HDDThermalPollInterval | = <value>          | —  |
| set  | immediateio            | = [on off]         | Enables (on) or disables (off) immediate I/O transactions.   |
| show | init                   |                    | Displays the <code>init</code> status.   |
| set  | jbod                   | = [on off]         | Enables (on) or disables (off) JBOD mode; by default, drives become system drives. This property is not supported by all controllers.<br><br><b>Note:</b> If you try to disable the JBOD mode, and if any of the JBODs have an operating system/file system, the StorCLI tool displays a warning message indicating that the JBOD has an operating system or a file system on it and prompts you to use the <code>force</code> option to proceed with the disable operation. |
| set  | jbodwritecache         | = [on off default] | —  |
| show | jbodwritecache         |                    | Displays the <code>jbodwritecache</code> status.   |
| set  | largeiosupport         | = [on off]         | —  |
| show | largeiosupport         |                    | Displays the <code>largeiosupport</code> status.   |
| set  | largeQD                | = [on off]         | —  |
| show | largeQD                |                    | Displays the <code>largeQD</code> status.  |
| set  | ldlimit                | = [default max]    | —  |
| show | ldlimit                |                    | Displays the <code>ldlimit</code> status.  |
| set  | limitMaxRateSATA       | = [on off]         | —  |
| show | limitmaxratesata       |                    | Displays the <code>limitmaxratesata</code> status.   |



| Cmd  | Property Name         | Set Command Range  | Description   |
|------|-----------------------|--|---|
| set  | linkconfig            | [connname=cx,cy]<br>linkconfig=<val>   | —   |
| set  | loadbalancemode       | =[on off]  | Enables (on) or disables (off) automatic load balancing between SAS phys or ports in a wide port configuration.   |
| show | maintainpdfailhistory |  | Displays the maintainpdfailhistory status.  |
| set  | maintainpdfailhistory | =[on off]  | On (enabled) – The controller keeps track of drives that have previously failed on the controller. If a previously failed drive is reattached to the controller, it is displayed as a foreign configuration and will need to be imported before it can be used.<br>Off (disabled) – The controller does <i>not</i> track failed drives. |
| set  | maintenance           | mode=[normal nodevices]  | —   |
| show | migrate               |  | Displays the migrate status.  |
| set  | migraterate           | =0 to 100  | Sets the VD configuration migration rate in percentage.   |
| show | ocr                   |  | Displays the online controller reset (ocr) status.  |
| set  | ocr                   | =[on off]  | —   |
| show | parityreadcachebypass |  | Displays the parityreadcachebypass .  |
| set  | parityreadcachebypass | =[on off]  | Sets the parityreadcachebypass .  |
| set  | patrolread            | [starttime=<yyyy/mm/dd<br>hh>] pr  | —   |
| set  | patrolread            | =[ [on mode=[auto <br>manual]]   [off]] pr   | —   |
| set  | patrolread            | delay = <value>  | —   |
| set  | patrolread pr         | See <a href="#">Patrol Read</a> .  | See <a href="#">Patrol Read</a> .   |
| show | pci                   |  | Displays the pci status.  |
| set  | pdfaileventoptions    | [detectionType=<val>]<br>[correctiveaction=<val>]<br>[errorThreshold=<val>]  | —   |
| set  | perfmode              | =<value><br>[maxflushlines=<value><br>numiostoorder=<value>]   | —   |
| set  | perfmode              | =0 : Tuned to provide the best IOPs, currently applicable to non-FastPath.<br>=1 : Tuned to provide the least latency, currently applicable to non-FastPath. | Performance tuning setting for the controller.  |
| show | personality           |  | Displays the current, supported, and requested personalities. It also displays the current behavior and respective behavior parameters.   |

| Cmd  | Property Name              | Set Command Range  | Description  |
|------|----------------------------|--|--|
| set  | personality                | = [RAID HBA JBOD]  | Sets the personality to RAID , JBOD , or HBA . If you switch personalities, you must reboot the system for the changes to take effect.   |
| set  | pi                         | = [on off]   | Enables (on ) or disables (off ) Protection Information (sometimes called data protection) support on the controller.  |
| set  | pi                         | import=[on off]  | Enables (on ) or disables (off ) import data protection drives on the controller.  |
| set  | prcorrectunconfiguredareas | = [on off]   | Corrects media errors during patrol read by writing 0s to unconfigured areas of the disk.  |
| show | preservedcache             |  | Displays the preservedcache status.  |
| set  | profile                    | profileid=<id>   | Sets the profile ID. Valid profile values (set using profileid=option ) differ for each MR controller model and firmware version; consult the applicable MegaRAID controller user guide and release notes document for supported profileid values. |
| set  | prrate                     | =0 to 100  | Sets the patrol read rate of the virtual drives in percentage.   |
| set  | rebuildrate                | =0 to 100  | Sets the rebuild rate of the drive in percentage.  |
| set  | reconrate                  | =0 to 100  | Sets the reconstruction rate for a virtual drive, as a percentage.   |
| set  | restorehotspare            | = [on off]   | Becomes a hot spare on insertion of a failed drive.  |
| set  | sasadd                     | = <xxxx><br>[devicename]<br>[methodport]                                   | —  |
| set  | sasaddhi                   | = <xxxx><br>[devicename]<br>[methodport]                                   | —  |
| set  | sasaddlow                  | = xxxxx<br>[devicename]<br>[methodport]                                    | —  |
| set  | securitykey                | =<xxxxxxxx><br>[passphrase=<xxxx>]<br>[keyid=<xxx>]<br>[VolatileKey=<xxx>] |  |
| set  | securitykey                | keyid=<xxx>  | —  |
| set  | sesmonitoring              | = [on off]   | Enables (on ) or disables (off ) SES monitoring.   |
| show | sgpioforce                 |  | Displays the sgpioforce status.  |

| Cmd  | Property Name          | Set Command Range                                    | Description  |
|------|------------------------|--|--|
| set  | SGPIOforce             | = [on off]   | Forces the SGPIO status per port only for four drives; affects high performance computing (HPC) controllers.   |
| set  | smartpollinterval      | =0 to 65535  | Sets the time for polling of SMART errors, in seconds.   |
| show | spinupdelay            |  | Displays the spinupdelay status.   |
| set  | spinupdelay            | =0 to 255  | Sets the spin-up delay between a group of drives or a set of drives, in seconds.   |
| set  | spinupdrivecount       | =0 to 255  | Sets the number of drives that are spun up at a time.  |
| show | ssdthermalpollinterval |  | Displays the ssdthermalpollinterval status.  |
| set  | SSDThermalPollInterval | = <value>  | —  |
| set  | stoponerror            | = [on off]   | Stops the MegaRAID BIOS during POST, if any errors are encountered.  |
| set  | supportssdpatrolread   | = [on off]   | Enables (on ) or disables (off ) patrol read for SSD drives.   |
| set  | supportssdpatrolread   | = [on off] pr  | —  |
| set  | termlog                | = [on off offthisboot]                               | Enables (on ) or disables (off ) the termlog to be flushed from DDR to ONFI (Open NAND Flash Interface).<br>offthisboot – Disables the termlog flushes to ONFI only for this boot. In the next boot, the termlog is enabled. |
| set  | time                   | Valid time in <yymmdd hh:mm:ss> format or systemtime | Sets the controller time to your input value or the system time (local time in 24-hour format). The upper limit for the year field is 2115.  |
| set  | tracernumber           | = <xxxx>   | —  |
| set  | updatevpd              | file= <filepath>                                     | —  |
| set  | usefdeonlyencrypt      | = [on off]   | Enables (on ) or disables (off ) FDE drive-based encryption.   |

## Controller Show Commands

StorCLI supports the following `show` commands:

```
storcli /cx show
storcli /cx show all [logfile[=filename]]
```

The detailed description for each command follows.

### storcli /cx show

This command shows the summary of the controller information. The summary includes basic controller information, foreign configurations, drive groups, virtual drives, physical drives, enclosures, and BBU information.

#### Input example:

```
storcli /c1 show
```

### **storcli /cx show all [logfile=*filename*]**

The `cx show all` command shows all of the controller information, which includes basic controller information, bus information, controller status, advanced software options, controller policies, controller defaults, controller capabilities, scheduled tasks, miscellaneous properties, foreign configurations, drive groups, virtual drives, physical drives, enclosures, and BBU information.

If you use the `logfile` option in the command syntax, the logs are written to the specified file. If you do not specify the file name, then the logs are written to the `storsas.log` file. If you do not use the `logfile` option in the command syntax, the entire log output is printed to the console.

Ensure that the filename does not contain a blank space.

#### **Input examples:**

```
storcli /c0 show all logfile=log.txt
storcli /c0 show all logfile = abc.txt
```

#### **NOTE**

The PCI information displayed as part of the `storcli /cx show` and `storcli /cx show all` commands is not applicable for the FreeBSD operating system. Hence, the PCI information fields are displayed as N/A.

## **Controller Debug Commands**

The StorCLI utility supports the following debug commands. There should be at least 20MB of free space for StorCLI to perform debug logging.

### **Syntax**

```
storcli /cx set debug type = <value> option = <value> level = [<value in hex>]
```

This command enables the firmware debug variables.

Where:

- `/cx` – Specifies the controller where `x` is the index of the controller.
- `type` – Takes the value from 0 to 128, mapping each number to a particular debug variable in the firmware.
- `option` – Takes the value from 0 to 4, where:
  - 0: NA
  - 1: SET
  - 2: CLEAR
  - 3: CLEAR ALL
  - 4: DEBUG DUMP
- `level` – Supports multiple levels of debugging in the firmware.

### **Syntax**

```
storcli /cx set debug reset all
```

This command enables the firmware debug logs from the application.

Where:

`/cx` – specifies the controller where `x` is the index of the controller.

**NOTE**

The `debug type`, the `debug value`, and the `debug level` parameters for the preceding `debug` commands are exclusively used by the Broadcom Technical Support Team to provide technical support. For assistance with these `debug` commands, contact Broadcom Technical Support representative.

## Controller Background Task Operation Commands

### Profile Management

On controllers that support profile management, the StorCLI utility supports the following profile management commands:

```
storcli /cx show profile
```

```
storcli /cx set profile profileid=<value>
```

The detailed description for each command follows:

#### **storcli /cx show profile**

This command displays the profiles supported by the controller.

**NOTE**

Only Broadcom Tri-Mode MegaRAID controllers support profiles.

**Input example:**

```
storcli /c0 show profile
```

**Output example:**

On successful execution of the command, the output will have the following fields:

- `Mode`  
The mode supported by the current controller profile (HBA, RAID, JBOD).
- `ProfileID`  
Displays the current profile ID.
- `MaxPhyDrv`  
Displays the maximum number of physical drives supported.
- `MaxLD`  
Displays the maximum number of logical drives supported.
- `MaxPCIeDev`  
Displays the maximum number of NVMe drives supported.
- `MaxAHCIDev`  
Displays the maximum number of AHCI devices supported.
- `isDefault`  
Displays if the displayed profile ID is the same as the default profile ID.
- `isCurrent`  
Displays if the displayed profile ID is the same as the current profile ID

#### **storcli /cx set profile profileid= <value>**

This command sets the specified profile ID of the controller. You need to specify the profile ID in decimal format. For the Profile ID to change, a system reboot is required.

**Input example:**

```
storcli /c0 set profile profileid=11
```

**NOTE**

The maximum number and type of PDs supported depends on the profile ID that is selected. Check the applicable MegaRAID user guide and firmware release notes for these values.

**Rebuild Rate**

```
storcli /cx set rebuildrate=<value>
storcli /cx show rebuildrate
```

The detailed description for each command follows.

**storcli /cx set rebuildrate=<value>**

This command sets the rebuild task rate of the specified controller. The input value is in percentage.

**Input example:**

```
storcli /c0 set rebuildrate=30
```

**NOTE**

A high rebuild rate slows down I/O transaction processing.

**storcli /cx show rebuildrate**

This command shows the current rebuild task rate of the specified controller in percentage.

**Input example:**

```
storcli /c1 show rebuildrate
```

**Patrol Read**

The StorCLI utility supports the following patrol read commands:

```
storcli /cx resume patrolread
storcli /cx set patrolread =[on [mode=[auto|manual]]][off]
storcli /cx set patrolread [starttime=<yyyy/mm/dd hh>] [maxconcurrentpd=<value>] [includessds=[on|off]]
[uncfgareas=[on|off]]
storcli /cx set patrolread delay=<value>
storcli /cx show patrolread
storcli /cx start patrolread
storcli /cx stop patrolread
storcli /cx pause patrolread
```

**NOTE**

A patrol read operation is scheduled for all the online physical drives of the controller.

The detailed description for each command follows.

**storcli /cx resume patrolread**

This command resumes a suspended patrol read operation.

**Input example:**

```
storcli /c0 resume patrolread
```

### **storcli /cx set patrolread=[on [mode=[auto|manual]]][off]**

This command turns the patrol read scheduling on and sets the mode of the patrol read to automatic or manual.

#### **Input example:**

```
storcli /c0 set patrolread=on mode=manual
```

### **storcli /cx set patrolread [starttime=<yyyy/mm/dd hh>] [maxconcurrentpd=<value>] [includessds=[on|off]] [uncfgareas=o[n|off]]**

This command schedules a patrol read operation. You can use the following options for patrol read command operations.

**Table 43: Set Patrol Read Input Options**

| Option          | Value Range                             | Description   |
|-----------------|---|---|
| starttime       | A valid date and hour in 24-hour format | Sets the start time in yyyy/mm/dd hh format.                                      |
| maxconcurrentpd | Valid number of physical drives present | Sets the number of physical drives that can perform patrol read at a single time. |
| includessds     | on or off                               | Includes SSDs in the patrol read operation.                                       |
| uncfgareas      | on or off                               | Includes the areas not configured in the patrol read process.                     |

#### **NOTE**

Controller time is taken as a reference for scheduling a patrol read operation.

#### **Input example:**

```
storcli /c0 set patrolread=on starttime=2012/02/21 00
```

### **storcli /cx set patrolread [delay=<value>]**

This command delays the scheduled patrol read in hours.

#### **Input example:**

```
storcli /c0 set patrolread delay=30
```

### **storcli /cx show patrolRead**

This command shows the current state of the patrol read operation along with other details, such as the **PR Mode**, **PR Execution Delay**, **PR iterations completed**, and **PR on SSD**. This command also shows the start time and the date when the patrol read operation started.

The values shown for the current state of the patrol read operation are **Ready**, **Active**, **Paused**, **Aborted**, **Stopped**, or **Unknown**.

If the state of the patrol read is active, a numeric value is shown along with the state that depicts the number of physical drives that have completed the patrol read operation. As an example, `Active 1` means that the one physical drive has completed the patrol read operation.

#### **Input example:**

```
storcli /c0 show patrolread
```

**storcli /cx start patrolread**

This command starts the patrol read operation. This command starts a patrol read operation immediately.

**Input example:**

```
storcli /c0 start patrolread
```

**storcli /cx stop patrolread**

This command stops a running patrol read operation.

**Input example:**

```
storcli /c0 stop patrolread
```

**NOTE**

You cannot resume a stopped patrol read operation.

**storcli /cx pause patrolread**

This command pauses a running patrol read operation.

**Input example:**

```
storcli /c0 pause patrolread
```

**NOTE**

You can run this command only when a patrol read operation is running on the controller.

**Consistency Check**

The StorCLI utility supports the following commands to schedule, perform, and view the status of a consistency check (CC) operation:

```
storcli /cx set consistencycheck|cc=[off|seq|conc][delay=<value>] starttime=<yyyy/mm/dd hh> [excludevd=x-y,z]
storcli /cx show cc
storcli /cx show ccrate
```

The detailed description for each command follows.

**storcli /cx set consistencycheck|cc=[off|seq|conc][delay=<value>] starttime=<yyyy/mm/dd hh> [excludevd=x-y,z]**

This command schedules a consistency check (CC) operation. You can use the following options with the consistency check command.



**Table 44: Set CC Input Options**

| Option    | Value Range   | Description  |
|-----------|---|--|
| cc        | seq – Sequential mode.<br>conc – Concurrent mode.<br>off – Turns off the consistency check. | Sets CC to either sequential mode or concurrent mode, or turns off the CC.<br>The concurrent mode slows I/O processing.  |
| delay     | -1 and any integer value.   | Delays a scheduled consistency check. The value is in hours. A value of 0 makes the CC runs continuously with no delay (in a loop).<br>Only scheduled consistency checks can be delayed.   |
| starttime | A valid date and hour in 24-hour format.  | The start time of a consistency check is yyyy/mm/dd hh format.   |
| excludevd | The range should be less than the number of virtual drives.                                 | Excludes virtual drives from the consistency checks. To exclude particular virtual drives, you can provide list of virtual drive names (Vx,Vy ... format) or the range of virtual drives that you want to exclude from a consistency check (Vx-Vy format). If this option is not specified in the command, no virtual drives are excluded. |

**Input example:**

```
storcli /c0 set CC=on starttime=2012/02/21 00 excludevd=v0-v3
```

**storcli /cx show cc**

This command shows the consistency check schedule properties for a controller.

**Input example:**

```
storcli /c0 show cc
```

**storcli /cx show ccrate**

This command checks the status of a consistency check operation. The CC rate appears in percentage.

**Input example:**

```
storcli /c0 show ccrate
```

**NOTE**

A high CC rate slows I/O processing.

**Premium Feature Key Commands**

The StorCLI utility supports the following commands for premium feature keys:

```
storcli /cx set advancedsoftwareoptions(aso) key=<value> [preview]
storcli /cx show aso
storcli /cx set aso [transfertovault][rehostcomplete][deactivatetrialkey]
storcli /cx show safeid
```

The detailed description for the command follows.

**storcli /cx set advancedsoftwareoptions(aso) key=<value> [preview]**

This command activates advanced software options (ASO) for a controller. You can use the following options with the advanced software options command.

**Table 45: Set Advanced Software Options Input Options**

| Option             | Value Range                 | Description  |
|--------------------|-----------------------------|--|
| key                | 40 alphanumeric characters. | The key to activate the ASO on the controller. After they are activated, ASOs cannot be removed from the controller. |
| deactivatetrialkey | —                           | Deactivates any currently active trial key.  |
| rehostcomplete     | —                           | Enables rehosting on the specified controller.   |
| transfertovault    | —                           | Transfers the ASO key to the vault and disables the ASO.   |

**Input example:**

```
storcli /c0 set aso key=LSI0000
```

**storcli /cx show safeid**

This command shows the Safe ID of the specified controller.

**Input example:**

```
storcli /c0 show safeid
```

**Controller Security Commands**

The StorCLI utility supports the following controller security commands:

```
storcli /cx compare securitykey < =xxxxxxxx | file=filename >
storcli /cx delete securitykey
storcli /cx set securitykey < keyid=xxx | file=filename >
storcli /cx set securitykey < =xxxxxxxx [passphrase=xxxx] [keyid=xxx] [VolatileKey=on|off] | file=filename >
storcli /cx set securitykey < =xxxxxxxx oldsecuritykey=xxxxxxxx [passphrase=xxxx] [keyid=xxx] [VolatileKey=on|off] | file=filename >
storcli /cx [/ex]/sx set security=on
```

The detailed description for each command follows.

**storcli /cx show securitykey keyid**

This command shows the security key on the controller.

**Input example:**

```
storcli /c0 show securityKey keyid
```

**storcli /cx compare securitykey < =xxxxxxxx | file=filename >**

This command compares and verifies the security key of the controller.

**storcli /cx delete securitykey**

This command deletes the security key of the controller.

**Input example:**

```
storcli /c0 delete securitykey
```

**storcli /cx set securitykey < keyid=xxx | file=filename >**

This command sets the key ID for the controller. The key ID is unique for every controller.

**storcli /cx set securitykey < =xxxxxxxx [passphrase=xxxx] [keyid=xxx] [VolatileKey=on|off] | file=filename >**

This command sets the security key for the controller. You can use the following options with the `set security key` command.

**Table 46: Set Security Key Input Options**

| Option     | Value Range  | Description  |
|------------|--|--|
| passphrase | Should have a combination of numbers, uppercase letters, lowercase letters, and special characters.<br>Minimum of 8 characters and maximum of 32 characters. | A string that is linked to the controller and is used in the next bootup to encrypt the lock key. If <code>passphrase</code> is not set, the controller generates it by default. |
| keyid      | —  | The unique ID set for different controllers to help you specify a passphrase to a specific controller.   |

**Input example:**

```
storcli /c0 set securitykey=Lsi@12345 passphrase=Lsi@123456 keyid=1
```

**storcli /cx set securitykey < =xxxxxxxx oldsecuritykey=xxxxxxxx [passphrase=xxxx] [keyid=xxx] [VolatileKey=on|off] | file=filename >**

This command changes the security key for the controller.

**Input example:**

```
storcli /c0 set securitykey=Lsi@12345 oldsecuritykey=pass123 passphrase=Lsi@123456 keyid=1
```

**storcli /cx[/ex]/sx set security=on**

This command sets the security on the FDE-capable JBOD drive.

**Input example:**

```
storcli /c0/e0/s0 set security=on
```

**Flashing Controller Firmware Command while the Firmware Is Operational****NOTE**

The Flashing Controller Firmware Command while the Firmware Is Operational is not supported in Embedded MegaRAID.

**storcli /cx download file=<filepath> [fwtype=<value>] [nosigchk] [noverchk] [resetnow] [force] [forceclose]**

This command flashes the firmware with the ROM file to the specified adapter from the given file location (<filepath> is the absolute file path).

You can use the following options in the table to flash the firmware.

**Table 47: Flashing Controller Firmware Input Options**

| Option       | Value Range                                    | Description  |
|--------------|--|--|
| file         | filepath                                       | The absolute file path.  |
| nosigchk     | —  | The application flashes the firmware even if the check word on the file does not match the required check word for the controller.<br>You can damage the controller if a corrupted image is flashed using this option. |
| noverchk     | —  | The application flashes the controller firmware without checking the version of the firmware image. This option must be provided between phases to the downgrade firmware.   |
| fwtype       | 0 : Application<br>1 : TMMC<br>2 : GG-Enhanced | The firmware type to be downloaded. The application downloads the firmware for the controller. The TMMC downloads the firmware for the TMMC battery only.<br>Default is 0 (application).                               |
| resetnow     | —  | Invokes online firmware update on the controller; you do not need to reboot the controller to make the update effective. The <code>resetnow</code> option is not supported in the UEFI mode.                           |
| [forceclose] | —  | Used for calling the flash close before start of the FW download process.  |

**Input example:**

```
storcli /c1 download file=c:\app.rom fwtype=0
```

**Flashing Controller Firmware Command while the Firmware Is Nonoperational****NOTE**

This command is only valid for flashing SAS HBAs, not MegaRAID controllers. This command should be run only under the direction of FAE or Broadcom support. The support team will provide the files and guidance required.

**storcli /cx download completeflash fileone=<IT boot loader image> filetwo=<firmware image>**

This command downloads the complete flash image on a nonoperational or an empty controller by performing host boot. This command takes two files as arguments:

- `fileone` – A valid `Itboot` loader image with which host boot is performed on the controller.
- `filetwo` – A valid firmware package that is flashed on the controller.

**Input example:**

```
storcli /c1 download completeflash fileone=<Itbootloaderimage> filetwo=<FW image>
```

## Erase Command

### **storcli /cx erase all [excludemfg] [file=filename]**

This command erases the complete controller flash region but retains the manufacturing data region.

#### **Input example:**

```
storcli /c0 erase all excludemfg
```

## Controller Cache Command

The following command flushes the controller cache.

### **storcli /cx flush|flushcache**

This command flushes the controller cache.

#### **Input example:**

```
storcli /c0 flushcache
```

## Controller Configuration Commands

The following commands work with the controller configuration.

### **storcli /cx set config file=<filename>**

This command obtains the controller configuration and its properties from the specified file.

#### **NOTE**

You cannot load a saved configuration over an existing configuration when there are existing virtual drives. To load a saved configuration, you must first clear the existing configuration on the target controller.

Save and restore functionality is intended to restore the saved configuration within the scope of the controller. Preserving the operating system disk labels is beyond the scope of the save and restore feature. On previous generation products, the selection of target IDs by firmware may result in the operating system restoring the same disk labels for RAID volumes on certain systems, but with SAS38xx and SAS39xx controllers target ID range allocated for RAID volumes does not ensure any disk label ordering at the operating system level.

#### **Input example:**

```
storcli /c0 set config file=log.txt
```

### **storcli /cx get config file=<filename>**

This command saves the controller configuration and its properties to the specified file.

#### **Input example:**

```
storcli /c0 get config file=log.txt
```

## SnapDump Commands

Snapshot dumping is a mechanism of saving a snapshot of the debug information at fault time. The intention is to collect all required information to be able to root-cause the defect at the first instance of defect detection. The SnapDump command makes sure that multiple defect reproductions are not required to debug.

## Windows Driver RTTrace

Use the following commands to collect the RTTrace files:

```
storcli /cx get snapdump id=<snapDumpId> file=<filename>.zip
storcli get rttddump
```

Detailed descriptions of each command follows.

### **storcli /cx get snapdump id=<snapDumpId> file=<filename>.zip**

This is the SnapDump zip filename.

### **storcli get rttddump**

This command retrieves the RTT file directly from the driver.

#### **Input example:**

```
storcli get rttddump
```

## SnapDump Support Commands

The StorCLI utility checks the SnapDump support bit and allows the user to `show` or `set` the controller on-off property for SnapDump. Using the support command, you can enable or disable the SnapDump feature on the controller using the commands that follow.

```
storcli /cx set snapdump state=on|off
storcli /cx show snapdump
```

Detailed descriptions of each command follows.

### **storcli /cx set snapdump state=on|off**

This command enables or disables the SnapDump feature on the controller.

#### **Input example:**

```
storcli /c0 set snapdump state=on
```

### **storcli /cx show snapdump**

The `show snapdump` command displays whether the SnapDump feature is enabled or not. If enabled, a detailed list of SnapDump properties is displayed, such as the number of dumps that firmware can save and delay for OCR. This command also displays the list of SnapDump files that the firmware currently has, the sizes of the files, and the time the SnapDump is generated, and whether it is an on-demand SnapDump or auto-generated one based on the firmware capability.

#### **Input example:**

```
storcli /c0 show snapdump
```

## Modifying SnapDump Properties Command

With the Snapdump feature enabled, the user can set the various other properties of the SnapDump, such as the number of dumps that firmware can save and delay for OCR.

Use the following commands to modify the Snapdump properties.

```
storcli /cx set snapdump [savecount=<value> | delayocr=<value>]
storcli /cx set snapdump preboottrace=on|off
```

### **storcli /cx set snapdump [savecount=<value> | delayocr=<value>]**

Where:

- `savecount` –
  - For the SAS3516 controller, `savecount` sets the number of times the SnapDump will persist in firmware, in case the user does not collect the data.
  - For all other controllers, `savecount` is no longer used and is displayed as N/A .
- `delayocr` – Delays the driver trigger for SnapDump before it initiates OCR; the delay is in seconds.

#### **Input example:**

```
storcli /c0 set snapdump [savecount=<value>] [delayocr=<value>]
```

### **storcli /cx set snapdump preboottrace=on|off**

This command switches the preboot trace on and off.

#### **Input example:**

```
storcli /c0 set snapdump preboottrace=on
```

## **Retrieving SnapDump Data Commands**

The StorCLI utility supports the SnapDump commands that follow.

```
storcli /cx get snapdump ID=<val> file=<filename>
storcli /cx get snapdump ID=all
storcli /cx get snapdump
```

Detailed descriptions for each command follows.

### **storcli /cx get snapdump ID=<val> file=<filename>**

To download a specific SnapDump ID, you must read the ID from the firmware. The StorCLI utility keeps writing the data to the file, truncating the file and adding new information.

#### **Input example:**

```
storcli /c0 get snapdump ID=<val> file=<filename>
```

Where:

- `val` – Specifies the SnapDump ID number.
- `filename` – Specifies the file, in zip format, in which to write the SnapDump data

### **storcli /cx get snapdump ID=all**

To download all SnapDump IDs that are present on the controller, use the `all` option.

With this command, the file name is framed by the CLI in a specific format as shown:

```
snapdump_c#(controllerid)_id#(snapdump_id)_year_month_day_hour_min_sec.zip
```

#### **Input example:**

```
storcli /c0 get snapdump ID=all
```

### **storcli /cx get snapdump**

To generate and download all SnapDump data when the user has not provided ID, an on-Demand request to the controller is generated and downloads all the SnapDump data present on the controller. With this command, the file name is framed by the CLI in a specific format as shown:

```
.snapdump_c#(controllerid)_id#(snapdump_id)_year_month_day_hour_min_sec.zip
```

#### **Input example:**

```
storcli /c0 get snapdump
```

## **Clearing SnapDump Data Commands**

The StorCLI utility is able to delete all SnapDump data from the firmware.

#### **NOTE**

Save all previous SnapDumps, as personality changes and flashing a new firmware package discards all SnapDumps on both DDR and flash.

```
storcli /cx delete snapdump [force]
```

A detailed description for this command follows.

### **storcli /cx delete snapdump [force]**

To clear the SnapDump data from the firmware, use this command application to request the firmware to clear/delete the SnapDump data. If the `force` option is not specified, the StorCLI utility warns the user that this command will clear the SnapDump data and prompt the user to use the `force` option. When the `force` option is specified, the CLI requests the firmware to clear all the SnapDump data.

#### **Input example:**

```
storcli /c0 delete snapdump [force]
```

## **SPDM Commands**

StorCLI SPDM commands display the security protocol details and allow users to configure the security protocol on a controller. The SPDM commands allow users to view the security protocol version, slot status, export and import security protocol, and invalidate a slot.

```
storcli /cx show
storcli /cx show all
storcli /cx show security spdm slotgroup=xx slot=yy
storcli /cx export security spdm slotgroup=0 slot=1 subject=subjectname file=filename
storcli /cx import security spdm slotgroup=xx slot=yy file=filename [seal]
storcli /cx set security spdm slotgroup=xx slot=yy invalidate
storcli /cx get security spdm slotgroup=xx slot=yy file=filename
```

### **storcli /cx show**

This command displays the security protocol support and security protocol properties detailed information.

### **storcli /cx show all**

This command displays the security protocol information.



**storcli /cx show security spdm slotgroup=xx slot=yy**

This command reports the status of the certificate slot chain.

**storcli /cx export security spdm slotgroup=0 slot=x1 subject=subjectname file=filename**

This command requests the firmware create a certificate signing request and return it. The firmware returns an error if the requested slot is already populated and sealed, if the slot group is invalid, or if the firmware cannot support the requested BaseAsymAlgo and BaseHashAlgo fields selected.

**storcli /cx import security spdm slotgroup=xx slot=yy file=filename [seal]**

This command supplies a certificate chain from the application to the firmware. The firmware returns an error if the requested slot and slot group fields do not match an open session.

**storcli /cx set security spdm slotgroup=xx slot=yy invalidate**

This command invalidates the certificate chain storage slot.

**storcli /cx get security spdm slotgroup=xx slot=yy file=filename**

This command reads the certificate from the chain storage slot and allows the users to validate a downloaded certificate chain.

## Temperature Command

The StorCLI utility supports the following temperature command:

```
storcli /cx show temperature
```

The detailed description for the command follows.

**storcli /cx show temperature**

This command displays the controllers temperature information if the respective hardware is present.

**Input example:**

```
storcli /c0 show temperature
```

## Diagnostic Command

The StorCLI utility supports the following diagnostic command:

```
storcli /cx start diag duration=<val>
```

**IMPORTANT**

The following diagnostic command is not supported for VMware EXSi.

The detailed description for the command follows.

**storcli /cx start diag duration=<val>**

This command runs the diagnostic self-check on the controller for the specified time period in seconds.

**Input example:**

```
storcli /c0 start diag duration=5
```

**NOTE**

Ensure no IOs are running while executing this command.

**Drive Commands**

This section describes the drive commands, which provide information and perform actions related to physical drives. The following table describes frequently used drive commands.

**Table 48: Physical Drives Commands Quick Reference Table**

| Commands | Value Range   | Description                      |
|----------|---|----------------------------------|
| set      | missing : Sets the drive status as missing.<br>good : Sets the drive status to unconfigured good.<br>offline : Sets the drive status to offline.<br>online : Sets the drive status to online. | Sets physical drive properties.  |
| show     | all : Shows all properties of the physical drive.<br>See <a href="#">Drive Show Commands</a> .  | Shows virtual drive information. |

**Drive Show Commands**

The StorCLI utility supports the following drive `show` commands:

```
storcli /cx[/ex]/sx show
storcli /cx[/eall]/sall show
storcli /cx[/ex]/sx|sall show all
storcli /cx[/ex]/sx show smart
```

**NOTE**

If enclosures are used to connect physical drives to the controller, specify the enclosure ID in the command. If no enclosures are used, you must specify the controller ID and the slot ID.

The detailed description for each command follows.

**storcli /cx[/ex]/sx show**

This command shows the summary of the physical drive for a specified slot in the controller.

**Input example:**

```
storcli /c0/e25/s4 show
```

**storcli /cx[/eall]/sall show**

This command shows the summary information for all the enclosures and physical drives connected to the controller.

**Input example:**

```
storcli /c0/eall/sall show
```

**storcli /cx[/ex]/sx|sall show all**

This command shows all information of a physical drive for the specified slot in the controller. If you use the `all` option, the command shows information for all slots on the controller. `x` stands for a number, a list of numbers, a range of numbers, or all numbers.

This command also shows the NCQ (Native Command Queuing) status (**Enabled**, **Disabled**, or **N/A**), which is applicable only to SATA drives. If the controller to which the SATA drive is connected supports NCQ, and NCQ is enabled on the SATA drive, the status is shown as **Enabled**; otherwise, it is shown as **Disabled**. If NCQ is not a supported drive operation on the controller, the status is shown as **N/A**.

**Input examples:**

```
storcli /c0/e25/s0-3 show all
storcli /c0/e25/sall show all
```

**NOTE**

The `storcli /cx/sx show all` command shows drive information for the drive specified.

**storcli /cx/[ex]/sx show smart**

This command displays the SMART information of a SATA drive.

**Input example:**

```
storcli /c0/e25/s4 show smart
```

**Missing Drives Commands**

The StorCLI utility supports the following commands to mark and replace missing physical drives with the specified Unconfigured Good drive:

```
storcli /cx[/ex]/sx set missing
storcli /cx[/ex]/sx insert dg=A array=B row=C
storcli /cx[/ex]/sx set offline
storcli /cx/dall
```

The detailed description for each command follows.

**NOTE**

To set a drive that is part of an array as `missing`, first set it as `offline`. After the drive is set to `offline`, you can then set the drive to `missing`.

**storcli /cx/[ex]/sx set missing**

This command marks a drive as missing.

**Input example:**

```
storcli /c0/s4 set missing
```

**storcli /cx/[ex]/sx insert dg=A array=B row=C**

This command replaces the configured drive that is identified as missing, and then starts an automatic rebuild.

**Input example:**

```
storcli /c0/e25/s3 insert dg=0 array=2 row=1
```

**storcli /cx/[ex]/sx set offline**

This command marks the drive in an array as offline.

**Input example:**

```
storcli /c0/s4 set offline
```

### **storcli /cx/dall**

This command finds the missing drives.

## **Set Drive State Commands**

The StorCLI utility supports the following commands to set the status of physical drives:

```
storcli /cx[/ex]/sx set jbod
storcli /cx[/ex]/sx set good [force]
storcli /cx[/ex]/sx set offline
storcli /cx[/ex]/sx set online
storcli /cx[/ex]/sx set missing
storcli /cx[/ex]/sx set bootdrive=<on|off>
```

The detailed description for each command follows.

### **storcli /cx[/ex]/sx set jbod**

This command sets the drive state to JBOD.

#### **Input example:**

```
storcli /c0/e25/s4 set jbod
```

### **storcli /cx[/ex]/sx set good [force]**

This command changes the drive state to unconfigured good.

#### **Input example:**

```
storcli /c0/e25/s4 set good
```

#### **NOTE**

If the drive has an operating system or a file system on it, the StorCLI utility displays an error message and fails the conversion. If you want to proceed with the conversion, use the *force* option as shown in the following command.

#### **Input example:**

```
storcli /c0/e25/s4 set good [force]
```

### **storcli /cx[/ex]/sx set offline**

This command changes the drive state to offline.

#### **Input example:**

```
storcli /c0/e25/s4 set offline
```

#### **NOTE**

Setting a drive to offline may trigger a hot spare to be commissioned. When this occurs, the offline drive transitions to Unconfigured Good. This transition makes the drive eligible for further use.

**storcli /cx[/ex]/sx set online**

This command changes the drive state to online.

**Input example:**

```
storcli /c0/e25/s4 set online
```

**storcli /cx[/ex]/sx set missing**

This command marks a drive as missing.

**Input example:**

```
storcli /c0/e25/s4 set missing
```

**storcli /cx[/ex]/sx set bootdrive=<on|off>**

This command sets or unsets a physical drive as a boot drive.

**Input example:**

```
storcli /c0/e25/s4 set bootdrive=on
```

## Drive Initialization Commands

When you initialize drives, all the data from the drives is cleared. The StorCLI utility supports the following commands to initialize drives:

```
storcli /cx[/ex]/sx show initialization
storcli /cx[/ex]/sx start initialization
storcli /cx[/ex]/sx stop initialization
```

The detailed description for each command follows.

**storcli /cx[/ex]/sx show initialization**

This command shows the current progress of the initialization progress in percentage.

The estimated time (in minutes) left to complete the operation is also shown.

**Input example:**

```
storcli /c0/e25/s4 show initialization
```

**storcli /cx[/ex]/sx start initialization**

This command starts the initialization process on a drive.

**Input example:**

```
storcli /c0/e25/s4 start initialization
```

**storcli /cx[/ex]/sx stop initialization**

This command stops an initialization process running on the specified drive. A stopped initialization process cannot be resumed.

**Input example:**

```
storcli /c0/e25/s4 stop initialization
```

## NVMe Drive Commands

The StorCLI utility supports the following NVMe drive commands.

```
storcli /cx show failedNvmeDevices
storcli /cx[/ex]/sx show repair
storcli /cx[/ex]/sx start repair [force]
storcli /cx[/ex]/sx stop repair
```

The following commands are the currently supported NVMe Opcode commands for the MR firmware.

**Table 49: NVMe Opcode Commands**

| NVMe Command                            | Opcode |
|---|--------|
| NVME_ADMIN_CMD_OPCODE_GET_LOG_PAGE      | 0x02   |
| NVME_ADMIN_CMD_OPCODE_CHANGE_DEFINITION | 0xCD   |
| NVME_ADMIN_CMD_OPCODE_IDENTIFY          | 0x06   |
| NVME_ADMIN_CMD_OPCODE_SET_FEATURES      | 0x09   |
| NVME_ADMIN_CMD_OPCODE_GET_FEATURES      | 0x0A   |
| NVME_ADMIN_CMD_OPCODE_DEVICE_SELF_TEST  | 0x14   |
| NVME_ADMIN_CMD_OPCODE_MI_SEND           | 0x1D   |
| NVME_ADMIN_CMD_OPCODE_MI_RECEIVE        | 0x1E   |

### **storcli /cx show failedNvmeDevices**

This command displays the list of initialization failed NVMe drives.

#### **Syntax**

```
storcli /cx show failedNvmeDevices
```

### **storcli /cx[/ex]/sx show repair**

This command displays the NVMe drive repair status.

#### **Syntax**

```
storcli /cx[/ex]/sx show repair
```

### **storcli /cx[/ex]/sx start repair [force]**

This command starts the repair process on the requested drive.

#### **Syntax**

```
storcli /cx[/ex]/sx start repair [force]
```

**Force** – Deletes all data present on the drive.

### **`storcli /cx[/ex]/sx stop repair`**

This command stops the repair of the requested NVMe drive.

#### **Syntax**

```
storcli /cx[/ex]/sx stop repair
```

#### **NOTE**

If NVMe failed drives are detected, the controller state will move to `Need Attention`.

## **Configuration Scenarios**

You can use the SAS RAID controllers in three scenarios:

- **Low-end, Internal SATA Configurations**

In these configurations, use the RAID controller as a high-end SATA II-compatible controller that connects up to eight disks. These configurations are mostly for low-end or entry servers. Enclosure management is provided through out-of-band Inter-IC (I<sup>2</sup>C) bus. Side bands of both types of internal SAS connectors support the SFF-8485 (SGPIO) interface.

- **Midrange Internal SAS Configurations**

These configurations are like the internal SATA configurations but with high-end disks. These configurations are more suitable for low-range to midrange servers.

- **High-end External SAS/SATA Configurations**

These configurations are for both internal connectivity and external connectivity, using SATA drives, SAS drives, or both. External enclosure management is supported through in-band, SCSI-enclosed storage. The configuration must support STP and SMP.


- **NVMe Configurations**

These configurations are for internal connectivity only, using NVMe, either direct connect or switch attached. NVMe configurations are suitable for low latency and high performance environments.

The following figure shows a direct-connect configuration. The I<sup>2</sup>C interface communicates with peripherals. The external memory bus provides a 32-bit memory bus, parity checking, and chip select signals for pipelined burst static random access memory (PBSRAM), nonvolatile static random access memory (NVSRAM), and Flash ROM.


#### **NOTE**

The external memory bus is 32-bit for the SAS 8704ELP and the SAS 8708ELP, and 64-bit for the SAS 8708EM2, the SAS 8880EM2, and the SAS 8888ELP.

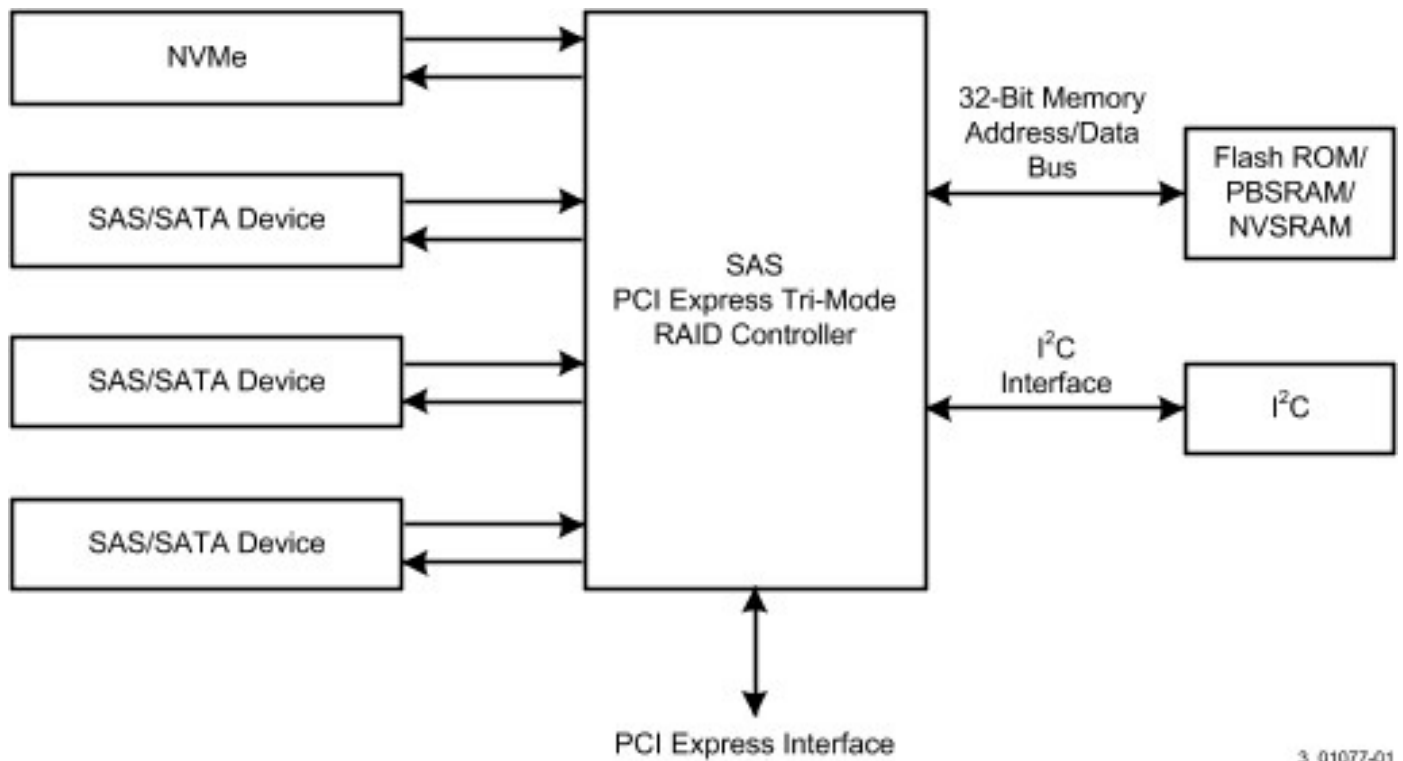**Figure 76: Example of SAS Direct-Connect Application**

The following figure shows an example of a SAS RAID controller configured with an LSISASx12 expander that is connected to SAS disks, SATA II disks, or both.

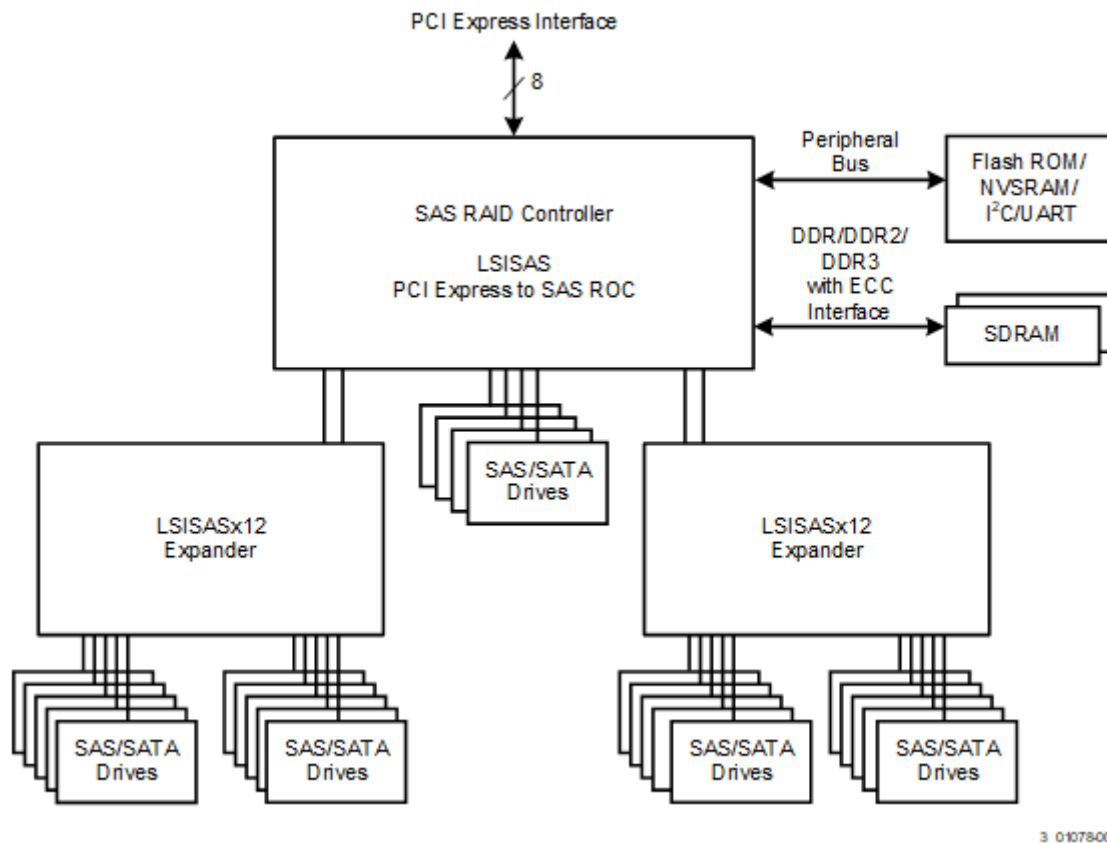

**Figure 77: Example of SAS RAID Controller Configured with an LSISASx12 Expander**

## Drive Firmware Download Commands

The StorCLI utility supports the following commands to download the drive firmware.

```
storcli /cx[/ex]/sx download src=filepath [satabridge] [mode= 5|7]
storcli /cx[/ex]/sx download src=<filepath> mode= E offline [activatenow [delay=<value>]]
storcli /cx[/ex]/sx download mode=F offline [delay=<value>]
```

### **storcli /cx[/ex]/sx download src=filepath [satabridge] [mode= 5|7]**

This command flashes the drive firmware with the specified file.

The `satabridge` option lets you download the SATA bridge firmware in online mode.

The `mode` options specify the SCSI write buffer mode. The description follows:

- 5 – The entire drive firmware file is downloaded at once.
- 7 – The drive firmware file is downloaded in chunks of 32 KB.

#### **NOTE**

The default mode is 7 .

#### **Input example:**

```
storcli /c0/e56/s1 download src=c:\file1.bin
storcli /c0/e56/s1 download src=c:\file1.bin mode=5
```

**`storcli /cx[/ex]/sx download src=<filepath> mode= E offline [activatenow [delay=<value>]]`**

**`storcli /cx[/ex]/sx download mode=F offline [delay=<value>]`**

These commands support the drive firmware download using Mode E and Mode F. The mode options specify the SCSI WRITE BUFFER mode.

The description follows:

- Mode E – Downloads the microcode and allows you to issue this command for multiple devices. You can only use this in an offline mode.
- Mode F – Activates the deferred microcode and allows you to issue this command to all devices in a safe manner. You can only use this in an offline mode. You cannot issue this command before issuing the Mode E command. The default delay time is 15 seconds. You can specify any delay time between 1 to 300 seconds.

#### NOTE

You can download as well as activate the drive firmware by executing the `activatenow` command in the same command line. You can also specify the delay time, but the delay time specified by you is applicable only for activation and not for downloading the drive firmware.

For NVMe drive firmware updates, Mode 5 and Mode 7 will not work on lower MDTs drives. Use Mode E for NVMe drive firmware updates if the update fails with Mode 5 or Mode 7.

Input examples for Mode E :

```
storcli /c0/e0/s0 download src=file.rom mode=E offline
```

Download successful.

```
storcli /c0/e0/sall download src=file.rom mode=E offline
```

Downloaded sequentially on the drives.

Input examples for Mode F :

```
storcli /c0/e0/sall download mode=F offline
```

Activation of the microcode successful.

```
storcli /c0/e0/sall download mode=F offline delay=15
```

Activation completed with a 15-second delay.

## Drive Firmware Update through Parallel HDD Microcode

MegaRAID provides an interface to update the drive firmware in both online and offline modes through host applications, such as StorCLI. Using the parallel HDD microcode update feature, firmware updates can be performed simultaneously on multiple HDDs of the same family in an online mode. Also, the parallel HDD microcode update overcomes the VD tolerance level. You can use the parallel HDD microcode update feature to update up to eight devices at the same time. It is recommended to perform the parallel HDD microcode update in system maintenance mode.

The parallel HDD microcode update is not supported in the following scenarios:

- If a physical drive firmware download is already in progress on any physical drive.
- If Pinned Cache is present on the controller.
- Online firmware upgrade is not supported if `FEATURE SET` value is enabled for `DEFAULT` and disabled for `LOW COST`.

### Command Usage Examples

```
storcli /c0/ex/sall download src=drv_fw.lod [mode=5/7] [parallel] [force]
```

```
storcli /c1/e1/sall download src=drivefirmware.lod mode=5 parallel
```

Where:

- `c` – Controller number
- `x` – The index of either the controller or the enclosure
- `e` – Enclosure number
- `s` – Slot number
- `sall` – All drives
- `parallel` – Indicates firmware update is performed in parallel mode
- `force` – Indicates whether you want to force this operation

### **storcli /c0/e1/sall download status**

This command provides the current firmware download status on the specified drive list.

## **Locate Drives Commands**

The StorCLI utility supports the following commands to locate a drive and activate the physical disk activity LED:

```
storcli /cx[/ex]/sx start locate
storcli /cx[/ex]/sx stop locate
```

The detailed description for each command follows.

### **storcli /cx[/ex]/sx start locate**

This command locates a drive and activates the drive's LED.

#### **Input example:**

```
storcli /c0/e25/s4 start locate
```

### **storcli /cx[/ex]/sx stop locate**

This command stops a locate operation and deactivates the drive's LED.

#### **Input example:**

```
storcli /c0/e25/s4 stop locate
```

## **Prepare to Remove Drives Commands**

The StorCLI utility supports the following commands to prepare the physical drive for removal:

```
storcli /cx/ex/sx spindown
storcli /cx/ex/sx spinup
```

The detailed description for each command follows.

### **storcli /cx/ex/sx spindown**

This command spins down an unconfigured drive and prepares it for removal. The drive state is unaffiliated, and it is marked offline.

#### **Input example:**

```
storcli /cx/e25/s4 spindown
```

### **storcli /cx/ex/sx spinup**

This command spins up a spun-down drive and the drive state is unconfigured good.

#### **Input example:**

```
storcli /c0/e25/s4 spinup
```

#### **NOTE**

The `spinup` command works on a physical drive only if the user had previously issued a `spindown` command on the same physical drive.

## **Drive Security Command**

The StorCLI utility supports the following drive security commands:

```
storcli /cx[/ex]/sx show securitykey keyid
```

### **storcli /cx[/ex]/sx show securitykey keyid**

This command shows the security key for secured physical drives.

#### **Input example:**

```
storcli /c0/[e25]/s4 show SecurityKey keyid
```

### **storcli /cx[/ex]/sx set security = on**

This command sets the security on the FDE-capable JBOD drive.

#### **Input example:**

```
storcli /c0/[e25]/s4 set security = on
```

## **Drive Secure Erase/Cryptographic Erase Commands**

The StorCLI utility supports the following drive erase commands:

```
storcli /cx[/ex]/sx secureerase [force]
```

```
storcli /cx[/ex]/sx show erase
```

```
storcli /cx[/ex]/sx start erase [simple|normal|crypto|thorough] [patternA=<value1>] [patternB=<value2>]
```

```
storcli /cx[/ex]/sx stop erase
```

The detailed description for each command follows.

### **storcli /cx[/ex]/sx secureerase [force]**

This command erases the drive's security configuration and securely erases data on a drive. You can use the `force` option as a confirmation to erase the data on the drive and the security information.

#### **Input example:**

```
storcli /c0/e25/s1 secureerase
```

**NOTE**

This command deletes data on the drive and the security configuration, and this data is no longer accessible. This command is used for SED drives only.

**storcli /cx[/ex]/sx show erase**

This command provides the status of erase operation on non-SED drives.

**Input example:**

```
storcli /c0/e25/s1 show erase
```

**storcli /cx[/ex]/sx start erase [simple|normal|thorough|crypto|standard] [patternA=<val1>] [patternB=<val2>]****NOTE**

The erase option is supported only on UG drives and is not supported on JBOD drives.

This command securely erases non-SED drives. The drive is written with erase patterns to make sure that the data is securely erased. You can use the following options with the `start erase` command.

**Table 50: Drive Erase Command Options**

| Options  | Value Range  | Description                             |
|----------|--|---|
| erase    | simple : Single pass, single pattern write<br>normal : Three pass, three pattern write<br>thorough : Nine pass, repeats the normal write three times<br>crypto : Performs cryptographic erase for SSD drives | Secures erase type.                     |
| patternA | 8-bit value  | Erases pattern A to overwrite the data. |
| patternB | 8-bit value  | Erases pattern B to overwrite the data. |

**Input example:**

```
storcli /c0/e25/s1 start erase thorough patternA=10010011 patternB=11110000
```

**Drive Sanitize Command**

The StorCLI utility supports the following drive sanitize commands:

```
storcli /cx[/ex]/sx start sanitize [cryptoerase| overwrite| blockErase ] [ause]
```

```
storcli /cx[/ex]/sx show sanitize
```

**storcli /cx[/ex]/sx start sanitize [cryptoerase| overwrite| blockErase ] [ause]**

This command lets you erase the data that resides on a physical drive. You can use the following sanitize-type arguments with the `start sanitize` command.

`cryptoerase` – This argument corrupts the encryption keys that may have been present on the drive.

`overwrite` – This argument overwrites all zeros to the data that may be present on the existing drives.

`blockerase` – This argument allows the drive to clear or erase the existing data drive.

`ause` – If, for some reason, the sanitize operation fails, the system tries to bring the drive out of the failure mode irrespective of whether the Allow Unrestricted Sanitize Exit (AUSE) argument is specified or not. However, if this argument is specified, and if the system succeeds in bringing the drive out of the failure mode, the drive is then returned as an

Unconfigured Good drive. If you do not specify the `ause` argument, and if the sanitize operation fails, the system places the drive in an Unconfigured Bad state.

### Example

```
storcli /c0/e0/s4 start sanitize overwrite
```

### **storcli /cx/[ex]/sx show sanitize**

This command displays the progress of the sanitize operation in percentage.

### Example:

```
storcli /c0/e0/s4 show sanitize
```

## Rebuild Drives Commands

The following commands rebuild drives in the StorCLI utility:

```
storcli /cx/[ex]/sx pause rebuild
storcli /cx/[ex]/sx resume rebuild
storcli /cx/[ex]/sx show rebuild
storcli /cx/[ex]/sx start rebuild
storcli /cx/[ex]/sx stop rebuild
```

### NOTE

If enclosures are used to connect physical drives to the controller, specify the enclosure ID in the command.

The detailed description for each command follows.

### **storcli /cx/[ex]/sx pause rebuild**

This command pauses an ongoing rebuild process. You can run this command only for a drive that is currently rebuilding.

### Input example:

```
storcli /c0/s4 pause rebuild
```

### **storcli /cx/[ex]/sx resume rebuild**

This command resumes a paused rebuild process. You can run this command only when a paused rebuild process for the drive exists.

### Input example:

```
storcli /c0/s4 resume rebuild
```

### **storcli /cx/[ex]/sx show rebuild**

This command shows the progress of the rebuild process in percentage.

The estimated time (in minutes) left to complete the operation is also shown.

### Input example:

```
storcli /c0/s4 show rebuild
```

**storcli /cx[/ex]/sx start rebuild**

This command starts a Rebuild operation for a drive.

**Input example:**

```
storcli /c0/s4 start rebuild
```

**storcli /cx[/ex]/sx stop rebuild**

This command stops a Rebuild operation. You can run this command only for a drive that is currently rebuilt.

**Input example:**

```
storcli /c0/s4/e4 stop rebuild
```

## Drive Copyback Commands

The StorCLI utility supports the following commands for drive copyback:

```
storcli /cx[/ex]/sx pause copyback
storcli /cx[/ex]/sx resume copyback
storcli /cx show copyback
storcli /cx[/ex]/sx start copyback target=eid:sid
storcli /cx[/ex]/sx stop copyback
storcli /cx set copyback=on type=ctrl
storcli /cx set copyback=on type=smarthdd
storcli /cx set copyback=on type=ssd
storcli /cx set copyback=on type=all
```

The detailed description for each command follows.

**NOTE**

In the copyback commands, *cx[/ex]/sx* indicates the source drive and *eid:sid* indicates the target drive.

**NOTE**

When a copyback operation is enabled, the alarm continues to beep even after a rebuild is complete; the alarm stops beeping only when the copyback operation is completed.

**storcli /cx[/ex]/sx pause copyback**

This command pauses a copyback operation. You can run this command only when a copyback operation is running.

**Input example:**

```
storcli /c0/e25/s4 pause copyback
```

**storcli /cx[/ex]/sx resume copyback**

This command resumes a paused copyback operation. You can run this command only when a paused copyback process exists for the drive.

**Input example:**

```
storcli /c0/e25/s4 resume copyback
```

**storcli /cx show copyback**

This command shows the progress of the copyback operation in percentage.

The estimated time (in minutes) left to complete the operation is also shown.

**Input example:**

```
storcli /c0/e25/s4 show copyback
```

**storcli /cx[/ex]/sx start copyback target=eid:sid**

This command starts a copyback operation for a drive and is useful when replacing a drive in a VD. Using this command is preferred over other methods because the VD does not degrade.

**Input example:**

```
storcli /c0/e25/s4 start copyback target=25:8
```

**storcli /cx[/ex]/sx stop copyback**

This command stops a copyback operation. You can run this command only on drives that have the copyback operation running.

**Input example:**

```
storcli /c0/e25/s4 stop copyback
```

**NOTE**

A stopped rebuild process cannot be resumed.

**storcli /cx set copyback=on type=ctrl**

This command sets a control copyback operation.

**Input example:**

```
storcli /c0/e25/s4 set copyback type=ctrl
```

**storcli /cx set copyback=on type=smarthdd**

This command sets a smart HDD copyback operation.

**Input example:**

```
storcli /c0/e25/s4 show copyback type=smarthdd
```

**storcli /cx set copyback=on type=smartssd**

This command sets a smart SSD copyback operation.

**Input example:**

```
storcli /c0/e25/s4 show copyback type=smartssd
```

**storcli /cx set copyback=on type=all**

This command sets a copyback operation.

**Input example:**

```
storcli /c0/e25/s4 show copyback type=all
```



## Hot Spare Drive Commands

The following commands create and delete hot spare drives:

```
storcli /cx[/ex]/sx add hotsparedrive
{dgs=<n|0,1,2...>} [enclaffinity] [nonrevertible]
storcli /cx[/ex]/sx delete hotsparedrive
```

### NOTE

If enclosures are connected to the physical drives of the controller, specify the enclosure ID in the command.

The detailed description for each command follows.

### **storcli /cx[/ex]/sx add hotsparedrive [{dgs=<n|0,1,2...>}] [enclaffinity][nonrevertible]**

This command creates a hot spare drive. You can use the following options to create a hot spare drive.

**Table 51: Add Hot Spare Drive Input Options**

| Option        | Value Range              | Description   |
|---------------|--------------------------|---|
| dgs           | Valid drive group number | Specifies the drive group to which the hot spare drive is dedicated.  |
| enclaffinity  | Valid enclosure number   | Specifies the enclosure with which the hot spare is associated. If this option is specified, affinity is set; if it is not specified, there is no affinity. Affinity cannot be removed after it is set for a hot spare drive. |
| nonrevertible | —                        | Sets the drive as a nonrevertible hot spare.  |

#### Input example:

```
storcli /c0/e25/s4,5 add hotsparedrive
```

This command sets the drives /c0/e25/s4,5 as global hot spare.

#### Input example:

```
storcli /c0/e25/s6,8 add hotsparedrive dgs=0,1
```

This command sets /c0/e25/s6,8 as dedicated hot spare for disk groups 0,1.

### **storcli /cx[/ex]/sx delete hotsparedrive**

This command deletes a hot spare drive.

#### Input example:

```
storcli /c0/e25/s4,5 delete hotsparedrive
```

## Drive Performance Monitoring Commands

The StorCLI utility supports the following commands for drive performance monitoring:

```
storcli /cx show pdfailevents [lastoneday] [lastseqnum=<val>] [file=filename]
storcli /cx set pdfaileventoptions detectiontype=val correctiveaction=val errorthreshold=val
```

The detailed description for each command follows.

**storcli / cx show pdfailevents**

This command shows the drive predictive failure events.

**Input example:**

```
storcli /c0 show pdfailevents
```

**storcli / cx show pdfailevents lastoneday**

This command shows the drive predictive failure events that occurred in the last 24 hours.

**Input example:**

```
storcli /c0 show pdfailevents lastoneday
```

**storcli / cx show pdfailevents lastseqnum=xx]**

This command shows the drive predictive failure events that are generated from the specified sequence number.

**Input example:**

```
storcli /c0 show pdfailevents lastseqnum=10
```

**storcli / cx set pdfaileventoptions detectiontype=val correctiveaction=val errorrthreshold=val**

This command provides the current settings of the `pdfaileventoptions` set on the controller and the various options to change these settings.

**Input example 1:**

```
storcli /c0 set pdfaileventoptions detectiontype=x
```

Where:

- 0 – Detection disabled
- 1 – Detection enabled, high latency for reads is OK
- 2 – Detection enabled, aggressive (high latency for reads is not OK)
- 3 – Detection enabled, use NVDATA specified value, see `recoveryTimeLimit` and `writeRetryCount`

This command sets the detection type for the drive. The valid range is 0 to 3.

**NOTE**

For the changes to take effect, a reboot is required.

**Input example 2:**

```
storcli /c0 set pdfaileventoptions correctiveaction=x
```

Where:

- 0 – Only log events
- 1 – Log events, take corrective action based on SMARTer.

This command sets the corrective actions to be taken when the media error is detected. The valid value is 0 or 1.

**Input example 3:**

```
storcli /c0 set pdfaileventoptions errorrthreshold=x
```

Where:

- 0 = 1 – One error every 8 hours (least tolerant)
- 1 = 8 – One error every 1 hour
- 2 = 32 – One error every 15 minutes
- 3 = 90 – One error every 5 minutes (most tolerant of drive with degraded media)

This command sets the error threshold for the controller. The valid range is 0 to 3.

### **storcli / cx show dpm**

This command shows the drive performance monitoring status on the controller.

#### **Input example:**

```
storcli /c0 show dpm
```

### **storcli / cx start dpm**

This command starts the performance monitoring on the controller.

#### **Input example:**

```
storcli /c0 start dpm
```

### **storcli / cx stop dpm**

This command stops the performance monitoring on the controller.

#### **Input example:**

```
storcli /c0 stop dpm
```

### **storcli /cx delete dpmstat type = HIST | LCT | RA | EXT | All**

This command deletes the drive performance monitoring statistics of the controller.

Where:

- HIST – Histogram of response time.
- LCT – Long Time commands.
- RA – Running average drive statistics.
- EXT – Extended DPM information.

### **storcli /cx/[ex]/sx show dpmstat type = HIST | LCT | RA | EXT [logfile=*filename*]**

This command shows the drive performance monitoring statistics of the mentioned drive.

Where:

- HIST – Histogram of response time.
- LCT – Long Time commands.
- RA – Running average drive statistics.
- EXT – Extended DPM information.
- logfile – If the file name is not specified, it logs to `storsas.log` or to a user-specified file.

## Virtual Drive Commands

The StorCLI utility supports the following virtual drive commands. The following table describes frequently used virtual drive commands.

**Table 52: Virtual Drives Commands Quick Reference Table**

| Commands | Value Range  | Description                      |
|----------|--|----------------------------------|
| add      | See <a href="#">Table 53, Add RAID Configuration Input Options</a> and <a href="#">Table 54, Add RAID Configuration Input Options</a> .  | Creates virtual drives.          |
| delete   | <code>cc</code> or <code>cachecade</code> : Deletes CacheCade virtual drives.<br><code>force</code> : Deletes the virtual drive where operating system is present.                             | Deletes a virtual drive.         |
| set      | See <a href="#">Table 53, Add RAID Configuration Input Options</a> , <a href="#">Table 54, Add RAID Configuration Input Options</a> , and <a href="#">Change Virtual Properties Commands</a> . | Sets virtual drive properties.   |
| show     | <code>all</code> : Shows all properties of the virtual drive.<br><code>cc</code> : Shows properties of CacheCade virtual drives.<br>See <a href="#">Virtual Drive Show Commands</a> .          | Shows virtual drive information. |

## Add Virtual Drives Commands

The StorCLI utility supports the following commands to add virtual drives:

```
storcli /cx add vd raid[0|1|5|6|00|10|50|60][Size=<VD1_Sz>,<VD2_Sz>,...|remaining] [name=<VDNAME1>,...]
drives=e:s|e:s-x,y,e:s-x,y,z [PDperArray=x][SED] [pdcache=on|off|default][pi] [DimmerSwitch(ds)=default|
automatic(auto)| none|maximum(max)|MaximumWithoutCaching(maxnocache)]
[wt|wb|awb] [nora|ra] [direct|cached][cachevd] [Strip=<8|16|32|64|128|256|1024>] [AfterVd=X] [EmulationType=0|
1|2] [Spares = [e:]s|[e:]s-x|[e:]s-x,y] [force][ExclusiveAccess][Cbsize=0|1|2 Cbmode=0|1|2|3|4|7]
```

### NOTE

The supported strip size can vary from a minimum of 64 KB to 1 MB for MegaRAID controllers and only 64 KB for Integrated MegaRAID controllers.

```
storcli /cx add vd each raid0 [name=<VDNAME1>,...] [drives=e:s|e:s-x|e:s-x,y] [SED] [pdcache=on|off|default]
[pi] [DimmerSwitch(ds)=default|automatic(auto)| none|maximum(max)|MaximumWithoutCaching(maxnocache)] [wt|wb|
awb] [nora|ra] [direct|cached][EmulationType=0|1|2] [Strip=<8|16|32|64|128|256|1024>][ExclusiveAccess]
```

### NOTE

The supported strip size can vary from a minimum of 64 KB to 1 MB for MegaRAID controllers and only 64 KB for Integrated MegaRAID controllers.

```
storcli /cx add VD cachecade|cc raid[0,1] drives = [e:]s|[e:]s-x|[e:]s-x,y [WT|WB] [assignvds = 0,1,2]
```

This command creates a RAID configuration. You can use the options in the following table to create the RAID volume.

### NOTE

\* indicates default values in the following commands.

The detailed description for each command follows.

```
storcli /cx add vd raid[0|1|5|6|00|10|50|60][Size=<VD1_Sz>,<VD2_Sz>...|*remaining] [name=<VDNAME1>,...]
drives=e:s|e:s-x|e:s-x,y,e:s-x,y,z [PDperArray=x][SED] [pdcache=on|off|*default][pi] [DimmerSwitch(ds)=default|
automatic(auto)| *none|maximum(max)|MaximumWithoutCaching(maxnocache)][cachevd][ExclusiveAccess]
```

**SharedAccess\*]\*\* [wt]\*wb [awb] [nora]\*ra] [\*direct|cached] [EmulationType=0][Strip=<8|16|32|64|128|256|1024>]  
[AfterVd=X] [Spares = [e:]s|[e:]s-x|[e:]s-x,y] [force]**

#### NOTE

The supported strip size can vary from a minimum of 64 KB to 1 MB for MegaRAID controllers and only 64 KB for Integrated MegaRAID controllers.

**Table 53: Add RAID Configuration Input Options**

| Option        | Value Range   | Description  |
|---------------|---|--|
| raid          | [0 1 5 6 00 10 50 60] .   | Sets the RAID type of the configuration.   |
| size          | Maximum size based on the physical drives and RAID level.   | Sets the size of each virtual drive. The default value is for the capacity of all referenced disks.  |
| name          | 15 characters in length.  | Specifies the drive name for each virtual drive.   |
| drives        | Valid enclosure number and valid slot numbers for the enclosure.  | In <i>e:s</i>   <i>e:s-x</i>   <i>e:s-x,y</i> : <ul style="list-style-type: none"> <li><i>e</i> specifies the enclosure ID.</li> <li><i>s</i> represents the slot in the enclosure.</li> <li><i>e:s-x</i> is the range convention used to represent slots <i>s</i> to <i>x</i> in the enclosure <i>e</i> (250 characters maximum).</li> </ul> Make sure that the same block size (in a physical drive) is used in each <i>[e:s]</i> pair. As an example, if you use 4096 bytes in the <i>e0:s0</i> pair, use 4096 bytes in the <i>e1:s1</i> pair too. Mixing of block sizes between the <i>[e:s]</i> pairs is not supported. |
| pdperarray    | 1–16.   | Specifies the number of physical drives per array. The <i>default</i> value is automatically chosen.   |
| sed           | —   | Creates security-enabled drives.   |
| pdcache       | on off default .  | Enables or disables PD cache.  |
| pi            | —   | Enables protection information.  |
| dimmerswitch  | <i>default</i> : Logical device uses controller default power-saving policy.<br><i>automatic (auto)</i> : Logical device power savings are managed by firmware.<br><i>none</i> : No power-saving policy.<br><i>maximum (max)</i> : Logical device uses maximum power savings.<br><i>MaximumWithoutCaching (maxnocache)</i> : Logical device does not cache write to maximize power savings. | Specifies the power-saving policy.<br>Sets to <i>default</i> automatically.  |
| direct cached | <i>cached</i> : Cached I/O.<br><i>direct</i> : Direct I/O.  | Sets the logical drive cache policy.<br>Direct I/O is the default.   |

| Option        | Value Range  | Description   |
|---------------|--|---|
| EmulationType | 0 : Default emulation, which means if there are any 512e drives in the configured ID, then the physical bytes per sector are shown as 512e (4k). If there are no 512e drives, the physical bytes per sector will be 512n.<br>1 : Disable, which means even though there are 512e drives in the configured ID, the physical bytes per sector will be shown 512n.<br>2 : Force, which means even though there are no 512e drives in the configured ID, the physical bytes per sector will be shown as 512e (4k). |   |
| wt wb awb     | <ul style="list-style-type: none"> <li>wt : Write through.</li> <li>wb : Write back.</li> <li>awb : Always Write Back.</li> </ul>  | Enables write through. Write back is the default.                                       |
| nora ra       | <ul style="list-style-type: none"> <li>ra : Read ahead.</li> <li>nora : No read ahead.</li> </ul>  | Disables read ahead. Enabled is the default.  |
| cachevd       | —  | Enables SSD caching on the created virtual drive.                                       |
| strip         | 8, 16, 32, 64, 128, 256, 512, 1024<br>.<br><b>Note:</b> The supported strip size can vary from a minimum of 64 KB to 1 MB for MegaRAID controllers and only 64 KB for Integrated MegaRAID controllers.   | Sets the strip size for the RAID configuration.   |
| aftervd       | Valid virtual drive number.  | Creates the VD in the adjacent free slot next to the specified VD.                      |
| spares        | Number of spare physical drives present.   | Specifies the physical drives that are to be assigned to a disk group for spares.       |
| force         | Forces the addition of a secured physical drive to an existing drive group without security.   | Forces a security-capable physical drive to be added to a drive group without security. |

**Input example:**

```
storcli /c0 add vd raid10 size=2gb,3gb,4gb names=tmp1,tmp2,tmp3 drives=252:2-3,5,7 pdperarray=2
```

**storcli /cx add vd cc|cachecade raid[0,1,10] drives=[e:]s|[e:]s-x|[e:]s-x,y [[wt]\*wb|awb] ] [assignvds=0,1,2]**

This command creates CacheCade virtual drives and associates existing virtual drives to CacheCade virtual drives. You can use the following options to create the CacheCade virtual drive.

**Table 54: Add RAID Configuration Input Options**

| Option    | Value Range | Description  |
|-----------|-------------|--|
| cachecade | —           | Creates a CacheCade virtual drive.                 |
| raid      | 0, 1, 10.   | Sets the RAID type of the CacheCade virtual drive. |

| Option         | Value Range   | Description  |
|----------------|---|--|
| drives         | Valid enclosure number and valid slot number  | See the <code>drives</code> row in the previous table for format.                      |
| wt   *wb   awb | wt : Enables write through.<br>wb : Enables write back.<br>awb Enables always write back. | Enables or disables write cache.   |
| assignvds      | Valid virtual drive number (0 to 63).   | Specifies the list of virtual drives associated with the new CacheCade virtual drives. |

**Input example:**

```
storcli /c0 add vd raid10 size=2gb,3gb,4gb names=tmp1,tmp2,tmp3 drives=252:2-3, 7
```

**Delete Virtual Drives Commands**

The StorCLI utility supports the following virtual drive delete commands:

```
storcli /cx/vx|vall del
storcli /cx/vx|vall del cachecade
storcli /cx/vx|vall del force
storcli /cx/vx del [cachecade] [discardcache] [force]
```

**NOTE**

If the virtual drive has user data, you must use the `force` option to delete the virtual drive.

A virtual drive with a valid master boot record (MBR) and a partition table is considered to contain user data.

If you delete a virtual drive with a valid MBR without erasing the data and then create a new virtual drive using the same set of physical drives and the same RAID level as the deleted virtual drive, the old unerasd MBR still exists at block 0 of the new virtual drive, which makes it a virtual drive with valid user data. Therefore, you must provide the `force` option to delete this newly created virtual drive.

The detailed description for each command follows.

**storcli /cx/vx|vall del**

This command deletes a particular virtual drive, or when the `vall` option is used, all the virtual drives on the controller are deleted.

**Input example:**

```
storcli /c0/v2 del
```

**ATTENTION**

This command deletes virtual drives. Data located on these drives will no longer be accessible.

**storcli /cx/vx|vall del cachecade**

This command deletes a specific CacheCade virtual drive on a controller or all of the CacheCade configuration for a controller.

**Input example:**

```
storcli /c0/vall del cachecade
```

**ATTENTION**

This command deletes virtual drives. Data located on these drives will no longer be accessible.

**storcli /cx/vx|vall del force**

This command deletes a virtual drive only after the cache flush is completed. With the `force` option, the command deletes a virtual drive without waiting for the cache flush to complete.

**Input example:**

```
storcli /c0/v2 del force
```

**ATTENTION**

This command deletes the virtual drive where the operating system is present. Data located on these drives and the operating system of the drive will no longer be accessible.

**storcli /cx/vx del [cachecade] [discardcache] [force]**

This command with the `discardCache` option deletes the virtual drive without flushing the cached data.

**Input example:**

```
storcli /c0/v2 delete discardcache
```

## Virtual Drive Show Commands

The StorCLI utility supports the following virtual drive show commands:

```
storcli /cx/vx show
storcli /cx/vx show all [logfile[=filename]]
```

The detailed description for each command follows.

**storcli /cx/vx show**

This command shows the summary of the virtual drive information.

**Input example:**

```
storcli /c0/v0 show
```

**storcli /cx/vx show all [logfile[=*filename*]]**

The `show all` command shows all of the virtual drive information, which includes the virtual drive information, physical drives used for the virtual drives, and virtual drive properties.

If you use the `logfile` option in the command syntax, the logs are written to the specified file. If you do not specify a file name, then the logs are written to the `storsas.log` file. If you do not use the `logfile` option in the command syntax, the entire log output is printed to the console.

**Input example:**

```
storcli /c0/v0 show all logfile = log.txt
```

## Preserved Cache Commands

If a virtual drive becomes offline or is deleted because of missing physical disks, the controller preserves the dirty cache from the virtual disk. The StorCLI utility supports the following commands for preserved cache:



```
storcli /cx/vx delete preservedCache [force]
storcli /cx show preservedCache
```

The detailed description for each command follows.

### **storcli /cx/vx delete preservedcache**

This command deletes the preserved cache for a particular virtual drive on the controller in missing state. Use the `force` option to delete the preserved cache along with the virtual drive when the virtual drive is in an offline state.

#### **Input example:**

```
storcli /c0/v1 delete preservedcache
```

### **storcli /cx show preservedCache**

This command shows the virtual drive that has preserved cache and whether the virtual drive is offline or missing.

#### **Input example:**

```
storcli /c0 show preservedCache
```

## **Change Virtual Properties Commands**

The StorCLI utility supports the following commands to change virtual drive properties:

```
storcli /cx/vx set accesspolicy=<rw|ro|blocked|rmvblkd>
storcli /cx/vx set iopolicy=<cached|direct>
storcli /cx/vx set name=<namestring>
storcli /cx/vx set pdcache=<on|off|default>
storcli /cx/vx set rdcache=<ra|nora>
storcli /cx/vx|vall set ssdcaching=<on|off>
storcli /cx/vx|vall set HostAccess=ExclusiveAccess|SharedAccess
storcli /cx/vx set wrcache=<wt|wb|awb>
storcli /cx/vx set emulationType=0|1|2
storcli /cx/vx set ds=Default|Auto|None|Max|MaxNoCache
storcli /cx/vx set autobgi=On|Off
storcli /cx/vx set pi=Off
storcli /cx/vx set bootdrive=<On|Off>
storcli /cx/vx set hidden=On|Off
storcli /cx/vx set cbsize=0|1|2 cbmode=0|1|2|3|4|7
```

The detailed description for each command follows.

### **storcli /cx/vx set accesspolicy=<rw|ro|blocked|rmvblkd>**

This command sets the access policy on a virtual drive to read/write, read only, blocked, or rmvblkd (remove or blocked).

#### **Input example:**

```
storcli /c0/v0 set accesspolicy=rw
```

### **storcli /cx/vx set iopolicy=<cached|direct>**

This command sets the I/O policy on a virtual drive to cached I/O or direct I/O.

**Input example:**

```
storcli /c0/v0 set iopolicy=cached
```

**storcli /cx/vx set name=<namestring>**

This command names a virtual drive. The name is restricted to 15 characters.

**Input example:**

```
storcli /c0/v0 set name=testdrive123
```

**storcli /cx/vx set pdcache=<on|off|default>**

This command sets the current disk cache policy on a virtual drive to on, off, or default setting.

**Input example:**

```
storcli /c0/v0 set pdcache=on
```

**storcli /cx/vx set rdcache=<ra|nora>**

This command sets the read cache policy on a virtual drive to read ahead or no read ahead.

**Input example:**

```
storcli /c0/v0 set rdcache=nora
```

**storcli /cx/vx|vall set ssdcaching=<on|off>**

This command assigns CacheCade virtual drives. If `ssdcaching=off`, the CacheCade virtual drive is removed.

**Input example:**

```
storcli /c0/v0 set ssdcaching=on
```

**storcli /cx/vx|vall set HostAccess=ExclusiveAccess|SharedAccess**

This command sets the host access policy for the virtual drive. When the host access policy is exclusive access, a server has exclusive access to the virtual drive. The virtual drive cannot be shared between servers. If the host policy is shared access, the virtual drive can be shared between servers.

**Input example:**

```
storcli /c0/v0 set HostAccess=ExclusiveAccess
```

**storcli /cx/vx set wrcache=<wt|wb|awb>**

This command sets the write cache policy on a virtual drive to write back, write through, or always write back.

**Input example:**

```
storcli /c0/v0 set wrcache=wt
```

**storcli /cx/vx set hidden=on|off**

This command hides or unhides a virtual drive. If `hidden=on`, the virtual drive is not exported to the OS. The OS will not be able to read or write to that virtual drive until the virtual drive is unhidden.

**Input example:**

```
storcli /c0/v0 set hidden=on
```

### **storcli /cx/vx set cbsize=0|1|2 cbmode=0|1|2|3|4|7**

This command sets the Cache bypass size and the Cache bypass mode on a virtual drive.

The values for the `cbsize` options follow:

- 0 – 64k cache bypass.
- 1 – 128k cache bypass.
- 2 – 256k cache bypass.

The values for the `cbmode` options follow:

- 0 – Enable the intelligent mode cache bypass.
- 1 – Enable the standard mode cache bypass.
- 2 – Enable the custom mode cache bypass 1.
- 3 – Enable the custom mode cache bypass 2.
- 4 – Enable the custom mode cache bypass 3.
- 7 – Disable Cache bypass.

#### **NOTE**

When `cbmode` is set to 7, the user supplied `cbsize` value is ignored.

#### **Input example:**

```
storcli /c0/v0 set cbsize=1 cbmode=2
```

## **Virtual Drive Initialization Commands**

The StorCLI utility supports the following commands to initialize virtual drives:

```
storcli /cx/vx show init
storcli /cx/vx start init [full][Force]
storcli /cx/vx stop init
```

#### **NOTE**

If the virtual drive has user data, you must use the `force` option to initialize the virtual drive.

A virtual drive with a valid MBR and partition table is considered to contain user data.

The detailed description for each command follows.

### **storcli /cx/vx show init**

This command shows the initialization progress of a virtual drive in percentage.

The estimated time (in minutes) left to complete the operation is also shown.

#### **Input example:**

```
storcli /c0/v2 show init
```

### **storcli /cx/vx start init [full]**

This command starts the initialization of a virtual drive. The default initialization type is fast initialization. If the `full` option is specified, full initialization of the virtual drive starts.

**Input example:**

```
storcli /cx/vx start init full
```

**storcli /cx/vx stop init**

This command stops the initialization of a virtual drive. A stopped initialization cannot be resumed.

**Input example:**

```
storcli /c0/v0 stop init
```

**Virtual Drive Erase Commands**

The StorCLI utility supports the following commands to erase virtual drives:

```
storcli /cx/vx start erase
storcli /cx/vx show erase
```

The detailed description for each command follows.

**storcli /cx/vx start erase**

This command starts the data erase operation on the specified virtual drive.

**Input example:**

```
storcli /c0/v0 start erase
```

**storcli /cx/vx show erase**

This command shows the status of the erase operation on the virtual drive.

**Input example:**

```
storcli /c0/v0 show erase
```

**Virtual Drive Migration Commands****NOTE**

The virtual drive migration commands are not supported in Embedded MegaRAID.

The StorCLI utility supports the following commands for virtual drive migration (reconstruction):

```
storcli /cx/vx show migrate
storcli /cx/vx start migrate <type=raidx> [option=<add|remove> drives=[e:]s|[e:]s-x|[e:]s-x,y] [Force]
```

**NOTE**

Usable Capacity Reduction is not possible without a RAID level migration.

The detailed description for each command follows.

**storcli /cx/vx show migrate**

This command shows the progress of the virtual drive migrate operation in percentage.

The estimated time (in minutes) left to complete the operation is also shown.

**Input example:**

```
storcli /c0/v0 show migrate
```

**storcli /cx/vx start migrate <type=raidlevel> [option=<add | remove> drives=<e1:s1,e2:s2 ...> ]**

This command starts the reconstruction on a virtual drive to the specified RAID level by adding or removing drives from the existing virtual drive. You can use the following options with the `start migrate` command.

**Table 55: Virtual Drive Migration Command Options**

| Options  | Value Range   | Description   |
|--|---|---|
| <code>type = RAID level</code>   | RAID [0 1 5 6]  | The RAID level to which the virtual drive must be migrated. |
| <code>[option=&lt;add   remove&gt; drives=&lt;e1:s1,e2:s2, ...&gt;]</code> | <p><code>add</code>: Adds drives to the virtual drive and starts reconstruction.</p> <p><code>remove</code>: Removes drives from the virtual drive and starts reconstruction.</p> <p><code>drives</code>: The enclosure number and the slot number of the drives to be added to the virtual drive. Make sure that the same block size (in a physical drive) is used in each [e:s] pair. As an example, if you use 4096 bytes in the <code>e0:s0</code> pair, use 4096 bytes in the <code>e1:s1</code> pair too. Mixing of block sizes between the [e:s] pairs is not supported.</p> | Adds or removes drives from the virtual drive.              |

Virtual drive migration can be done between the following RAID levels.

**Table 56: Virtual Drive Migration Table**

| Initial RAID level | Migrated RAID level |
|--------------------|---------------------|
| RAID 0             | RAID 1              |
| RAID 0             | RAID 5              |
| RAID 0             | RAID 6              |
| RAID 1             | RAID 0              |
| RAID 1             | RAID 5              |
| RAID 1             | RAID 6              |
| RAID 5             | RAID 0              |
| RAID 5             | RAID 6              |
| RAID 6             | RAID 0              |
| RAID 6             | RAID 5              |

**Input example:**

In the following example, 252 is the enclosure number and 0, 1, and 2 are the slot numbers.

```
storcli/c0/v0 start migrate type=raid0 option=add drives=252:0,252:1,252:2
```

## Virtual Drive Consistency Check Commands

The StorCLI utility supports the following commands for virtual drive consistency checks:

```
storcli /cx/vx pause cc
storcli /cx/vx resume cc
storcli /cx/vx show cc
storcli /cx/vx start cc [force]
storcli /cx/vx stop cc
```

### NOTE

If enclosures are used to connect the physical drives to the controller, specify the IDs in the command.

The detailed description for each command follows.

### **storcli /cx/vx pause cc**

This command pauses an ongoing consistency check process. You can resume the consistency check at a later time. You can run this command only on a virtual drive that has a consistency check operation running.

#### **Input example:**

```
storcli /c0/v4 pause cc
```

### **storcli /cx/vx resume cc**

This command resumes a suspended consistency check operation. You can run this command on a virtual drive that has a paused consistency check operation.

#### **Input example:**

```
storcli /c0/v4 resume cc
```

### **storcli /cx/vx show cc**

This command shows the progress of the consistency check operation in percentage.

The estimated time (in minutes) left to complete the operation is also shown.

#### **Input example:**

```
storcli /c0/v5 show cc
```

### **storcli /cx/vx start cc force**

This command starts a consistency check operation for a virtual drive. Typically, a consistency check operation is run on an initialized virtual drive. Use the `force` option to run a consistency check on an uninitialized drive.

#### **Input example:**

```
storcli /c0/v4 start cc
```

### **storcli /cx/vx stop cc**

This command stops a consistency check operation. You can run this command only for a virtual drive that has a consistency check operation running.

#### **Input example:**

```
storcli /c0/v4 stop cc
```

**NOTE**

You cannot resume a stopped consistency check process.

## Background Initialization Commands

The StorCLI utility supports the following commands for background initialization:

```
storcli /cx/vx resume bgi
storcli /cx/vx set autobgi=<on|off>
storcli /cx/vx show autobgi
storcli /cx/vx show bgi
storcli /cx/vx stop bgi
storcli /cx/vx suspend bgi
```

The detailed description for each command follows.

### **storcli /cx/vx resume bgi**

This command resumes a suspended background initialization operation.

#### **Input example:**

```
storcli /c0/v0 resume bgi
```

### **storcli /cx/vx set autobgi=<on|off>**

This command sets the auto background initialization setting for a virtual drive to on or off.

#### **Input example:**

```
storcli /c0/v0 set autobgi=on
```

### **storcli /cx/vx show autobgi**

This command shows the background initialization setting for a virtual drive.

The estimated time (in minutes) left to complete the operation is also shown.

#### **Input example:**

```
storcli /c0/v0 show autobgi
```

### **storcli /cx/vx show bgi**

This command shows the background initialization progress on the specified virtual drive in percentage.

The estimated time (in minutes) left to complete the operation is also shown.

#### **Input example:**

```
storcli /c0/v0 show bgi
```

### **storcli /cx/vx stop bgi**

This command stops a background initialization operation. You can run this command only for a virtual drive that is currently initialized.

#### **Input example:**

```
storcli /c0/v4 stop bgi
```

### **storcli /cx/vx pause bgi**

This command suspends a background initialization operation. You can run this command only for a virtual drive that is currently initialized.

#### **Input example:**

```
storcli /c0/v4 pause bgi
```

## **Virtual Drive Expansion Commands**

The StorCLI utility supports the following commands for virtual drive expansion:

```
storcli /cx/vx expand size=<value> [expandarray]
storcli /cx/vx|vall show expansion
```

The detailed description for each command follows.

### **storcli /cx/vx expand size=<value> [expandarray]**

This command expands the virtual drive within the existing array or if you replace the drives with drives larger than the size of the existing array. Although the value provided might be in MB, the value of the expanded size is displayed based on the nearest possible unit. Depending on the input (value) provided by you, `storcli` recognizes the size from the input provided by you and rounds up the size to the nearest percentage of free space remaining on the drive group; hence, the actual expanded size can differ from the size requested by you. If the `expandarray` option is specified, the existing array is expanded. If this option is not specified, the virtual drive is expanded.

### **storcli /cx/vx show expansion**

This command shows the expansion information on the virtual drive with and without array expansion.

#### **Input example:**

```
storcli /c0/v0 show expansion
```

## **Display the Bad Block Table**

The StorCLI utility supports the following command to check for bad block entries of virtual drives on the selected controller:

```
storcli /cx/vx show bbmt
```

#### **Input example:**

```
storcli /c0/v0 show bbmt
```

## **Clear the LDBBM Table Entries**

The StorCLI utility supports the following command to clear the LDBBM table entries:

```
storcli /cx/vx delete bbmt
```

#### **Input example:**

```
storcli /c0/v0 delete bbmt
```



## JBOD Commands

The StorCLI utility supports the switching behavior within the JBOD personality mode. StorCLI also supports configuration parameters for a personality and allows you to create and configure JBODs. You can create JBODs from all Unconfigured Good drives or specific Unconfigured Good drives. You can also delete these JBODs. You can also choose JBOD as a boot device.

The StorCLI utility supports the following JBOD commands:

```
storcli /cx/ex/sx set jbod
storcli /cx/eall/sall show jbod [all]
storcli /cx/ex/sx set bootdrive=<on|off>
storcli /cx/ex/sx delete jbod
```

For more information, see also *set personality behavior* under [Table 1](#), .

## Create JBOD Manually

The StorCLI utility has the option to convert all specified Unconfigured Good drives as JBODs.

### NOTE

The drive token is optional. If you specify the drives, the JBODs are created on those specified drives, otherwise, StorCLI creates JBODs on all available Unconfigured Good drives on the controller.

### **storcli /cx/ex/sx set jbod**

This command allows you to add JBOD drive

Input example

```
storcli /c0/e1/s1 set jbod
```

## JBOD Properties

JBOD properties are used to list all the available JBOD on the controller with their properties.

### **storcli /cx/eall/sall show jbod [all]**

This command lists all the available JBODs on the controller with their associated properties.

Input example:

```
storcli /c0/eall/sall show jbod
```

**Table 57: Example Output of all the available JBODs on the Controller**

| ID | EID:SLT | DID | State  | Intf | Med | Size  | SeSz | Model        | Vendor  | Port |
|----|---------|-----|--------|------|-----|-------|------|--------------|---------|------|
| 0  | 10:01   | 2   | Online | SAS  | HDD | 100GB | 512B | ST91000640SS | SAMSUNG | 0-3  |
| 1  | 10:03   | 5   | Online | SAS  | HDD | 123GB | 4K   | ST91000640SS | SAMSUNG | 0-3  |
| 2  | 10:04   | 6   | Online | SAS  | HDD | 100GB | 512B | ST91000640SS | SAMSUNG | 0-3  |

## JBOD Operations

JBODs can start and stop the INIT, and also erase operations on them. JBODs can also be set as a boot volume. Use the same drive commands for the respective operation to start and stop INIT on JBODs as follows.

### **storcli /cx/ex/sx start init**

This command starts the initialization of a JBOD drive.

#### **Input example:**

```
storcli /c0/e10/s1 start init
```

### **storcli /cx/ex/sx show init**

This command displays the initialization status.

#### **Input example:**

```
storcli /c0/e10/s0 show init
```

### **storcli /cx/ex/sx stop init**

This command stops the initialization of a JBOD physical drive. A stopped initialization cannot be resumed.

#### **Input example:**

```
storcli /c0/e10/s0 stop init
```

### **storcli /cx/ex/sx start erase [simple | normal | thorough] [patternA=<val>] [patternB=<val>]**

This command allows you to securely erase non-SED drives with the specified erase patterns. The drive is written with erase patterns to make sure that the data is securely erased. You can use the following options with the start erase command.

**Table 58: Drive Erase Command Options**

| Options  | Value Range  | Description                            |
|----------|--|--|
| erase    | <ul style="list-style-type: none"> <li>simple : Single pass, single pattern write</li> <li>normal : Three pass, three pattern write</li> <li>thorough : Nine pass, repeats the normal write three times</li> </ul> | Secure erase type.                     |
| patternA | 8-bit value  | Erase pattern A to overwrite the data. |
| patternB | 8-bit value  | Erase pattern B to overwrite the data. |

#### **Input example:**

```
storcli /c0/e10/s0 start erase through patternA=10010011 patternB=11110000
```

### **storcli /cx/ex/sx show erase**

This command displays the erase status.

#### **Input example:**

```
storcli /c0/e10/s0 show erase
```

**storcli /cx/ex/sxx stop erase**

This command stops the erase operation of a JBOD physical drive.

**Input example:**

```
storcli /c0/e10/s0 stop erase
```

**storcli /cx/ex/sx set bootdrive= on|off**

This command allows you to set the selected JBOD as boot volume.

**Input example:**

```
storcli /c0/e10/s0 set bootdrive= on|off
```

**Delete JBODs or Volumes**

To delete JBODs, use the drive's JBOD delete command.

**storcli /cx/ex/sx delete jbod**

This command deletes the specified JBOD.

**Input example:**

```
storcli /c0/e0/s0 delete jbod
```

**storcli /cx/vall delete**

This command deletes all the volumes on the controller.

**Input example:**

```
storcli /c0/vall delete
```

To delete all volumes on the controller, use the `vall delete` command.

**Foreign Configuration Commands**

The StorCLI utility supports the following commands to view, import, and delete foreign configurations:

**NOTE**

Import from MR (9460/80 and 9560/80) to iMR (9440) is based on the original configuration being within the abilities of the new controller.

```
storcli /cx/fall del|delete [securitykey=sssssssssss]
storcli /cx/fall import [preview][securitykey=sssssssssss]
storcli /cx/fall show [all] [securitykey=sssssssssss]
```

**NOTE**

Provide the security key when importing a locked foreign configuration created in a different machine that is encrypted with a security key.

The detailed description for each command follows.

**storcli /cx/fall del|delete [securitykey=sssssssssss]**

This command deletes the foreign configuration of a controller. Input the security key if the controller is secured.

**Input example:**

```
storcli /c0/fall delete
```

**storcli /cx/fall import [preview] [securitykey=ssssssssss]**

This command imports the foreign configurations of a controller. The `preview` option shows a summary of the foreign configuration before importing it.

**Input example:**

```
storcli /c0/fall import
```

**storcli /cx/fall show [all][securitykey=ssssssssss]**

This command shows the summary of the entire foreign configuration for a particular controller. The `all` option shows all the information of the entire foreign configuration.

**NOTE**

The EID:Slot column is populated for the foreign PDs that are locked.

**Input example:**

```
storcli /c0/fall show preview
storcli /c0/fall import preview
storcli /c0/fall show all
```

## BIOS-Related Commands

The StorCLI utility supports the following BIOS commands:

```
storcli /cx set bios [state=<on|off>] [Mode=<SOE|PE|IE|SME>] [abs=<on|off>] [DeviceExposure=<value>]
```

The detailed description for the command follows.

**storcli /cx set bios [state=<on|off>] [Mode=<SOE|PE|IE|SME>] [abs=<on|off>] [DeviceExposure=<value>]**

This command enables or disables the MegaRAID controller's BIOS, sets the BIOS boot mode, and enables the BIOS to select the best logical drive as the boot drive. The mode options abbreviations follow:

- SOE: Stop on Errors.
- PE: Pause on Errors.
- IE: Ignore Errors.
- SME: Safe mode on Errors.

**NOTE**

The legacy BIOS can load a limited number of the PCI device's BIOS. Disable the MegaRAID BIOS to avoid issues during POST.

**Input example:**

```
storcli /c0 set bios state=on Mode=SOE abs=on deviceexposure=20
```

## OPROM BIOS Commands

The StorCLI utility supports the following OPRM BIOS commands:

```
storcli /cx/ex/sx set bootdrive=on|off
```

```
storcli /cx/vx set bootdrive=on|off
storcli /cx show bootdrive
```

The detailed description for each command follows.

### **storcli /cx/ex/sx set bootdrive=on|off**

This command sets the specified physical drive as the boot drive. During the next reboot, the BIOS looks for a boot sector in the specified physical drive.

#### **Input example:**

```
storcli /c0/e32/s4 set bootdrive=on
```

### **storcli /cx/vx set bootdrive=on|off**

This command sets the specified virtual drive as the boot drive. During the next reboot, the BIOS looks for a boot sector in the specified virtual drive.

#### **Input example:**

```
storcli /c0/v0 set bootdrive=on
```

### **storcli/cx/vx show bootdrive**

This command shows the boot drive for the controller. The boot drive can be a physical drive or a virtual drive.

#### **Input example:**

```
storcli /c0/v0 show bootdrive
```

## **Drive Group Commands**

This section describes the drive group commands.

### **Drive Group Show Commands**

The StorCLI utility supports the following drive group commands:

```
storcli /cx/dall show
storcli /cx/dall show all
storcli /cx/dall show cachecade
storcli /cx/dx show
storcli /cx/dx show all
storcli /cx/dx set security=on
storcli /cx/dx split mirror
storcli /cx/dall show mirror
storcli /cx/dall add mirror src=<val>[force]
storcli /cx/dx set hidden=<on|off>
```

### **storcli /cx/dall show**

This command shows the topology information of all the drive group.

#### **Input example:**

```
storcli /c0/dall show
```

### **storcli /cx/dall show all**

This command shows all available configurations in the controller, which includes topology information, virtual drive information, physical drive information, free space, and free slot information.

#### **Input example:**

```
storcli /c0/dall show all
```

### **storcli /cx/dall show cachecade**

This command shows all CacheCade virtual drive information.

#### **Input example:**

```
storcli /c0/dall show cachecade
```

### **storcli /cx/dx show**

This command shows the topology information of the drive group.

#### **Input example:**

```
storcli /c0/d0 show
```

### **storcli /cx/dx show all**

This command shows the physical drive and the virtual drive information for the drive group.

#### **Input example:**

```
storcli /c0/d0 show all
```

### **storcli /cx/dx set security=on**

This command enables security on the specified drive group.

#### **Input example:**

```
storcli /c0/d0 set security=on
```

### **storcli /cx/dx split mirror**

This command enables you to perform a break mirror operation on a drive group. The break mirror operation enables a RAID 1 configured drive group to be broken into two volumes. You can use one of the volumes in another system and replicate it without making a copy of the virtual drive.

#### **NOTE**

Break mirror is an offline operation. This command is supported only in UEFI.

#### **Input example:**

```
storcli /c0/d0 split mirror
```

### **storcli /cx/dall show mirror**

This command shows information about the mirror associated with the drive group.

**Input example:**

```
storcli /c0/dall show mirror
```

**storcli /cx/dall add mirror src=<va>[force]**

This command joins the virtual drive with its mirror. The possible values to be used are 0, 1, or 2.

**Input example:**

```
storcli /c0/dall add mirror src=<1>[force]
```

**storcli /cx/dx set hidden=<on|off>**

This command hides or unhides a drive group.

**Input example:**

```
storcli /c0/d0 set hidden=on
```

## Virtual Drive Power Settings Commands

### Change Virtual Drive Power Settings Commands

The StorCLI utility supports the following commands to change the dimmer switch settings. You can use the following combinations for the Dimmer Switch commands:

```
storcli /cx set ds=off type=1|2|3|4
storcli /cx set ds=on type=1|2 [properties]
storcli /cx set ds=on type=3|4 defaultldtype=<value> [properties]
storcli /cx set ds=on [properties]
```

The following table describes the power-saving options.

**Table 59: Dimmer Switch Input Options**

| Option             | Value Range  | Description   |
|--------------------|--|---|
| dimmerswitch or ds | on off   | Turns the dimmer switch option on.  |
| type               | 1 : Unconfigured<br>2 : Hot spare<br>3 : Virtual disk<br>4 : Unconfigured and hot spare drives   | Specifies the type of drives for which the Dimmer Switch feature is applicable.<br><b>Note:</b> The dimmer switch is only activated for unconfigured drives and hot spare drives, but not for configured drives.                              |
| properties         | disableldps : Interval in hours or time in <i>hh:mm</i> format<br>spinupdrivecount : Valid enclosure number (0 to 255)<br>SpinUpEncDelay : Valid time in seconds | Sets the interval or time in which the power-saving policy for the logical drive is turned off.<br>Specifies the number of drives in the enclosure that are spun up.<br>Specifies the delay of spin-up groups within an enclosure in seconds. |

**storcli /cx show DimmerSwitch (ds)**

This command shows the current Dimmer Switch setting for the controller.

**Input example:**

```
storcli /c0 show ds
```

## CacheVault Commands

The StorCLI utility supports the following CacheVault commands:

```
storcli /cx/cv show
storcli /cx/cv show all
storcli /cx/cv show status
storcli /cx/cv start learn
```

The detailed description for each command follows.

**storcli /cx/cv show**

This command shows the summary information for the CacheVault of a controller.

**Input example:**

```
storcli /c0/cv show
```

**storcli /cx/cv show all**

This command shows all the information of the CacheVault.

**NOTE**

This command only works when a CacheVault is connected to the controller; otherwise, an error message appears. A capacitance value above 100% will be displayed as 100%.

**Input example:**

```
storcli /c0/cv show all
```

**storcli /cx/cv show status**

This command shows the battery information, firmware status, and the gas gauge status.

**Input example:**

```
storcli /c0/cv show status
```

**storcli /cx/cv start learn**

This command starts the CacheVault learning cycle. The battery learn cycle is immediately started and no other parameters are required for this command.

**Input example:**

```
storcli /c0/cv start learn
```

## Enclosure Commands

The StorCLI utility supports the following enclosure commands:

```
storcli /cx/ex show
```



```
storcli /cx/ex show all
storcli /cx/ex download src=filepath [mode=5 | [forceActivate] mode=7] [bufferid=<val>]
storcli /cx/ex download src=filepath mode=e offline [forceActivate [delay=val]] [bufferid=<val>]
storcli /cx/ex download mode=f offline [delay=val] [bufferid=<val>]
storcli /cx/ex show status
storcli /cx/ex show phyerrorcounters
```

The detailed description for each command follows.

### NOTE

StorCLI supports and can be used to qualify only Broadcom expanders and enclosures.

### **storcli /cx/ex show**

This command shows the basic enclosure information.

#### **Input example:**

```
storcli /c0/e25 show
```

### **storcli /cx/ex show all**

This command shows all enclosure information, which includes general enclosure information, enclosure inquiry data, a count of enclosure elements, and information about the enclosure elements.

#### **Input example:**

```
storcli /c0/e25 show all
```

### **storcli /cx/ex download src=filepath [mode=5 | [forceActivate] mode=7] [bufferid=<val>]**

This command flashes the firmware with the file specified at the command line. The enclosure performs an error check after the operation. The following option can be used with the enclosure firmware download command.

**Table 60: Enclosure Firmware Download Command Options**

| Option        | Value Range | Description   |
|---------------|-------------|---|
| forceactivate | —           | Issues a command descriptor block (CDB) with the write command with no data with command mode 0x0F (flash download already in progress).<br>This option is used primarily to activate Scotch Valley enclosures. |

### NOTE

The firmware file that is used to flash the enclosure can be any format. The StorCLI utility assumes that you provide a valid firmware image.

#### **Input example:**

```
storcli /c0/e0 download src=c:\file2.bin
```

### **storcli /cx/ex download src=filepath mode=e offline [forceActivate [delay=val]] [bufferid=<val>]**

This command supports the drive firmware using Mode E. Mode E downloads the microcode and allows you to issue this command for multiple devices.

**NOTE**

You can download as well as activate the drive firmware by executing the `activenow` command in the same command line. You can also specify the delay time, but the delay time specified by you is applicable only for activation and not for downloading the drive firmware.

**Syntax:**

```
storcli /cx/ex download src= mode=e offline [forceActivate]
```

**Where:**

- `/cx` – Specifies the controller, where `x` is the index of the controller.
- `/ex` – Specifies the enclosure ID of the controller (optional).

**Input example:**

```
storcli /c0/e25 download src=file.rom mode=E offline
```

**storcli /cx/ex download mode=f offline [delay=va/] [bufferid=<va/>]**

This command supports the drive firmware using Mode F. Mode F activates the deferred microcode and allows you to issue this command to all devices in a safe manner. You cannot issue this command before issuing the `Mode E` command. The default delay time is 15 seconds. You can specify any delay time between 1 and 300 seconds.

**Syntax:**

```
storcli /cx/ex download mode=f offline
```

**Where:**

- `/cx` – Specifies the controller, where `x` is the index of the controller.
- `/ex` – Specifies the enclosure ID of the controller (optional).

**Input example:**

```
storcli /c0/e25/ download mode=F offline delay=15
```

**storcli /cx/ex show status**

This command shows the enclosure status and the status of all enclosure elements.

**Input example:**

```
storcli /c0/e25 show status
```

**storcli /cx/ex show phyerrorcounters**

This command displays enclosure and expander phy error counters.

**Syntax:**

```
storcli /cx/ex show phyerrorcounters
```

**Where:**

- `/cx` – Specifies the controller, where `x` is the index of the controller.
- `/ex` – Specifies the enclosure, where `x` is the enclosure device ID.

**Input example:**

```
storcli /c0/e25 show phyerrorcounters
```

## PHY Commands

The StorCLI utility supports the following phy commands:

```
storcli /cx/px|pall set linkspeed=0(auto)|1.5|3|6|12
storcli /cx/px|pall show
storcli /cx/px|pall show all
storcli /cx/ex show phyerrorcounters
storcli /cx/ex/sx reset phyerrorcounters
```

The detailed description for each command follows.

### **storcli /cx/px|pall set linkspeed=0(auto)|1.5|3|6|12**

This command sets the PHY link speed. You can set the speed to 1.5Gb/s, 3Gb/s, 6Gb/s, or 12Gb/s. The link speed is set to auto when you specify linkspeed = 0.

#### **Input example:**

```
storcli /c0/p0 set linkspeed=1.5
```

### **storcli /cx/px|pall show**

This command shows the basic PHY layer information.

#### **Input example:**

```
storcli /c1/p0 show
```

### **storcli /cx/px|pall show all**

This command shows all the PHY layer information.

#### **Input example:**

```
storcli /c1/p0 show all
```

### **storcli /cx/ex show phyerrorcounters**

This command shows the enclosure/expander phy error counters.

#### **Input example:**

```
storcli /c1/e0 show phyerrorcounters
```

### **storcli /cx/ex/sx reset phyerrorcounters**

This command resets the drive phy error counters.

#### **Input example:**

```
storcli /c1/e0/s0 reset phyerrorcounters
```

## PCIe Storage Interface Commands

The PCIe Storage Interface is the fundamental interface that connects peripheral devices to the host processor and through a memory controller to the memory architecture in the system. The PCIe interface communicates over one or more lanes that consist of one transmit and one receive serial interface for each lane.

## Lane Speed Commands

The StorCLI utility supports the following lane speed commands:

```
storcli /cx/lrx show
storcli /cx/lrxall show
storcli /cx/lrx set lanespeed=0(disabled)|2.5|5|8|16
```

The detailed description for each command follows.

### **storcli /cx/lrx show**

This command displays the lane information.

#### **Input example:**

```
storcli /c0/lrx show
```

### **storcli /cx/lrxall show**

This command displays the summary information on all of the existing lanes.

#### **Input example:**

```
storcli /c0/lrxall show
```

### **storcli /cx/lrx set lanespeed=0 (disabled) | 2.5 | 5 | 8 | 16**

This command sets the lane speed. You can set the speed as 0 (disabled), 2.5GT/s, 5GT/s, 8GT/s, or 16GT/s.

By default, the lane speed in the controller is 8GT/s or the value last saved by you.

#### **Input example:**

```
storcli /c0/lrx set lanespeed=2.5
```

#### **Output example:**

**Figure 78: Lane Speed Output**

```
LaneInformation :|
```

```
=====
```

```
-----
```

| LaneNo | LaneId | Enbl | Conn | Link | CurrSpeed | Wwid | SupSpeed |
|--------|--------|------|------|------|-----------|------|----------|
|--------|--------|------|------|------|-----------|------|----------|

```
-----
```

|   |       |     |   |   |       |   |         |
|---|-------|-----|---|---|-------|---|---------|
| 0 | 65535 | Yes | 1 | 0 | 8GT/s | 0 | 2.5,5,8 |
| 1 | 65535 | Yes | 0 | 0 | 8GT/s | 0 | 2.5,5,8 |
| 2 | 65535 | Yes | 1 | 0 | 8GT/s | 0 | 2.5,5,8 |
| 3 | 65535 | Yes | 0 | 0 | 8GT/s | 0 | 2.5,5,8 |
| 4 | 65535 | Yes | 1 | 1 | 8GT/s | 0 | 2.5,5,8 |
| 5 | 65535 | Yes | 0 | 1 | 8GT/s | 0 | 2.5,5,8 |
| 6 | 65535 | Yes | 1 | 1 | 8GT/s | 0 | 2.5,5,8 |
| 7 | 65535 | Yes | 0 | 1 | 8GT/s | 0 | 2.5,5,8 |

```
-----
```

## Link Configuration Commands

The StorCLI utility supports the following link configuration commands:

```
storcli /cx/show linkconfig
```

```
storcli /cx/set linkconfig [connname=cx,cy] linkconfig=<val>
```

The detailed description for each command follows.

### **storcli cx/show linkconfig**

This command displays the link configuration information for the current link configuration, pending link configuration, and the available link configuration.

#### **Input example:**

```
storcli /c1/show linkconfig
```

#### **Output example:** Current Link Configuration

**Figure 79: Current Link Configuration**

Current Config :

=====

-----  
 Conn ConfigID LinkConfig  
 -----

C1,C0 5 0-0:x1,1-1:x1,2-2:x1,3-3:x1

C3,C2 5 8-8:x1,9-9:x1,10-10:x1,11-11:x1

|-----  
 -----

**Output example** – Pending Link Configuration

**Figure 80: Pending Link Configuration**

Pending Config :

=====

-----  
 Conn ConfigID LinkConfig  
 -----

C1,C0 3 0-1:x2,2-3:x2,4-7:x4

C3,C2 3 8-9:x2,10-11:x2,12-15:x4

-----

**Output example:** Available Link Configuration

## Figure 81: Available Link Configuration

Available Config :

=====

-----  
ConfigID LinkConfig  
-----

```

1 0-3:x4,4-7:x4
2 0-3:x4,4-5:x2,6-7:x2
3 0-1:x2,2-3:x2,4-7:x4
4 0-1:x2,2-3:x2,4-5:x2,6-7:x2
6 4-4:x1,5-5:x1,6-6:x1,7-7:x1
7 0-1:x2,2-2:x1,3-3:x1
8 4-5:x2,6-6:x1,7-7:x1
9 0-0:x1,1-1:x1,2-3:x2
10 4-4:x1,5-5:x1,6-7:x2
-----
```

### **storcli /cx set linkconfig [conname=cx,cy] linkconfig=<val>**

This command helps you configure the links for different ports of a controller.

#### **Input example:**

```
storcli /c1/set linkconfig conname=c0,c1 linkconfig=x4
```

## Logging Commands

The StorCLI utility supports the following commands to generate and maintain log files:

```

storcli /cx delete events
storcli /cx delete termlog
storcli /cx show events file=<absolute path>
storcli /cx show eventloginfo
storcli /cx show termlog type=config|contents [logfile[=filename]]
storcli /cx show dequeuelog file =<filepath>
storcli /cx show alilog [logfile[=filename]]
```

The detailed description for each command follows.

### **storcli /cx delete events**

This command deletes all records in the event log.

#### **Input example:**

```
storcli /c0 delete events
```

### **storcli /cx delete termlog**

This command clears the TTY (firmware log for issue troubleshooting) logs.

#### **Input example:**

```
storcli /c0 delete termlog
```

### **storcli /cx show events file=<absolute path>**

This command prints the system log to a text file and saves the file in the specified location.

#### **Input example:**

```
storcli /c0 show events file=C:\Users\brohan\test\eventreports
```

#### **NOTE**

The command output for this command cannot be JSON formatted.

### **storcli /cx show eventloginfo**

This command shows the history of log files generated.

#### **Input example:**

```
storcli /c0 show eventloginfo type=config
```

#### **NOTE**

The command output for this command cannot be JSON formatted.

### **storcli /cx show termlog type=config|contents [logfile[=filename]]**

This command shows the firmware logs. The `config` option shows the term log configuration (settings of TTY BBU buffering); the `contents` option shows the term log. The `contents` option is the default.

If you use the `logfile` option in the command syntax, the logs are written to the specified file. If you do not specify a file name, then the logs are written to the `storsas.log` file. If you do not use the `logfile` option in the command syntax, the entire log output is printed to the console.

#### **Input example:**

```
storcli /c0 show termlog=contents logfile = log.txt
```

#### **NOTE**

The command output for this command cannot be JSON formatted.

### **storcli /cx show dequeuelog =<filepath>**

This command shows the debug log from the firmware.

#### **Input example:**

```
storcli /c0 show dequeuelog=<c:\test\log.txt>
```

#### **NOTE**

The command output for this command cannot be JSON formatted.



**storcli /cxshow alilog [logfile=*filename*]**

This command gets the controller property, TTY logs, and events to the specified file.

**Input example:**

```
storcli /c0 show alilog logfile = log.txt
```

**NOTE**

The command output for this command cannot be JSON formatted.

## Automated Physical Drive Configurations

The StorCLI utility supports the following automated physical drive configuration commands:

```
storcli /cx set autoconfig=r0 [immediate]
storcli /cx show autoconfig
storcli /cx set autoconfig=JBOD
storcli /cx set jbod=on|off
storcli /cx set autoconfig [=<none | R0 [immediate] | JBOD> [usecurrent] ] [[sesmgmt=on|off] [secured=on|off] [multipath=on|off] [multiinit=on|off] [discardpinnedcache=Val>] [failPDOnReadME=on|off] [Lowlatency=low|off]]
```

The detailed description for each command follows.

**storcli /cx set autoconfig=r0 [immediate]**

This command lets you set the controller's automated configuration policy to RAID 0. When set to RAID 0, all unconfigured physical drives are configured as single RAID 0 drives, until the maximum virtual drive limit is reached. The *immediate* option lets this command execute the conversion (to RAID 0) operation only on all the existing Unconfigured Good drives. Any physical drives newly connected in the future do not get converted to RAID 0. If you omit the *immediate* option in this command, all attached Unconfigured Good drives will become single drive RAID 0, and the *autoconfig* setting will become R0. Conversion to RAID 0 does not take place on newly connected physical drives, and the *autoconfig* setting will become R0. There is no setting that allows newly added Unconfigured Drives to be automatically converted to RAID 0. Automatic conversion to RAID 0 can be turned off by setting the *autoconfig* policy to *none*, which causes all drives to be converted to Unconfigured Good.

**Input examples:**

```
storcli /c0 set autoconfig=r0 immediate [[sesmgmt=[on|off]] [secured=[on|off]] [multipath=[on|off]
[multiinit=[on|off]]]
storcli /c0 set autoconfig [=<none | R0 [immediate] | JBOD> [usecurrent] ] [[sesmgmt=on|off] [secured=on|off] [multipath=on|off] [multiinit=on|off] [discardpinnedcache=<Val>] [failPDOnReadME=on|off]
[Lowlatency=low|off]]
```

**storcli /cx show autoconfig**

This command lets you view the automatic physical drive policy.

**Input example:**

```
storcli /c0 show autoconfig
```

**storcli /cx set autoconfig=JBOD**

This command lets you set the controller's automated physical drive policy to JBOD . When set to JBOD , all unconfigured physical drives are configured as JBODs.

**NOTE**

If this command fails, enable the legacy JBOD mode first and retry the command.

**Input example:**

```
storcli /c0 set autoconfig=JBOD
```

**storcli /cx set jbod=on|off**

This command lets you enable the legacy JBOD mode.

**Input example:**

```
storcli /c0 set jbod=on
```

**storcli /cx set autoconfig [=none | R0 [immediate] | JBOD> [usecurrent] ] [[sesmgmt=on|off] [secured=on|off] [multipath=on|off] [multiinit=on|off] [discardpinnedcache=Val>] [failPDOnReadME=on|off] [Lowlatency=low|off]]**

This command enables or disables autoconfig on the selected adapter(s). You can use the following options with the `set autoconfig` command.

**Table 61: Set Autoconfig Command Options**

| Option       | Description  |
|--------------|--|
| none         | Disable autoconfig.  |
| r0           | Autoconfig for single PD as r0.  |
| JBOD         | Autoconfig each PD as JBOD.  |
| immediate    | Configure.   |
| unconfigured | Pds once and will not configure any newly inserted UG drives and this option is only for R0. |
| usecurrent   | Use current parameter values that are supported while changing the mode.                     |
| sesmgmt      | Enable or disable SES management.  |
| secured      | Enable or disable Security on SED.   |
| multiinit    | Enable or disable multi init.  |
| multipath    | Enable or disable multi path.  |

**Input example:**

```
storclif /c0 set autoconfig [=R0 [immediate]> [usecurrent] ] [[sesmgmt=on] [secured=on] [multipath=on] [multiinit=on] [discardpinnedcache=Val>] [failPDOnReadME=on] [Lowlatency=low]]
```

**Recovery Commands (UEFI Only)**

Recovery commands perform recovery actions related to a specified controller. Recovery commands are supported on UEFI environment only. The Storage Command Line Interface Tool supports the following recovery commands.

```
storcli /cx download completeflash fileone=<IT boot loader image> filetwo=<firmware image>
storcli /cx erase all [excludemfg]
erase all [excludemfg]
```

The detailed description of each command follows:

### **storcli/cx download completeflash fileone=<IT boot loader image> filetwo=<firmware image>**

This command downloads the complete flash image on a nonoperational or an empty controller by performing host boot using the IT boot loader image. This command takes two files as arguments:

- `Fileone` — A valid `Itboot` loader image with which host boot is performed on the controller.
- `Filetwo` — A valid firmware image, which is flashed on the controller.

#### **Syntax:**

```
storcli /c1 download completeflash fileone=<Itbootloaderimage> filetwo=<FW image>
```

Where:

`/cx` — Specifies the controller where `x` is the index of the controller, and `filenames` are the arguments.

#### **Input examples:**

```
storcli /c1 download completeflash fileone=vtboot.rom filetwo=nopad.rom
```

#### **NOTE**

Unified StorCLI can flash only NoPad image. It cannot flash 16 MB/32 MB images.

### **storcli /cx erase all [excludemfg] file=<itbootloader image>**

This command erases the complete flash region, but retains the manufacturing data region.

#### **Syntax:**

```
storcli /cx erase all [excludemfg] file=<itbootloader image>
```

#### **Input examples:**

```
storcli /c1 erase all excludemfg file=vtboot.rom
```

#### **NOTE**

The StorCLI tool supports only the `erase all excludemfg` erase option. It does not support the `erase all` option.

## **Switching Between I<sup>2</sup>C and PCIe Mode Command**

```
storcli /cx show oob
storcli /cx set oob mode=<I2C|PCIe> maxpacketsize=<val> [spdm=on|off] [pldm=on|off]
```

### **storcli /cx show oob**

This command displays the current out-of-band (OOB) transport settings of the controller.

#### **Input example:**

```
storcli /c0 show oob
```

**storcli /c x set oob mode=<I2C|PCIe> maxpayloadsize=<var> [spdm=on|off] [pldm=on|off]**

This command allows you to select either I<sup>2</sup>C or PCIe as an out of band transport.

**Input example:**

```
storcli /c0 set oob mode=I2C maxpayloadsize=512 maxpayloadsize=1024
```

## Frequently Used Tasks

### Displaying the Version of the StorCLI Utility

The following command displays the version of the command line tool:

```
storcli -v
```

### Displaying the StorCLI Utility Help

The following command displays the StorCLI utility help:

```
storcli -h
```

Help appears for all the StorCLI tool commands.

### Displaying System Summary Information

The following command displays the summary of all the controller information:

```
storcli -show [all]
```

### Displaying Free Space in a Controller

The following command displays the free space available in the controller:

```
storcli /cx show freespace
```

## Adding Virtual Drives

The following command creates a virtual drive:

```
storcli /cx add vd type=raid[0|1|5|6|10|50|60] [Size=<VD1_Sz>,<VD2_Sz>,...|*all]
[name=<VDNAME1>,...] drives=e:s|e:s-x|e:s-x,y [PDperArray=x|auto*]
[SED] [pdcache=on|off|*default] [pi] [DimmerSwitch(ds)=default|automatic(auto)|
*none|maximum(max)|MaximumWithoutCaching(maxnocache)] [wt|*wb|awb] [nora|*ra]
[*direct|cached]
[strip=<8|16|32|64|128|256|512|1024] [AfterVd=x] [Spares=[e:]s|[e:]s-x|[e:]s-x,y]
```

**NOTE**

The supported strip size can vary from a minimum of 64 KB to 1 MB for MegaRAID controllers and only 64 KB for Integrated MegaRAID controllers.

```
[Cbsize = 0|1|2 Cbmode = 0|1|2]
[force]
```

The following inputs can be used when adding virtual drives:

- The controller in which the virtual drives are created.
- The RAID type of the virtual drives.  
The supported RAID types are 0, 1, 5, 6, 10, 50, and 60.
- The size of each virtual drive.
- The drives that create the virtual drives.  
Drives = *e:s|e:s-x|e:s-x,y*  
Where:
  - *e* specifies the enclosure ID.
  - *s* represents the slot in the enclosure.
  - *e:s-ex* is the range conventions used to represents slots *s* to *x* in the enclosure *e*.
- The physical drives per array.  
The physical drives per array can be set to a particular value.
- The `SED` option creates security-enabled drives.
- The `PDcache` option can be set to `on` or `off`.
- The `pi` option enables protection information.
- The `dimmerswitch` is the power save policy. It can be set to `default` or `automatic` \*, `none`, `maximum(max)`, or `MaximumWithoutCaching(maxnocache)`.
- The `wt` option disables write back.
- The `nora` option disables read ahead.
- The `cached` option enables the cached memory.
- The `strip` option sets the strip size.  
It can take the values 8, 16, 32, 64, 128, 256, 512, or 1024.

**NOTE**

The supported strip size can vary from a minimum of 64 KB to 1 MB for MegaRAID controllers, and only 64 KB for Integrated MegaRAID controllers.

- The `AfterVdX` option creates the virtual drives in the adjacent free slot next to the specified virtual drives.

**NOTE**

The \* indicates default values used in the creation of the virtual drives. If values are not specified, the default values are taken.

**Input example:**

This command creates a RAID volume of RAID 1 type from drives in slots 10 to slot 15 in enclosure 0. The strip size is 64 KB.

## Setting the Cache Policy in a Virtual Drive

The following command sets the write cache policy of the virtual drive:

```
storcli /cx/v(x|all) set wrcache=wt|wb|awb
```

The command sets the write cache to write back, write through, or always write back.

## Displaying Virtual Drive Information

The following command displays the virtual drive information for all the virtual drives in the controller:

```
storcli /cx/v(x|all) show
```

## Deleting Virtual Drives

The following command deletes virtual drives:

```
storcli /cx/v(x|all) del [cc|cachecade]
```

The following inputs are required when deleting a virtual drive:

- The controller on which the virtual drive or virtual drives is present.
- The virtual drives that must be deleted; or you can delete all the virtual drives on the controller using the `vall` option.
- The `cc` or `cachecade` option to confirm that the deleted drive is a CacheCade drive.

## Flashing Controller Firmware

The following command is used to flash the controller firmware.

```
storcli /cx download file=filepath  
[fwtype=<value>] [nosigchk] [noverchk] [resetnow]
```

### NOTE

The command output for this command cannot be JSON formatted.

## Recovery Commands (UEFI Only)

Recovery commands perform recovery actions related to a specified controller. Recovery commands are supported on UEFI environment only.

The following commands are used:

```
storcli /cx erase all excludemfg file=<it bootloader image>  
storcli /c1 erase all excludemfg file=vtboot.rom
```

## Events, Messages, and Behaviors

This appendix lists the LSA events that can appear in the event log and event messages.

LSA software monitors the activity and performance of all controllers in the workstation and the devices attached to them. When an event occurs, such as the start of an initialization, an event message appears in the log at the bottom of the LSA main menu window. The messages are also logged in the Windows Application log (Event Viewer).

### Error Levels

Each message that appears in the event log has a severity level that indicates the severity of the event, as shown in the following table.

**Table 62: Event Error Levels**

| Severity Level | Meaning   |
|----------------|---|
| Progress       | Progress message. No user action is necessary.                    |
| Information    | Informational message. No user action is necessary.               |
| Warning        | Some component might be close to a failure point.                 |
| Critical       | A component has failed, but the system has not lost data.         |
| Fatal          | A component has failed, and data loss has occurred or will occur. |

### Event Messages

The following table lists all of the event messages. The event message descriptions include placeholders for specific values that are determined when the event is generated. For example, in message 0x0000 in the Event Messages table, “%s” is replaced by the firmware version, which is read from the firmware when the event is generated.

**Table 63: Event Messages**

| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs                      |
|--------|----------------|---|--|
| 0x0000 | Information    | MegaRAID firmware initialization started (PCI ID %04x/%04x/%04x/%04x) | Logged at firmware initialization.                             |
| 0x0001 | Information    | MegaRAID firmware version %s  | Logged at firmware initialization to display firmware version. |
| 0x0002 | Fatal          | Unable to recover cache data from TBBU                                | Currently not logged.  |
| 0x0003 | Information    | Cache data recovered from TBBU successfully                           | Currently not logged.  |
| 0x0004 | Information    | Configuration cleared   | Logged when controller configuration is cleared.               |
| 0x0005 | Warning        | Cluster down; communication with peer lost                            | Currently not logged.  |
| 0x0006 | Information    | Virtual drive %s ownership changed from %02x to %02x                  | Currently not logged.  |
| 0x0007 | Information    | Alarm disabled by user  | Logged when user disables alarm.                               |
| 0x0008 | Information    | Alarm enabled by user   | Logged when user enables alarm.                                |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs   |
|--------|----------------|--|---|
| 0x0009 | Information    | Background initialization rate changed to %d% %                    | Logged to display background initialization progress indication in percentage.                                      |
| 0x000A | Fatal          | Controller cache discarded due to memory/energy pack problems      | Logged on cache discard due to hardware problems.   |
| 0x000B | Fatal          | Unable to recover cache data due to configuration mismatch         | Currently not logged.   |
| 0x000C | Information    | Cache data recovered successfully                                  | Logged when cache data is successfully recovered after reboot.  |
| 0x000D | Fatal          | Controller cache discarded due to firmware version incompatibility | Logged when cache data discarded because of firmware version mismatch.  |
| 0x000E | Information    | consistency check rate changed to %d%%                             | Logged to display consistency check progress indication percentage.   |
| 0x000F | Fatal          | Fatal firmware error: %s   | Logged in case of fatal errors and also while entering debug monitor.   |
| 0x0010 | Information    | Factory defaults restored  | Logged while controller is reset to factory defaults.   |
| 0x0011 | Warning        | Flash downloaded image corrupt                                     | Logged to inform downloaded flash image is corrupt.   |
| 0x0012 | Critical       | Flash erase error  | Logged in case of flash erase failure, generally after flash update.  |
| 0x0013 | Critical       | Flash timeout during erase   | Logged to indicate flash erase operation timed out.   |
| 0x0014 | Critical       | Flash error  | Generic unknown internal error during flash update flash.   |
| 0x0015 | Information    | Flashing image: %s   | Logged to display flash image name string before getting updated to controller.                                     |
| 0x0016 | Information    | Flash of new firmware images complete                              | Logged to inform successful update of flash images.   |
| 0x0017 | Critical       | Flash programming error  | Logged to notify, write failure during flash update, not being allowed usually due to internal controller settings. |
| 0x0018 | Critical       | Flash timeout during programming                                   | Logged to indicate flash write operation timed out.   |
| 0x0019 | Critical       | Flash chip type unknown  | Logged during flash update tried with unsupported flash chip type.  |
| 0x001A | Critical       | Flash command set unknown  | Logged while unsupported flash command set detected, most likely because of unsupported flash chip.                 |
| 0x001B | Critical       | Flash verify failure   | Logged when compare operation fails between written flash data and original data.                                   |
| 0x001C | Information    | Flush rate changed to %d seconds                                   | Logged to notify modified cache flush frequency in seconds.   |
| 0x001D | Information    | Hibernate command received from host                               | Logged to inform about reception of hibernation command from host to controller, generally during host shutdown.    |
| 0x001E | Information    | Event log cleared  | Logged when controller log has been cleared.  |
| 0x001F | Information    | Event log wrapped  | Logged when controller log has been wrapped around, when the maximum logs are written.                              |



| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs  |
|--------|----------------|---|--|
| 0x0020 | Fatal          | Multi-bit ECC error: ECAR=%x, ELOG=%x, (%s)   | Logged to notify ECC multi-bit error in memory, ELOG: ecc info (source, type, syndrome), ECAR: ecc address.                  |
| 0x0021 | Warning        | Single-bit ECC error: ECAR=%x, ELOG=%x, (%s)  | Logged to notify ECC single-bit error in memory, ELOG: ecc info (source, type, syndrome), ECAR: ecc address.                 |
| 0x0022 | Fatal          | Not enough controller memory  | Logged to notify fatal controller condition, when you run out of memory to allocate.   |
| 0x0023 | Information    | Patrol Read complete  | Logged when patrol read completes.   |
| 0x0024 | Information    | Patrol Read paused  | Logged when patrol read is paused.   |
| 0x0025 | Information    | Patrol Read Rate changed to %d%%  | Logged to indicate progress of patrol read in percentage.  |
| 0x0026 | Information    | Patrol Read resumed   | Logged when patrol read is resumed.  |
| 0x0027 | Information    | Patrol Read started   | Logged when patrol read is started.  |
| 0x0028 | Information    | Reconstruction rate changed to %d%%"  | Logged to indicate progress of reconstruction in percentage.   |
| 0x0029 | Information    | Drive group modification rate changed to %d% %  | Logged to indicate the change in drive group modification frequency.   |
| 0x002A | Information    | Shutdown command received from host   | Logged when shutdown command is received from host to controller.  |
| 0x002B | Information    | Test event: %s  | General controller event, with a generic string.   |
| 0x002C | Information    | Time established as %s; (%d seconds since power on)                                     | Logged when controller time was set from host, also displaying time since power on in seconds.                               |
| 0x002D | Information    | User entered firmware debugger  | Logged when user enters controller debug shell.  |
| 0x002E | Warning        | Background Initialization aborted on %s   | Logged to inform about user aborted background initialization on displayed LD number.  |
| 0x002F | Information    | Background Initialization corrected medium error (%s at %lx                             | Logged to inform about corrected medium error on displayed LD number, LBA number, PD number and PDLBA number in that order.  |
| 0x0030 | Information    | Background Initialization completed on %s   | Logged to inform background initialization completion on displayed LD.   |
| 0x0031 | Fatal          | Background Initialization completed with uncorrectable errors on %s                     | Logged to inform background initialization completion with error on displayed LD.  |
| 0x0032 | Fatal          | Background Initialization detected uncorrectable double medium errors (%s at %lx on %s) | Logged to inform background initialization completion with double medium error on displayed PD, PDLBA, and LD in that order. |
| 0x0033 | Critical       | Background Initialization failed on %s  | Logged to inform background initialization failure on displayed LD.  |
| 0x0034 | Progress       | Background Initialization progress on %s is %s  | Logged to inform background initialization progress in percentage of displayed LD.   |
| 0x0035 | Information    | Background Initialization started on %s   | Logged to inform background initialization started for displayed LD.   |

| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs  |
|--------|----------------|---|--|
| 0x0036 | Information    | Policy change on %s from %s to %s   | Logged to inform the changed policy for displayed LD with old and new policies.  |
| 0x0038 | Information    | Consistency Check aborted on %s   | Logged to inform aborted consistency check for displayed LD.   |
| 0x0039 | Information    | Consistency Check corrected medium error (%s at %lx                               | Logged when consistency check corrected medium error.  |
| 0x003A | Information    | Consistency Check done on %s  | Logged when consistency check has completed successfully on the LD.  |
| 0x003B | Information    | Consistency Check done with corrections on %s                                     | Logged when consistency check completed and inconsistency was found during check and was corrected.  |
| 0x003C | Fatal          | Consistency Check detected uncorrectable double medium errors (%s at %lx on %s)   | Logged when uncorrectable double medium error are detected while consistency check.  |
| 0x003D | Critical       | Consistency Check failed on %s  | Logged when consistency check failed as fatal error was found.   |
| 0x003E | Fatal          | Consistency Check completed with uncorrectable data on %s                         | Logged when uncorrectable error occurred during consistency check.   |
| 0x003F | Information    | Consistency Check found inconsistent parity on %s at strip %lx                    | Logged when consistency check finds inconsistency parity on a strip.   |
| 0x0040 | Warning        | Consistency Check inconsistency logging disabled on %s (too many inconsistencies) | Logged when consistency check finds too many inconsistent parity (greater than 10) and the inconsistency parity logging is disabled.         |
| 0x0041 | Progress       | Consistency Check progress on %s is %s  | Logged consistency check progress, the progress is logged only if the progress is greater than 1% at an interval of every 15 seconds.        |
| 0x0042 | Information    | Consistency Check started on %s   | Logged when consistency check has started.   |
| 0x0043 | Information    | Initialization aborted on %s  | Logged when consistency check is aborted by you or for some other reason.  |
| 0x0044 | Critical       | Initialization failed on %s   | Logged when initialization has failed.   |
| 0x0045 | Progress       | Initialization progress on %s is %s   | Logged initialization progress, the progress is logged only if the progress is greater than 1% at an interval of every 15 seconds.           |
| 0x0046 | Information    | Fast initialization started on %s   | Logged when quick initialization has started on an LD. The parameter to decide quick initialization or full initialization is passed by you. |
| 0x0047 | Information    | Full initialization started on %s   | Logged when full initialization has started.   |
| 0x0048 | Information    | Initialization complete on %s   | Logged when initialization has completed successfully.   |
| 0x0049 | Information    | LD Properties updated to %s (from %s)   | Logged when LD properties has been changed.  |
| 0x004A | Information    | Reconstruction complete on %s   | Logged when reconstruction has completed successfully.   |
| 0x004B | Fatal          | Reconstruction of %s stopped due to unrecoverable errors                          | Logged when reconstruction has finished because of failure (unrecoverable errors).   |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs   |
|--------|----------------|--|---|
| 0x004C | Fatal          | Reconstruct detected uncorrectable double medium errors (%s at %lx on %s at %lx) | Logged while reconstructing if an unrecoverable double medium error is encountered.   |
| 0x004D | Progress       | Reconstruction progress on %s is %s  | Logs reconstruction progress, the progress is logged only if the progress is greater than 1% at an interval of every 15 seconds.  |
| 0x004E | Information    | Reconstruction resumed on %s   | Logged when reconstruction resumes after a power cycle.   |
| 0x004F | Fatal          | Reconstruction resume of %s failed due to configuration mismatch                 | Logged when reconstruction resume failed due to configuration mismatch.   |
| 0x0050 | Information    | Reconstruction started on %s   | Logged on start of reconstruction on an LD.   |
| 0x0051 | Information    | State change on %s from %s to %s   | Logged when there is change in LD state. The event gives the new and old state. The state could be one of the following: LDS_OFFLINE, LDS_PARTIALLY_DEGRADED, LDS_DEGRADED, LDS_OPTIMAL.  |
| 0x0052 | Information    | Drive Clear aborted on %s  | Logged when PD clear is aborted.  |
| 0x0053 | Critical       | Drive Clear failed on %s (Error %02x)  | Logged when drive clear is failed and the even is logged along with error code.   |
| 0x0054 | Progress       | Drive Clear progress on %s is %s   | Logs drive clear progress, the progress is logged only if the progress is greater than 1% at an interval of every 15 seconds.   |
| 0x0055 | Information    | Drive Clear started on %s  | Logged when drive clear started on a PD.  |
| 0x0056 | Information    | Drive Clear completed on %s  | Logged when PD clear task is completed successfully on a PD.  |
| 0x0057 | Information    | Error on %s (Error %02x)   | Logged if read returns with uncorrectable error or same errors on both the drives or write long returns with an error (for example, puncture operation could failed).   |
| 0x0058 | Information    | Format complete on %s  | Logged when format has completed.   |
| 0x0059 | Information    | Format started on %s   | Logged when format unit is started on a PD.   |
| 0x005A | Warning        | Hot Spare SMART polling failed on %s (Error %02x)                                | Currently not logged.   |
| 0x005B | Information    | Drive inserted: %s   | Logged when drive is inserted and slot/enclosure fields of a PD are updated.  |
| 0x005C | Warning        | Drive %s is not supported  | Logged when the drive is not supported; reason could be the number of drive has exceeded the maximum number of supported drives or an unsupported drive is inserted like a SATA drive in SAS only enclosure or could be a unsupported drive type. |
| 0x005D | Information    | Patrol Read corrected medium error on %s at %lx                                  | Logged when patrol read has successfully completed recovery read and recovered data.  |
| 0x005E | Progress       | Patrol Read progress on %s is %s   | Logged only when patrol read has progress greater than 10% at an interval of every 15 seconds.  |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs  |
|--------|----------------|--|--|
| 0x005F | Fatal          | Patrol Read found an uncorrectable medium error on %s at %lx | Logged when patrol read is unable to recover data.   |
| 0x0060 | Warning        | Predictive failure: CDB: %s                                  | Logged when a failure is found during smart (predictive failure) poll.   |
| 0x0061 | Fatal          | Patrol Read puncturing bad block on %s at %lx                | Logged when patrol read punctures a block due to unrecoverable medium error.   |
| 0x0062 | Information    | Rebuild aborted by user on %s                                | Logged when the user aborts a Rebuild operation.   |
| 0x0063 | Information    | Rebuild complete on %s                                       | Logged when the Rebuild operation on a logical drive on a physical drive (which can have multiple LDs) is completed. |
| 0x0064 | Information    | Rebuild complete on %s                                       | Logged when Rebuild operation is completed for all logical drives on a given physical drive.                         |
| 0x0065 | Critical       | Rebuild failed on %s due to source drive error               | Logged if one of the source drives for the Rebuild operation fails or is removed.                                    |
| 0x0066 | Critical       | Rebuild failed on %s due to target drive error               | Logged if the target rebuild drive (on which Rebuild operation is going on) fails or is removed from the controller. |
| 0x0067 | Progress       | Rebuild progress on %s is %s                                 | Logged to indicate the progress (in percentage) of the Rebuild operation on a given physical drive.                  |
| 0x0068 | Information    | Rebuild resumed on %s  | Logged when the Rebuild operation on a physical drive resumes.   |
| 0x0069 | Information    | Rebuild started on %s  | Logged when the Rebuild operation is started on a physical drive.  |
| 0x006A | Information    | Rebuild automatically started on %s                          | Logged when the Rebuild operation kicks in on a spare.   |
| 0x006B | Critical       | Rebuild stopped on %s due to loss of cluster ownership       | Logged when the Rebuild operation is stopped due to loss of ownership.   |
| 0x006C | Fatal          | Reassign write operation failed on %s at %lx                 | Logged when a check condition or medium error is encountered for a reassigned write.                                 |
| 0x006D | Fatal          | Unrecoverable medium error during rebuild on %s at %lx       | Logged when the rebuild I/O encounters an unrecoverable medium error.  |
| 0x006E | Information    | Corrected medium error during recovery on %s at %lx          | Logged when recovery completed successfully and fixed a medium error.  |
| 0x006F | Fatal          | Unrecoverable medium error during recovery on %s at %lx      | Logged when the recovery for a failed I/O encounters a medium error.   |
| 0x0070 | Warning        | Drive removed: %s  | Logged when a drive is removed from the controller.  |
| 0x0071 | Information    | Unexpected sense: %s, CDB%s, Sense: %s                       | Logged when an I/O fails due to unexpected reasons and sense data needs to be logged.                                |
| 0x0072 | Information    | State change on %s from %s to %s                             | Logged when the state of a drive is changed by the firmware or by you.   |
| 0x0073 | Information    | State change by user on %s from %s to %s                     | Not logged by the firmware.  |
| 0x0074 | Warning        | Redundant path to %s broken                                  | Not logged by the firmware.  |
| 0x0075 | Information    | Redundant path to %s restored                                | Not logged by the firmware   |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs   |
|--------|----------------|--|---|
| 0x0076 | Information    | Dedicated Hot Spare Drive %s no longer useful due to deleted drive group | Not logged by the firmware.   |
| 0x0077 | Critical       | SAS topology error: Loop detected  | Logged when device discovery fails for a SAS device as a loop was detected.   |
| 0x0078 | Critical       | SAS topology error: Unaddressable device                                 | Logged when device discovery fails for a SAS device as an unaddressable device was found.   |
| 0x0079 | Critical       | SAS topology error: Multiple ports to the same SAS address               | Logged when device discovery fails for a SAS device multiple ports with same SAS address were detected.   |
| 0x007A | Critical       | SAS topology error: Expander error                                       | Not logged by the firmware.   |
| 0x007B | Critical       | SAS topology error: SMP timeout  | Logged when device discovery fails for a SAS device due to an SMP timeout.  |
| 0x007C | Critical       | SAS topology error: Out of route entries                                 | Logged when device discovery fails for a SAS device as expander route table is out of entries.  |
| 0x007D | Critical       | SAS topology error: Index not found                                      | Logged when device discovery fails for a SAS device as expander route table out of entries.   |
| 0x007E | Critical       | SAS topology error: SMP function failed                                  | Logged when device discovery fails for a SAS device due to an SMP function failure.   |
| 0x007F | Critical       | SAS topology error: SMP CRC error  | Logged when device discovery fails for a SAS device due to an SMP CRC error.  |
| 0x0080 | Critical       | SAS topology error: Multiple subtractive                                 | Logged when device discovery fails for a SAS device as a subtractive-to-subtractive link was detected.  |
| 0x0081 | Critical       | SAS topology error: Table to table                                       | Logged when device discovery fails for a SAS device as table-to-table link was detected.  |
| 0x0082 | Critical       | SAS topology error: Multiple paths                                       | Not logged by the firmware.   |
| 0x0083 | Fatal          | Unable to access device %s   | Logged when the inserted drive is bad and unusable.   |
| 0x0084 | Information    | Dedicated Hot Spare created on %s (%s)                                   | Logged when a drive is configured as a dedicated spare.   |
| 0x0085 | Information    | Dedicated Hot Spare %s disabled  | Logged when a drive is removes as a dedicated spare.  |
| 0x0086 | Warning        | Dedicated Hot Spare %s no longer useful for all drive groups             | Logged when an array with a dedicated spare is resized. The hot spare (dedicated to this array and possibly others) will not be applicable to other arrays. |
| 0x0087 | Information    | Global Hot Spare created on %s (%s)                                      | Logged when a drive is configured as a global hot spare.  |
| 0x0088 | Information    | Global Hot Spare %s disabled   | Logged when a drive configured as global host spare fails or is unconfigured by you.  |
| 0x0089 | Warning        | Global Hot Spare does not cover all drive groups                         | Logged when the global hot spare is too small (or does not meet the SAS/SATA restrictions) to cover certain arrays.   |

| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs  |
|--------|----------------|---|--|
| 0x008A | Information    | Created %s}   | Logged as soon as the new logical drive created is added to the firmware configuration.  |
| 0x008B | Information    | Deleted %s}   | Logged when the firmware removes an LD from its configuration upon a user request from the applications.   |
| 0x008C | Information    | Marking LD %s inconsistent due to active writes at shutdown                               | Logged when active writes are on one of the target disks of a RAID 5 LD at the time of shutdown.   |
| 0x008D | Information    | Energy Pack Present   | Logged during firmware initialization when checked if there is a energy pack present and the check turns out true. This event is also logged when a energy pack is inserted or replaced with a new one and the energy pack present check returns true. |
| 0x008E | Warning        | Energy Pack Not Present   | Logged if the user has not disabled "Energy Pack Not Present" warning at the boot time or if a energy pack has been removed.   |
| 0x008F | Information    | New Energy Pack Detected  | Logged when there is a subsequent boot after a new energy pack has been inserted.  |
| 0x0090 | Information    | Energy Pack has been replaced   | Logged when a new energy pack has been replaced with an old energy pack.   |
| 0x0091 | Warning        | Energy Pack temperature is high   | Logged when detected that the energy pack temperature is high during the periodic energy pack status check.  |
| 0x0092 | Warning        | Energy Pack voltage low   | Not logged by the firmware.  |
| 0x0093 | Information    | Energy Pack started charging  | Logged as part of monitoring the energy pack status when the energy pack is getting charged.   |
| 0x0094 | Information    | Energy Pack is discharging  | Logged as part of monitoring the energy pack status when the energy pack is getting discharged.  |
| 0x0095 | Information    | Energy Pack temperature is normal   | Logged as part of monitoring the energy pack status when the temperature of the energy pack is normal.   |
| 0x0096 | Fatal          | Energy Pack has failed and cannot support data retention. Please replace the Energy Pack. | Logged when there is not enough capacity left in energy pack for expected data retention time. Energy Pack has to be replaced.   |
| 0x0097 | Information    | Energy Pack relearn started   | Logged when the energy pack relearn started, initiated either by the user or automatically.  |
| 0x0098 | Information    | Energy Pack relearn in progress   | Logged as part of monitoring the energy pack status when the energy pack relearn is in progress.   |
| 0x0099 | Information    | Energy Pack relearn completed   | Logged as part of monitoring the energy pack status when the energy pack relearn is complete.  |
| 0x009A | Information    | Energy Pack relearn timed out   | Not logged by the firmware.  |
| 0x009B | Information    | Energy Pack relearn pending: Energy Pack is under charge                                  | Logged as part of monitoring the energy pack status when the energy pack relearn is requested but yet to start.  |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs  |
|--------|----------------|--|--|
| 0x009C | Information    | Energy Pack relearn postponed                          | Logged as part of monitoring the energy pack status when the energy pack relearn is requested but postponed as there is valid pinned cache present. This event can also be logged when learn delay interval has been explicitly set. |
| 0x009D | Information    | Energy Pack relearn will start in 4 days               | Logged as part of providing energy pack learn cycle information when auto learn is enabled.  |
| 0x009E | Information    | Energy Pack relearn will start in 2 day                | Logged as part of providing energy pack learn cycle information when auto learn is enabled.  |
| 0x009F | Information    | Energy Pack relearn will start in 1 day                | Logged as part of providing energy pack learn cycle information when auto learn is enabled.  |
| 0x00A0 | Information    | Energy Pack relearn will start in 5 hours              | Logged as part of providing energy pack learn cycle information when auto learn is enabled.  |
| 0x00A1 | Warning        | Energy Pack removed                                    | Logged as part of periodic monitoring of the energy pack status when a energy pack has been removed.   |
| 0x00A2 | Warning        | Current capacity of the energy pack is below threshold | Logged as part of monitoring the energy pack status when the capacity of the energy pack is below threshold.   |
| 0x00A3 | Information    | Current capacity of the energy pack is above threshold | Logged as part of monitoring the energy pack status when the capacity of the energy pack is above threshold.   |
| 0x00A4 | Information    | Enclosure (SES) discovered on %s                       | Logged when an enclosure (SES) is discovered for the first time.   |
| 0x00A5 | Information    | Enclosure (SAFTE) discovered on %s                     | Not logged by the firmware.  |
| 0x00A6 | Critical       | Enclosure %s communication lost                        | Logged when the communication with an enclosure has been lost.   |
| 0x00A7 | Information    | Enclosure %s communication restored                    | Logged when the communication with an enclosure has been restored.   |
| 0x00A8 | Critical       | Enclosure %s fan %d failed                             | Logged when an enclosure fan has failed.   |
| 0x00A9 | Information    | Enclosure %s fan %d inserted                           | Logged when an enclosure fan has been inserted newly.  |
| 0x00AA | Warning        | Enclosure %s fan %d removed                            | Logged when an enclosure fan has been removed.   |
| 0x00AB | Critical       | Enclosure %s power supply %d failed                    | Not logged by the firmware.  |
| 0x00AC | Information    | Enclosure %s power supply %d inserted                  | Logged when power supply has been inserted to an enclosure.  |
| 0x00AD | Warning        | Enclosure %s power supply %d removed                   | Logged when power supply has been removed from an enclosure.   |
| 0x00AE | Critical       | Enclosure %s SIM %d failed                             | Logged when the enclosure SIM has failed.  |
| 0x00AF | Information    | Enclosure %s SIM %d inserted                           | Logged when an enclosure SIM has been inserted.  |
| 0x00B0 | Critical       | Enclosure %s SIM %d removed                            | Logged when an enclosure initialization was completed but later the SIM was removed.   |



| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs  |
|--------|----------------|---|--|
| 0x00B1 | Warning        | Enclosure %s temperature sensor %d below warning threshold        | Logged when the enclosure services process has detected a temperature lower than a normal operating temperature or lower than the value indicated by the LOW WARNING THRESHOLD field in the Threshold In diagnostic page.    |
| 0x00B2 | Critical       | Enclosure %s temperature sensor %d below error threshold          | Logged when the enclosure services process has detected a temperature lower than a safe operating temperature or lower than the value indicated by the LOW CRITICAL THRESHOLD field in the Threshold In diagnostic page.     |
| 0x00B3 | Warning        | Enclosure %s temperature sensor %d above warning threshold        | Logged when the enclosure services process has detected a temperature higher than a normal operating temperature or higher than the value indicated by the HIGH WARNING THRESHOLD field in the Threshold In diagnostic page. |
| 0x00B4 | Critical       | Enclosure %s temperature sensor %d above error threshold          | Logged when the enclosure services process has detected a temperature higher than a safe operating temperature or higher than the value indicated by the HIGH CRITICAL THRESHOLD field in the Threshold In diagnostic page.  |
| 0x00B5 | Critical       | Enclosure %s shutdown   | Logged when an unrecoverable condition is detected in the enclosure.   |
| 0x00B6 | Warning        | Enclosure %s not supported; too many enclosures connected to port | Logged when the maximum allowed enclosures per port is exceeded.   |
| 0x00B7 | Critical       | Enclosure %s firmware mismatch                                    | Logged when two ESMs have different firmware versions.   |
| 0x00B8 | Warning        | Enclosure %s sensor %d bad  | Logged when the device is present on the phy, but the status does not indicate its presence.   |
| 0x00B9 | Critical       | Enclosure %s phy %d bad   | Logged when the status indicates a device presence, but there is no corresponding SAS address is associated with the device.   |
| 0x00BA | Critical       | Enclosure %s is unstable  | Logged when the enclosure services process reports the sense errors.   |
| 0x00BB | Critical       | Enclosure %s hardware error                                       | Logged when a critical or an unrecoverable enclosure failure has been detected by the enclosure services process.  |
| 0x00BC | Critical       | Enclosure %s not responding                                       | Logged when there is no response from the enclosure.   |
| 0x00BD | Warning        | SAS/SATA mixing not supported in enclosure; Drive %s disabled     | Logged when the SAS/SATA mixing in an enclosure is being violated.   |
| 0x00BE | Warning        | Enclosure (SES) hotplug on %s was detected, but is not supported  | Not reported to the user.  |
| 0x00BF | Information    | Clustering enabled  | Logged when the clustering is enabled in the controller properties.  |



| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs   |
|--------|----------------|---|---|
| 0x00C0 | Information    | Clustering disabled   | Logged when the clustering is disabled in the controller properties.  |
| 0x00C1 | Information    | Drive too small to be used for auto-rebuild on %s                         | Logged when the size of the drive is not sufficient for auto-rebuild.   |
| 0x00C2 | Information    | BBU enabled; changing WT virtual drives to WB                             | Logged when changing WT virtual drives to WB and the BBU status is good.  |
| 0x00C3 | Warning        | BBU disabled; changing WB virtual drives to WT                            | Logged when changing WB virtual drives to WT and the BBU status is bad.   |
| 0x00C4 | Warning        | Bad block table on drive %s is 80% full                                   | Logged when the bad block table on a drive is 80% full.   |
| 0x00C5 | Fatal          | Bad block table on drive %s is full; unable to log block %lx              | Logged when the bad block table on a drive is full and not able to add the bad block in the bad block table.                            |
| 0x00C6 | Information    | Consistency Check Aborted due to ownership loss on %s                     | Logged when the consistency check is aborted due to ownership is lost.  |
| 0x00C7 | Information    | Background Initialization (BGI) Aborted Due to Ownership Loss on %s       | Logged when the background initialization (BGI) is aborted due to ownership loss.   |
| 0x00C8 | Critical       | Energy Pack/charger problems detected; SOH Bad                            | Logged when the energy pack is not presented or removed and SOH is bad.   |
| 0x00C9 | Warning        | Single-bit ECC error: ECAR=%x, ELOG=%x, (%s); warning threshold exceeded  | Logged when the single-bit ECC errors exceeded the warning threshold.   |
| 0x00CA | Critical       | Single-bit ECC error: ECAR=%x, ELOG=%x, (%s); critical threshold exceeded | Logged when the single-bit ECC errors exceeded the critical threshold.  |
| 0x00CB | Critical       | Single-bit ECC error: ECAR=%x, ELOG=%x, (%s); further reporting disabled  | Logged when the single-bit ECC errors exceeded all the thresholds and disable further logging.  |
| 0x00CC | Warning        | Enclosure %s Power supply %d switched off                                 | Logged when the enclosure services process has detected that the enclosure power supply is switched off and it was switched on earlier. |
| 0x00CD | Information    | Enclosure %s Power supply %d switched on                                  | Logged when the enclosure services process has detected that the enclosure power supply is switched on and it was switched off earlier. |
| 0x00CE | Warning        | Enclosure %s Power supply %d cable removed                                | Logged when the enclosure services process has detected that the enclosure power supply cable is removed and it was inserted earlier.   |
| 0x00CF | Information    | Enclosure %s Power supply %d cable inserted                               | Logged when the enclosure services process has detected that the enclosure power supply cable is inserted and it was removed earlier.   |
| 0x00D0 | Information    | Enclosure %s Fan %d returned to normal                                    | Logged when the enclosure services process has detected that the current status of a fan is good and it was failed earlier.             |
| 0x00D1 | Information    | BBU Retention test was initiated on previous boot                         | Logged when the energy pack retention test was initiated on previous boot.  |
| 0x00D2 | Information    | BBU Retention test passed   | Logged when the energy pack retention test passed successfully.   |

| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs  |
|--------|----------------|---|--|
| 0x00D3 | Critical       | BBU Retention test failed!  | Logged when the energy pack retention test failed.                                     |
| 0x00D4 | Information    | NVRAM Retention test was initiated on previous boot                         | Logged when the NVRAM retention test was initiated on previous boot.                   |
| 0x00D5 | Information    | NVRAM Retention test passed   | Logged when the NVRAM retention test passed successfully.                              |
| 0x00D6 | Critical       | NVRAM Retention test failed!  | Logged when the NVRAM retention test failed.   |
| 0x00D7 | Information    | %s test completed %d passes successfully                                    | Logged when the controller diagnostics test passes successfully.                       |
| 0x00D8 | Critical       | %s test FAILED on %d pass. Fail data: errorOffset=%x goodData=%x badData=%x | Logged when the controller diagnostics test fails.                                     |
| 0x00D9 | Information    | Self check diagnostics completed  | Logged when self-check diagnostics is completed.                                       |
| 0x00DA | Information    | Foreign Configuration detected  | Logged when foreign configuration is detected.   |
| 0x00DB | Information    | Foreign Configuration imported  | Logged when foreign configuration is imported.   |
| 0x00DC | Information    | Foreign Configuration cleared   | Logged when foreign configuration is cleared.  |
| 0x00DD | Warning        | NVRAM is corrupt; reinitializing  | Logged when NVRAM is corrupt and re-initialized.                                       |
| 0x00DE | Warning        | NVRAM mismatch occurred   | Logged when NVRAM mismatch occurs.   |
| 0x00DF | Warning        | SAS wide port %d lost link on PHY %d  | Logged when SAS wide port lost link on a PHY.  |
| 0x00E0 | Information    | SAS wide port %d restored link on PHY %d                                    | Logged when a SAS wide port restored link on a PHY.                                    |
| 0x00E1 | Warning        | SAS port %d, PHY %d has exceeded the allowed error rate                     | Logged when a SAS PHY on port has exceeded the allowed error rate.                     |
| 0x00E2 | Information    | Bad block reassigned on %s at %lx to %lx                                    | Logged when a bad block is reassigned on a drive from a error sector to a new sector.  |
| 0x00E3 | Information    | Controller Hot Plug detected  | Logged when a controller hot plug is detected.   |
| 0x00E4 | Warning        | Enclosure %s temperature sensor %d differential detected                    | Logged when an enclosure temperature sensor differential is detected.                  |
| 0x00E5 | Information    | Drive test cannot start. No qualifying drives found                         | Logged when disk test cannot start. No qualifying disks found.                         |
| 0x00E6 | Information    | Time duration provided by host is not sufficient for self check             | Logged when time duration provided by the host is not sufficient for self check.       |
| 0x00E7 | Information    | Marked Missing for %s on drive group %d row %d                              | Logged when a physical drive is marked <i>missing</i> on an array at a particular row. |
| 0x00E8 | Information    | Replaced Missing as %s on drive group %d row %d                             | Logged when a physical drive is Replaced Missing on an array at a particular row.      |
| 0x00E9 | Information    | Enclosure %s Temperature %d returned to normal                              | Logged when an enclosure temperature returns to normal.                                |
| 0x00EA | Information    | Enclosure %s Firmware download in progress                                  | Logged when an enclosure firmware download is in progress.                             |
| 0x00EB | Warning        | Enclosure %s Firmware download failed                                       | Logged when an enclosure firmware download failed.                                     |
| 0x00EC | Warning        | %s is not a certified drive   | Logged if the drive is not certified.  |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs  |
|--------|----------------|--|--|
| 0x00ED | Information    | Dirty cache data discarded by user   | Logged when dirty cache data is discarded by the user.   |
| 0x00EE | Warning        | Drives missing from configuration at boot  | Logged when physical drives are missing from configuration at boot.  |
| 0x00EF | Warning        | Virtual drives (VDs) missing drives and will go offline at boot: %s  | Logged when virtual drives are missing drives and will go offline at boot.   |
| 0x00F0 | Warning        | VDs missing at boot: %s  | Logged when virtual drives are missing at boot.  |
| 0x00F1 | Warning        | Previous configuration completely missing at boot  | Logged when the previous configuration is completely missing at boot.  |
| 0x00F2 | Information    | Energy Pack charge complete  | Logged when an energy pack charge is completed.  |
| 0x00F3 | Information    | Enclosure %s fan %d speed changed  | Logged when an enclosure fan speed changed.  |
| 0x00F4 | Information    | Dedicated spare %s imported as global due to missing arrays  | Logged when a dedicated spare is imported as global due to missing arrays.   |
| 0x00F5 | Information    | %s rebuild not possible as SAS/SATA is not supported in an array   | Logged when a rebuild is not possible because SAS/SATA is not supported in an array.                                     |
| 0x00F6 | Information    | SEP %s has been rebooted as a part of enclosure firmware download. SEP will be unavailable until this process completes. | Logged when SEP has been rebooted as part of enclosure firmware download. It will be unavailable until reboot completes. |
| 0x00F7 | Information    | Inserted PD: %s Info: %s   | Logged when a physical drive is inserted.  |
| 0x00F8 | Information    | Removed PD: %s Info: %s  | Logged when a physical drive is removed.   |
| 0x00F9 | Information    | VD %s is now OPTIMAL   | Logged when a logical drive state changes to optimal.  |
| 0x00FA | Warning        | VD %s is now PARTIALLY DEGRADED  | Logged when a logical drive state changes to a partially degraded state.   |
| 0x00FB | Critical       | VD %s is now DEGRADED  | Logged when a logical drive state changes to degraded state.   |
| 0x00FC | Fatal          | VD %s is now OFFLINE   | Logged when a logical drive state changes to offline state.  |
| 0x00FD | Warning        | Energy Pack requires reconditioning; please initiate a LEARN cycle   | Logged when a energy pack requires reconditioning; initiate a LEARN cycle.   |
| 0x00FE | Warning        | VD %s disabled because RAID-5 is not supported by this RAID key  | Logged when a virtual drive is disabled because RAID 5 is not supported by this RAID key.                                |
| 0x00FF | Warning        | VD %s disabled because RAID-6 is not supported by this controller  | Logged when a virtual drive is disabled because RAID 6 is not supported by this controller.                              |
| 0x0100 | Warning        | VD %s disabled because SAS drives are not supported by this RAID key   | Logged when a virtual drive is disabled because SAS drives are not supported by this RAID key.                           |
| 0x0101 | Warning        | PD missing: %s   | Logged to provide information about the missing drive during boot.   |
| 0x0102 | Warning        | Puncturing of LBAs enabled   | Currently not logged in the firmware.  |
| 0x0103 | Warning        | Puncturing of LBAs disabled  | Currently not logged in the firmware.  |
| 0x0104 | Critical       | Enclosure %s EMM %d not installed  | Logged when enclosure SIM is not installed.  |
| 0x0105 | Information    | Package version %s   | Prints the package version number.   |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs   |
|--------|----------------|--|---|
| 0x0106 | Warning        | Global affinity Hot Spare %s commissioned in a different enclosure       | Logged when a hot spare that is a part of an enclosure is commissioned in a different enclosure.                                      |
| 0x0107 | Warning        | Foreign configuration table overflow                                     | Logged when the number of GUIDs to import exceeds the total supported by the firmware.  |
| 0x0108 | Warning        | Partial foreign configuration imported, PDs not imported:%s              | Logged when all the foreign configuration drives could not be imported.   |
| 0x0109 | Information    | Connector %s is active   | Logged during initial boot when a SAS MUX connector is found for the controller.  |
| 0x010A | Information    | Board Revision %s  | Logged during boot.   |
| 0x010B | Warning        | Command timeout on PD %s, CDB:%s   | Logged when command to a PD times out.  |
| 0x010C | Warning        | PD %s reset (Type %02x)  | Logged when PD is reset.  |
| 0x010D | Warning        | VD bad block table on %s is 80% full                                     | Logged when the number of bad blocks entries is at 80% of what can be supported in the firmware.                                      |
| 0x010E | Fatal          | VD bad block table on %s is full; unable to log block %lx (on %s at %lx) | Logged when the number of bad blocks exceed what can be supported in the firmware.  |
| 0x010F | Fatal          | Uncorrectable medium error logged for %s at %lx (on %s at %lx)           | Logged when an uncorrectable medium error is detected.  |
| 0x0110 | Information    | VD medium error corrected on %s at %lx                                   | Logged on the corrected medium error.   |
| 0x0111 | Warning        | Bad block table on PD %s is 100% full                                    | Logged when the bad block table is 100% full. Any more media errors on this physical drive will not be logged in the bad block table. |
| 0x0112 | Warning        | VD bad block table on PD %s is 100% full                                 | Logged when the bad block table is 100% full. Any more media errors on this logical drive will not be logged in the bad block table.  |
| 0x0113 | Fatal          | Controller needs replacement, IOP is faulty                              | Currently not logged in the firmware.   |
| 0x0114 | Information    | Replace Drive started on PD %s from PD %s                                | Logged when replace is started.   |
| 0x0115 | Information    | Replace Drive aborted on PD %s and src is PD %s                          | Logged when replace is aborted.   |
| 0x0116 | Information    | Replace Drive complete on PD %s from PD %s                               | Logged when replace is completed.   |
| 0x0117 | Progress       | Replace Drive progress on PD %s is %s                                    | Logged to provide the progress of replace.  |
| 0x0118 | Information    | Replace Drive resumed on PD %s from %s                                   | Logged when replace operation is resumed.   |
| 0x0119 | Information    | Replace Drive automatically started on PD %s from %s                     | Logged on automatic start of replace.   |
| 0x011A | Critical       | Replace Drive failed on PD %s due to source %s error                     | Logged when the source physical drive of a replace fails. The replace stops and rebuild starts on the destination physical drive.     |
| 0x011B | Warning        | Early Power off warning was unsuccessful                                 | Currently not logged in the firmware.   |
| 0x011C | Information    | BBU FRU is %s  | Logged only for IBM.  |
| 0x011D | Information    | %s FRU is %s   | Logged if FRU data is present. Logged only for IBM.   |
| 0x011E | Information    | Controller hardware revision ID %s                                       | Currently not used in the firmware.   |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs  |
|--------|----------------|--|--|
| 0x011F | Warning        | Foreign import shall result in a backward incompatible upgrade of configuration metadata   | Currently not used in the firmware.  |
| 0x0120 | Information    | Redundant path restored for PD %s  | Logged when new path is added for the physical drives.                             |
| 0x0121 | Warning        | Redundant path broken for PD %s  | Logged when one path is removed.   |
| 0x0122 | Information    | Redundant enclosure EMM %s inserted for EMM %s   | Logged when an enclosure is added.   |
| 0x0123 | Warning        | Redundant enclosure EMM %s removed for EMM %s  | Logged when an enclosure is removed  |
| 0x0124 | Information    | Patrol Read can't be started, as PDs are either not ONLINE, or are in a VD with an active process, or are in an excluded VD  | Logged when none of the disks can start PR.  |
| 0x0125 | Information    | Replace Drive aborted by user on PD %s and src is PD %s  | Logged when replace is aborted by the user.  |
| 0x0126 | Critical       | Replace Drive aborted on hot spare %s from %s, as hot spare needed for rebuild   | Logged when replace is aborted on a Hotspare.                                      |
| 0x0127 | Warning        | Replace Drive aborted on PD %s from PD %s, as rebuild required in the array  | Logged when replace is stopped for a higher priority Rebuild operation on a drive. |
| 0x0128 | Fatal          | Controller cache discarded for missing or offline VD %s<br>When a VD with cached data goes offline or missing during runtime, the cache for the VD is discarded. Because the VD is offline, the cache cannot be saved. | Logged when pinned cache lines are discarded for an LD.                            |
| 0x0129 | Information    | Replace Drive cannot be started as PD %s is too small for src PD %s  | Logged when the destination PD is too small for replace.                           |
| 0x012A | Information    | Replace Drive cannot be started on PD %s from PD %s, as SAS/SATA is not supported in an array  | Logged when there is a SAS/SATA mixing violation for the destination PD.           |
| 0x012B | Information    | Microcode update started on PD %s  | Logged when PD firmware download starts.   |
| 0x012C | Information    | Microcode update completed on PD %s  | Logged when PD firmware download completes.  |
| 0x012D | Warning        | Microcode update timeout on PD %s  | Logged when PD firmware download does not complete and times out.                  |
| 0x012E | Warning        | Microcode update failed on PD %s   | Logged when PD firmware download fails.  |
| 0x012F | Information    | Controller properties changed  | Logged when any of the controller properties has changed.                          |
| 0x0130 | Information    | Patrol Read properties changed   | Currently not logged in the firmware.  |
| 0x0131 | Information    | CC Schedule properties changed   | Logged when consistency check scheduling property has changed.                     |
| 0x0132 | Information    | Energy Pack properties changed   | Logged when any of the BBU properties have changed.                                |
| 0x0133 | Warning        | Periodic Energy Pack Relearn is pending. Please initiate manual learn cycle as Automatic learn is not enabled  | Logged when BBU periodic relearn is pending.                                       |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs  |
|--------|----------------|--|--|
| 0x0134 | Information    | Drive security key created   | Logged when controller lock key is created.  |
| 0x0135 | Information    | Drive security key backed up   | Logged when controller lock key is backed up.  |
| 0x0136 | Information    | Drive security key from escrow, verified   | Logged when controller lock key is verified from escrow.                                     |
| 0x0137 | Information    | Drive security key changed   | Logged when controller lock key is re-keyed.   |
| 0x0138 | Warning        | Drive security key, re-key operation failed  | Logged when controller lock re-key operation failed.   |
| 0x0139 | Warning        | Drive security key is invalid  | Logged when the controller lock is not valid.  |
| 0x013A | Information    | Drive security key destroyed   | Logged when the controller lock key is destroyed.  |
| 0x013B | Warning        | Drive security key from escrow is invalid  | Logged when the controller escrow key is not valid. This escrow key cannot unlock any drive. |
| 0x013C | Information    | VD %s is now secured   | Logged when a secure LD is created.  |
| 0x013D | Warning        | VD %s is partially secured   | Logged when all the drives in the array are not secure.                                      |
| 0x013E | Information    | PD %s security activated   | Logged when a PD security key is set.  |
| 0x013F | Information    | PD %s security disabled  | Logged when a security key is removed from an FDE drive.                                     |
| 0x0140 | Information    | PD %s is reprovisioned   | Logged when a PD security is cleared.  |
| 0x0141 | Information    | PD %s security key changed   | Logged when a PD lock key is re-keyed.   |
| 0x0142 | Fatal          | Security subsystem problems detected for PD %s   | Logged when a PD security cannot be set.   |
| 0x0143 | Fatal          | Controller cache pinned for missing or offline VD %s                                       | Logged when an LD cache is pinned.   |
| 0x0144 | Fatal          | Controller cache pinned for missing or offline VDs: %s                                     | Logged when a pinned cache is found during online controller reset (OCR).                    |
| 0x0145 | Information    | Controller cache discarded by user for VDs: %s   | Logged when an LD pinned cache is discarded by the user.                                     |
| 0x0146 | Information    | Controller cache destaged for VD %s  | Logged when an LD pinned cache is recovered.   |
| 0x0147 | Warning        | Consistency Check started on an inconsistent VD %s   | Logged when a consistency check is started on an inconsistent LD.                            |
| 0x0148 | Warning        | Drive security key failure, cannot access secured configuration                            | Logged when an invalid lock key is detected.   |
| 0x0149 | Warning        | Drive security password from user is invalid   | Not logged.  |
| 0x014A | Warning        | Detected error with the remote Energy Pack connector cable                                 | Not logged.  |
| 0x014B | Information    | Power state change on PD %s from %s to %s  | Logged when the PD power state (spun up, spun down, in-transition) changes.                  |
| 0x014C | Information    | Enclosure %s element (SES code 0x%x) status changed  | Not logged.  |
| 0x014D | Information    | PD %s rebuild not possible as HDD/CacheCade software mix is not supported in a drive group | Logged when mixing violation occurs due to HDD/SSD mismatch.                                 |

| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs   |
|--------|----------------|---|---|
| 0x014E | Information    | Replace Drive cannot be started on PD %s from %s, as HDD/CacheCade software mix is not supported in a drive group | Logged when replace could not be started on a PD because HDD/CacheCade software mix was not supported in a drive group. |
| 0x014F | Information    | VD bad block table on %s is cleared   | Logged when a VD bad block table was cleared.   |
| 0x0150 | Critical       | SAS topology error: 0x%lx   | Logged when a SAS topology error occurred.  |
| 0x0151 | Information    | VD cluster of medium errors corrected for %s at %lx (on %s at %lx)  | Logged when medium errors were corrected for a PD for an LD.  |
| 0x0152 | Information    | Controller requests a host bus rescan   | Logged when controller requested a host bus rescan.   |
| 0x0153 | Information    | Controller repurposed and factory defaults restored   | Logged when controller repurposed and factory defaults were restored.   |
| 0x0154 | Information    | Drive security key binding updated  | Logged when drive security key binding was updated.   |
| 0x0159 | Critical       | Controller encountered a fatal error and was reset  | Logged when a controller encountered a fatal error and was reset.   |
| 0x015A | Information    | Snapshots enabled on %s (Repository %s)   | Logged when snapshot was enabled on an LD.  |
| 0x015B | Information    | Snapshots disabled on %s (Repository %s) by the user  | Logged when snapshot was disabled on an LD by the user.   |
| 0x015C | Critical       | Snapshots disabled on %s (Repository %s), due to a fatal error  | Logged when snapshot was disabled on an LD due to a fatal error.  |
| 0x015D | Information    | Snapshot created on %s at %s  | Logged when snapshot was created on an LD.  |
| 0x015E | Information    | Snapshot deleted on %s at %s  | Logged when snapshot was deleted on an LD.  |
| 0x015F | Information    | View created at %s to a snapshot at %s for %s   | Logged when view was created at an LD.  |
| 0x0160 | Information    | View at %s is deleted, to snapshot at %s for %s   | Logged when view at an LD was deleted.  |
| 0x0161 | Information    | Snapshot rollback started on %s from snapshot at %s   | Logged when snapshot rollback was started on an LD.   |
| 0x0162 | Fatal          | Snapshot rollback on %s internally aborted for snapshot at %s   | Logged when snapshot rollback was internally aborted.   |
| 0x0163 | Information    | Snapshot rollback on %s completed for snapshot at %s  | Logged when snapshot rollback on an LD was completed.   |
| 0x0164 | Information    | Snapshot rollback progress for snapshot at %s, on %s is %s  | Logged to report snapshot rollback progress on an LD.   |
| 0x0165 | Warning        | Snapshot space for %s in snapshot repository %s, is 80%% full   | Logged when snapshot space for an LD in a snapshot repository was 80% full.   |
| 0x0166 | Critical       | Snapshot space for %s in snapshot repository %s, is full  | Logged when snapshot space for an LD in a snapshot repository was full.   |
| 0x0167 | Warning        | View at %s to snapshot at %s, is 80%% full on snapshot repository %s  | Logged when view at an LD to a snapshot was 80% full on a snapshot repository.  |
| 0x0168 | Critical       | View at %s to snapshot at %s, is full on snapshot repository %s   | Logged when view at an LD to a snapshot was full on a snapshot repository.  |
| 0x0169 | Critical       | Snapshot repository lost for %s   | Logged when snapshot repository was lost for an LD.   |



| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs   |
|--------|----------------|---|---|
| 0x016A | Warning        | Snapshot repository restored for %s   | Logged when snapshot repository was restored for an LD.                                     |
| 0x016B | Critical       | Snapshot encountered an unexpected internal error: 0x%lx                      | Logged when a snapshot encountered an unexpected internal error.                            |
| 0x016C | Information    | Auto Snapshot enabled on %s (snapshot repository %s)                          | Logged when an auto snapshot is enabled.  |
| 0x016D | Information    | Auto Snapshot disabled on %s (snapshot repository %s)                         | Logged when auto snapshot was disabled.   |
| 0x016E | Critical       | Configuration command could not be committed to disk, please retry            | Logged when a configuration command could not be committed to disk and was asked to retry.  |
| 0x016F | Information    | COD on %s updated as it was stale   | Logged when COD in DDF is updated due to various reasons.                                   |
| 0x0170 | Warning        | Power state change failed on %s (from %s to %s)                               | Logged when a power state change failed on a PD.  |
| 0x0171 | Warning        | %s is not available   | Logged when an LD was not available.  |
| 0x0172 | Information    | %s is available   | Logged when an LD was available.  |
| 0x0173 | Information    | %s is used for CacheCade with capacity 0x%lx logical blocks                   | Logged when an LD was used for CacheCade with the indicated capacity in logical blocks.     |
| 0x0174 | Information    | %s is using CacheCade %s  | Logged when an LD was using CacheCade.  |
| 0x0175 | Information    | %s is no longer using CacheCade %s  | Logged when an LD was no longer using CacheCade.  |
| 0x0176 | Critical       | Snapshot deleted due to resource constraints for %s in snapshot repository %s | Logged when the snapshot is deleted due to resource constraints in the snapshot repository. |
| 0x0177 | Warning        | Auto Snapshot failed for %s in snapshot repository %s                         | Logged when auto snapshot fails for a VD in snapshot repository.                            |
| 0x0178 | Warning        | Controller reset on-board expander  | Logged when the chip reset issued to on-board expander.                                     |
| 0x0179 | Warning        | CacheCade (%s) capacity changed and is now 0x%lx logical blocks               | Logged when the CacheCade capacity is changed along with the current capacity.              |
| 0x017A | Warning        | Energy Pack cannot initiate transparent learn cycles                          | Logged when the energy pack cannot initiate transparent learn cycles.                       |
| 0x017B | Information    | Premium feature %s key was applied for - %s                                   | Logged when the premium feature key was applied.  |
| 0x017C | Information    | Snapshot schedule properties changed on %s                                    | Logged when the snapshot schedule properties changed.                                       |
| 0x017D | Information    | Snapshot scheduled action is due on %s  | Logged when the snapshot scheduled action is due.   |
| 0x017E | Information    | Performance Metrics: collection command 0x%lx                                 | Logged during the performance metrics collection.   |
| 0x017F | Information    | Premium feature %s key was transferred - %s                                   | Logged when the premium feature key was transferred.  |
| 0x0180 | Information    | Premium feature serial number %s  | Logged when displaying the premium feature serial number.                                   |



| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs  |
|--------|----------------|--|--|
| 0x0181 | Warning        | Premium feature serial number mismatched.<br>Key-vault serial num - %s                           | Logged when premium feature serial number mismatched.  |
| 0x0182 | Warning        | Energy Pack cannot support data retention for more than %d hours. Please replace the Energy Pack | Logged during the energy pack monitoring and it displays the remaining data retention time of the energy pack. |
| 0x0183 | Information    | %s power policy changed to %s (from %s)  | Logged when the power policy of an LD is changed.  |
| 0x0184 | Warning        | %s cannot transition to max power savings  | Logged when LD cannot transition to maximum power savings.   |
| 0x0185 | Information    | Host driver is loaded and operational  | This event is not reported to the user.  |
| 0x0186 | Information    | %s mirror broken   | Logged when the mirror is broken for an LD.  |
| 0x0187 | Information    | %s mirror joined   | Logged when joining the LD with its broken mirror.   |
| 0x0188 | Warning        | %s link %d failure in wide port  | This event is not reported to the user.  |
| 0x0189 | Information    | %s link %d restored in wide port   | This event is not reported to the user.  |
| 0x018A | Information    | Memory module FRU is %s  | This event is not reported to the user.  |
| 0x018B | Warning        | Cache-vault power pack is sub-optimal. Please replace the pack                                   | This event is not reported to the user.  |
| 0x018C | Warning        | Foreign configuration auto-import did not import any drives                                      | Logged when the foreign configuration auto-import did not import any drives.                                   |
| 0x018D | Warning        | Cache-vault microcode update required  | Logged when the BMU is not in Normal mode and CacheVault microcode update required.                            |
| 0x018E | Warning        | CacheCade (%s) capacity exceeds maximum allowed size, extra capacity is not used                 | Logged when the CacheCade capacity exceeds maximum allowed size; extra capacity is not used.                   |
| 0x018F | Warning        | LD (%s) protection information lost  | Logged when the protection information is lost for an LD.  |
| 0x0190 | Information    | Diagnostics passed for %s  | Logged when the SHIELD diagnostics passed for a PD.  |
| 0x0191 | Critical       | Diagnostics failed for %s  | Logged when the SHIELD diagnostics failed for a PD.  |
| 0x0192 | Information    | Server Power capability Diagnostic Test Started  | Logged when the server power capability diagnostic test starts.  |
| 0x0193 | Information    | Drive Cache settings enabled during rebuild for %s   | Logged when the drive cache settings are enabled during rebuild for a PD.                                      |
| 0x0194 | Information    | Drive Cache settings restored after rebuild for %s   | Logged when the drive cache settings are restored after rebuild for a PD.                                      |
| 0x0195 | Information    | Drive %s commissioned as Emergency spare   | Logged when the drive is commissioned as an emergency spare.   |
| 0x0196 | Warning        | Reminder: Potential non-optimal configuration due to drive %s commissioned as emergency spare    | Logged when the PD is being imported is an emergency spare.  |
| 0x0197 | Information    | Consistency Check suspended on %s  | Logged when the consistency check is suspended on an LD.   |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs   |
|--------|----------------|--|---|
| 0x0198 | Information    | Consistency Check resumed on %s  | Logged when the consistency check is resumed on an LD.                                  |
| 0x0199 | Information    | Background Initialization suspended on %s                              | Logged when the background initialization is suspended on an LD.                        |
| 0x019A | Information    | Background Initialization resumed on %                                 | Logged when the background initialization is resumed on an LD.                          |
| 0x019B | Information    | Reconstruction suspended on %s   | Logged when the reconstruction is suspended on an LD.                                   |
| 0x019C | Information    | Rebuild suspended on %   | Logged when the rebuild is suspended on a PD.   |
| 0x019D | Information    | Replace Drive suspended on %s  | Logged when the replace is suspended on a PD.   |
| 0x019E | Information    | Reminder: Consistency Check suspended on %                             | Logged as a reminder when the consistency check is suspended on an LD.                  |
| 0x019F | Information    | Reminder: Background Initialization suspended on %s                    | Logged as a reminder when the background initialization is suspended on an LD.          |
| 0x01A0 | Information    | Reminder: Reconstruction suspended on %s                               | Logged as a reminder when the reconstruction is suspended on an LD.                     |
| 0x01A1 | Information    | Reminder: Rebuild suspended on %s                                      | Logged as a reminder when the rebuild is suspended on a PD.                             |
| 0x01A2 | Information    | Reminder: Replace Drive suspended on %s                                | Logged as a reminder when replace is suspended on a PD.                                 |
| 0x01A3 | Information    | Reminder: Patrol Read suspended  | Logged as a reminder when the patrol read is suspended.                                 |
| 0x01A4 | Information    | Erase aborted on %s  | Logged when the erase is aborted on a PD.   |
| 0x01A5 | Critical       | Erase failed on %s (Error %02x)  | Logged when the erase is failed on a PD along with the error.                           |
| 0x01A6 | Progress       | Erase progress on %s is %s   | Logged to display the erase progress on a PD along with its current progress.           |
| 0x01A7 | Information    | Erase started on %s  | Logged when erase is started on a PD.   |
| 0x01A8 | Information    | Erase completed on %s  | Logged when the erase is completed on a PD.   |
| 0x01A9 | Information    | Erase aborted on %s  | Logged when the erase is aborted on an LD.  |
| 0x01AA | Critical       | Erase failed on %s   | Logged when the erase is failed on an LD.   |
| 0x01AB | Progress       | Erase progress on %s is %s   | Logged to display the erase progress on an LD along with its current progress.          |
| 0x01AC | Information    | Erase started on %s  | Logged when the erase is started on an LD.  |
| 0x01AD | Information    | Erase complete on %s   | Logged when the erase is complete on an LD.   |
| 0x01AE | Warning        | Potential leakage during erase on %s                                   | Logged to inform the potential leakage during erase on an LD.                           |
| 0x01AF | Warning        | Energy Pack charging was suspended due to high Energy Pack temperature | Logged when the energy pack charging was suspended due to high energy pack temperature. |
| 0x01B0 | Information    | NVCache firmware update was successful                                 | This event is not reported to the user.   |
| 0x01B1 | Warning        | NVCache firmware update failed   | This event is not reported to the user.   |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs  |
|--------|----------------|--|--|
| 0x01B2 | Fatal          | %s access blocked as cached data in CacheCade is unavailable   | This event is not reported to the user.  |
| 0x01B3 | Information    | CacheCade disassociate started on %s                           | This event is not reported to the user.  |
| 0x01B4 | Information    | CacheCade disassociate completed on %s                         | This event is not reported to the user.  |
| 0x01B5 | Critical       | CacheCade disassociate failed on %s                            | This event is not reported to the user.  |
| 0x01B6 | Progress       | CacheCade disassociate progress on %s is %s                    | This event is not reported to the user.  |
| 0x01B7 | Information    | CacheCade disassociate aborted by user on %s                   | This event is not reported to the user.  |
| 0x01B8 | Information    | Link speed changed on SAS port %d and PHY %d                   | Logged when the link speed changed on SAS port and PHY.  |
| 0x01B9 | Warning        | Advanced Software Options was deactivated for – %s             | This event is not reported to the user.  |
| 0x01BA | Information    | %s is now accessible   | This event is not reported to the user.  |
| 0x01BB | Information    | %s is using CacheCade  | This event is not reported to the user.  |
| 0x01BC | Information    | %s is no longer using CacheCade                                | This event is not reported to the user.  |
| 0x01BD | Warning        | Patrol Read aborted on %s                                      | Logged when the patrol read is aborted on a PD.  |
| 0x01C2 | Information    | Periodic Energy Pack Relearn was missed, and rescheduled to %s | Logged if energy pack relearn was missed at the scheduled time due to a system power off then the controller will reschedule automatically when you power on the system. |
| 0x01C3 | Information    | Controller reset requested by host                             | Logged when the controller reset process started on the corresponding controller.  |
| 0x01C4 | Information    | Controller reset requested by host, completed                  | Logged when the controller reset process completed on the corresponding controller.  |
| 0x01C7 | Warning        | Controller booted in headless mode with errors                 | Logged when the controller is booted to safe mode due to warning errors.   |
| 0x01C8 | Critical       | Controller booted to safe mode due to critical errors          | Logged when the controller is booted to safe mode due to critical errors.  |
| 0x01C9 | Warning        | Warning Error during boot – %s                                 | Logged when a warning error occurs during booting the controller to safe mode.   |
| 0x01CA | Critical       | Critical Error during boot – %s                                | Logged when a critical error occurs during booting the controller to safe mode.  |
| 0x01CB | Fatal          | Fatal Error during boot – %s                                   | Logged when a fatal error occurs during booting the controller to safe mode.   |
| 0x01CC | Fatal          | Fatal Error during boot – %s                                   | Logged when the peer controller has joined the HA domain   |
| 0x01CD | Information    | Peer controller has left HA domain (ID: %s)" }                 | Logged when peer controller has left the HA domain.  |
| 0x01CE | Information    | "%s is managed by peer controller" }                           | Logged when physical drives are being managed by the other node.   |
| 0x01CF | Information    | "%s is managed by local controller" }                          | Logged when physical drives are being managed by the current node.   |
| 0x01D0 | Information    | "%s is managed by peer controller" }                           | Logged when logical drives are not managed by the current node.  |

| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs   |
|--------|----------------|---|---|
| 0x01D1 | Information    | "%s is managed by local controller" }   | Logged when logical drives are not being managed by the local node.                           |
| 0x01D2 | Information    | "%s has a conflict in HA domain" }  | Logged when there is a mismatch of the target ID on both the nodes.                           |
| 0x01D3 | Information    | "%s access is shared" }   | Logged when access to the virtual drive is shared between both the nodes.                     |
| 0x01D4 | Information    | "%s access is exclusive" }  | Logged when an exclusive access policy has been granted to the virtual drive.                 |
| 0x01D5 | Warning        | "%s is incompatible in the HA domain" }   | Logged when the logical drive is not compatible.  |
| 0x01D6 | Warning        | "Peer controller is incompatible" }   | Logged when the peer controller is not compatible.  |
| 0x01D7 | Warning        | "Controllers in the HA domain are incompatible" }   | Logged when the controller is not compatible.   |
| 0x01D8 | Warning        | "Controller properties are incompatible between local and peer controllers" }             | Logged when the controller properties are not compatible between peers and local controllers. |
| 0x01D9 | Warning        | "FW versions do not match in the HA domain" }   | Logged when there is a mismatch between the version of the firmware on both the nodes.        |
| 0x01DA | Critical       | "Advanced Software Options %s do not match in the HA domain" }                            | Logged when the controller features are different.  |
| 0x01DB | Information    | "HA cache mirror is online"}  | Logged when the cache mirror operation is enabled.  |
| 0x01DC | Information    | "HA cache mirror is offline"}   | Logged when the cache mirror operation is disabled.   |
| 0x01DD | Information    | "%s access blocked as cached data from peer controller is unavailable" }                  | Logged when a peer node is not available or a particular logical drive has been blocked.      |
| 0x01DE | Warning        | "Cache-vault power pack is not supported. Please replace the pack" }                      | Logged when the CacheVault is not supported.  |
| 0x01DF | Information    | %s temperature (%d C) is above warning threshold }  | Logged when the temperature of a physical drive is more than the normal threshold.            |
| 0x01E0 | Information    | %s temperature (%d C) is above critical threshold }                                       | Logged when the temperature of a physical drive is more than the critical threshold.          |
| 0x01E1 | Information    | %s temperature (%d C) is normal }   | Logged when the temperature of the physical drive is normal.                                  |
| 0x01E2 | Warning        | "%s IOs are being throttled" }  | Logged when the I/O of the physical drive is throttled.                                       |
| 0x01E3 | Information    | "%s IOs are normal. (No throttling)" }  | Logged when the I/O of the physical drive is normal.  |
| 0x01E4 | Information    | %s has %d%% life left. Life left thresholds – warning:%d%%, critical:%d%%}                | Currently not logged.   |
| 0x01E5 | Warning        | %s life left (%d%%) is below optimal. Life left thresholds - warning:%d%%, critical:%d%%} | Currently not logged.   |
| 0x01E6 | Critical       | %s life left (%d%%) is critical. Life left thresholds – warning:%d%%, critical:%d%%}      | Currently not logged.   |
| 0x01E7 | Critical       | %s failure, device locked-up }  | Currently not logged.   |
| 0x01E8 | Warning        | "Host driver needs to be upgraded %s" }   | Logged when the host drive requires an upgrade.   |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs  |
|--------|----------------|--|--|
| 0x01E9 | Warning        | "Direct communication with peer controller(s) was not established. Please check proper cable connections" }                  | Logged when there is a loss in the communication between the peer and other nodes.         |
| 0x01EA | Critical       | "Firmware image does not contain signed component" }   | Currently not logged.  |
| 0x01EB | Critical       | "Authentication failure of the signed firmware image" }  | Logged when there is an authentication failure on the firmware image that has been signed. |
| 0x01EC | Information    | "Setting %s as boot device" }  | Logged when the logical drive is set as a boot device.                                     |
| 0x01ED | Information    | "Setting %s as boot device" }  | Logged when the physical drive is set a boot device.                                       |
| 0x01EE | Information    | The BBU temperature is changed to %d (Celsius) }   | Logged when the temperature of the energy pack is changed.                                 |
| 0x01EF | Information    | The controller temperature is changed to %d (Celsius) }  | Logged when the controller temperature is changed.   |
| 0x01F0 | Information    | "NVCache capacity is too small to support data backup. Write-back VDs will be converted to write-through" }                  | Logged when the ONFI status of the Bad Block exceeds the prescribed limit.                 |
| 0x01F1 | Information    | "NVCache data backup capacity has decreased. Consider replacement  | Logged when the NVCache needs to be replaced.  |
| 0x01F2 | Warning        | "NVCache device failed. cannot support data retention" }   | Logged when the ONFI model is unable to sustain the offload capability of NVCache.         |
| 0x01F3 | Critical       | "Boot Device reset, setting target ID as invalid" }  | Logged when the target ID of the boot device is invalid.                                   |
| 0x01F4 | Fatal          | Write back Nytro cache size mismatch between the servers. The Nytro cache size was adjusted to %ld GB}                       | Currently not logged.  |
| 0x01F5 | Information    | "%s is not shared between servers but assigned for caching. Write back Nytro cache content of the VD will be mirrored"}      | Currently not logged.  |
| 0x01F6 | Information    | Power %d watts usage base IOs throttle started }   | Currently not logged.  |
| 0x01F7 | Information    | "Power base IOs throttle stopped" }  | Currently not logged.  |
| 0x01F8 | Information    | "Controller tunable parameter(s) changed"}   | Currently not logged.  |
| 0x01F9 | Information    | "Controller operating temperature within normal range, full operation restored"}   | Logged when the temperature of the controller is within the normal range.                  |
| 0x01FA | Information    | "Controller temperature threshold exceeded. This may indicate inadequate system cooling. Switching to low performance mode"} | Logged when the temperature of the controller exceeds the specified threshold.             |
| 0x01FB | Information    | "Controller supports HA mode, currently functioning with HA feature set"}  | Currently not logged.  |
| 0x01FC | Information    | "Controller supports HA mode, currently functioning with single controller feature set" }                                    | Currently not logged.  |

| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs  |
|--------|----------------|---|--|
| 0x01FD | Warning        | "Cache-vault components mismatch. Write-back VDs will be converted write-through")  | Logged when there is a mismatch in the CacheVault component. In this case, Writeback virtual drives are converted to write-through virtual drives. |
| 0x01FE | Warning        | "Controller has entered into maintenance mode (%d)" }   | Logged when the controller goes into maintenance mode.   |
| 0x01FF | Information    | "Controller has returned to normal mode" }  | Logged when the controller has returned to normal mode from maintenance e mode.  |
| 0x0200 | Information    | "Topology is in (%s) mode" }  | Currently not logged.  |
| 0x0201 | Information    | "Cannot enter (%s) mode because %s VD %s would not be supported" }  | Currently not logged.  |
| 0x0202 | Information    | "Cannot enter (%s) mode because %s PD %s would not be supported" }  | Currently not logged.  |
| 0x0203 | Information    | "%s Cache Flush started" }  | Logged when the controller starts the Cache Flush operation.   |
| 0x0204 | Information    | "%s Cache Flush finished" }   | Logged when controller completes the Cache Flush operation.  |
| 0x0205 | Information    | "%s Cache Flush aborted by user" }  | Logged when the user aborts the Cache Flush operation.   |
| 0x0206 | Information    | "Controller personality changed to (0x%x) mode"} }  | Logged when the user changes the personality of the controller.  |
| 0x0207 | Information    | "Configuration automatically created by %s" }   | Logged when a configuration is automatically created.  |
| 0x0208 | Information    | "Software Zone enabled"} }  | Currently not logged.  |
| 0x0209 | Information    | "Software Zone disabled"} }   | Currently not logged.  |
| 0x020A | Information    | "Initialization aborted on %s due to controller reset" }  | Logged when the controller reset operation aborts the initialization of the logical drive.   |
| 0x020B | Warning        | "Peer controller security key mismatch" }   | Currently not logged.  |
| 0x020C | Information    | "Peer controller security key match" }  | Currently not logged.  |
| 0x020D | Information    | "%s is now compatible in the HA domain" }   | Currently not logged.  |
| 0x020E | Warning        | "PD %s %s delayed. Reason: %s" }  | Currently not logged.  |
| 0x020F | Warning        | "VD %s %s delayed. Reason: %s" }  | Currently not logged.  |
| 0x0210 | Information    | "%s" }  | Logged by controller to provide a generic message to the user.   |
| 0x0211 | Information    | %s }  | Logged by controller to provide a generic message to the user.   |
| 0x0212 | Warning        | "MegaRAID Solution will shut down due to maximum temperature threshold exception. This may indicate inadequate system cooling"} } | Logged when the temperature of the controller is above the normal threshold.   |
| 0x0213 | Warning        | "Shutdown chassis command received from host" }   | Currently not logged.  |
| 0x0214 | Warning        | "Shutdown chassis command received from host" }   | Currently not logged.  |

| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs   |
|--------|----------------|--|---|
| 0x0215 | Information    | "Controller Information changed" }   | Logged by controller to provide a generic message to the user.  |
| 0x0216 | Information    | "Hidden policy not set for all VDs in the array"}  | Logged when a logical drive is partially hidden, where the hidden policy is not set for virtual drives in an array. |
| 0x0217 | Information    | "%s is not enterprise class self encrypting drive. Encryption capability of the drive will be disabled"} | Currently not logged.   |
| 0x0218 | Information    | "Controller firmware was updated with force option"}   | Logged when the firmware image is updated by the user using the "force" option.                                     |
| 0x0219 | Information    | "%s default access policy is set to read/write mode"}  | Logged when the default access policy of the logical drive set to Read or Write mode.                               |
| 0x021A | Information    | "Disabling writes to flash due to a critical error. Reboot the system to enable writes to flash again"}  | Logged when the flash fails.  |
| 0x021B | Warning        | "Disabling writes to flash as the part has gone bad"}  | Logged when a flash device transitions to a bad state.  |
| 0x021C | Information    | "Locate LED started on %s"}  | Logged when Locate LED operation is started on a physical drive.  |
| 0x021D | Information    | "Locate LED stopped on %s"}  | Logged when Locate LED operation is stopped on a physical drive.  |
| 0x021E | Information    | "Patrol read aborted on %s due to conflict with other background operations"}                            | Logged a when patrol read operation is aborted due to a conflict with other background operations that are running. |
| 0x021F | Warning        | "%s %s %d bad media events"}   | Logged when degraded media events occur.  |
| 0x0220 | Warning        | "%s %s has bad perf, %s"}  | Logged when degraded media events occur due to poor performance.  |
| 0x0221 | Information    | "SCAP HLTH: %d mF, %d mOhm, %d mV, %d Deg, 55C:x%x, 60C:x%x, 65C:x%x, 70C:x%x, 75C:x%x"}                 | Logged when the Relearn operation is completed to reflect the health of the Supercap.                               |
| 0x0222 | Information    | "Controller personality will change PCI ID to %04x/%04x/%04x/%04x"}                                      | Logged when there is a change in the controller personality.  |
| 0x0223 | Information    | "%s Inquiry info: %s" }  | Logged when there is an update to the slot enclosure field on the physical drive.                                   |
| 0x0224 | Information    | "%s is marked as Transport Ready" }  | Logged when a logical drive is marked as <i>Transport Ready</i> .   |
| 0x0225 | Information    | "%s is cleared from Transport Ready state" }   | Logged when a logical drive is cleared from the Transport Ready state.  |
| 0x0226 | Information    | "System reset required."}  | Logged when a user requests new personality that requires a system restart  |
| 0x0227 | Warning        | "Block recovery is skipped for Cache-vault. Reboot the system to recover the blocks"}                    | Currently not logged.   |
| 0x0228 | Information    | "Auto configuration option is set to - %s" }   | Logged when the auto configuration option is set to a specific behavior mode.                                       |



| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs   |
|--------|----------------|--|---|
| 0x0229 | Information    | "Auto configuration parameters changed" }                                    | Logged when there is a change in the auto configuration parameters.                                       |
| 0x022A | Information    | "Reminder: Transport Ready Present %s" }                                     | Logged when there is a Transport Ready flag present on the logical drive.                                 |
| 0x022B | Information    | "Profile updated from profile id %s" }                                       | Logged when the controller profile update is successful.  |
| 0x022C | Information    | "Profile id %s autoselected by the firmware" }                               | Logged when the firmware automatically selects the controller profile.                                    |
| 0x022D | Information    | "Device Ids have been changed due to profile change. " }                     | Logged when there is a switch from higher number of physical drives to a lower number of physical drives. |
| 0x022E | Information    | "Save controller FRU State: FRU-ID 0x%lx Size 0x%x bytes"}                   | Currently not logged.   |
| 0x022F | Information    | "Restore controller FRU State: FRU-ID 0x%lx Size 0x%x bytes"}                | Currently not logged.   |
| 0x0230 | Information    | "Delete controller FRU State: FRU-ID 0x%lx"}                                 | Currently not logged.   |
| 0x0231 | Critical       | "%s driveErrorCounter %d slotErrorCounter %d Pd failed due to %s issue" }    | Currently not logged.   |
| 0x0232 | Critical       | "Invalid SAS Address present in MFC data" }                                  | Logged when the MFC data page encounters an invalid SAS address.  |
| 0x0233 | Warning        | "SAS topology error: %s" }   | Logged when an error occurs in the SAS topology.  |
| 0x0234 | Warning        | "Invalid NVDATA" }   | Logged when the NVDATA is not valid.  |
| 0x0235 | Information    | "No configuration present on the controller" }                               | Logged when there is no configuration present on the controller.  |
| 0x0236 | Information    | "Foreign configuration unsupported by current firmware version" }            | Logged when the current version of the firmware does not support foreign configuration.                   |
| 0x0237 | Critical       | "Backup firmware image flash programming error" }                            | Logged when auto flash copy operation fails to correct the backup firmware image.                         |
| 0x0238 | Information    | "Active firmware image checksum error; backup firmware image activated" }    | Logged when backup firmware is activated due to CRC error found on the active firmware image.             |
| 0x0239 | Critical       | "%s could not be authenticated as a genuine drive" }                         | Logged when a drive fails to get authenticated as a genuine drive.  |
| 0x023A | Critical       | "One or more drives were failed or missing during boot" }                    | Currently not logged.   |
| 0x023B | Information    | "Data found in Write-Back cache during boot" }                               | Currently not logged.   |
| 0x023C | Warning        | "Incomplete writes on degraded %s due to power loss; check data integrity" } | Currently not logged.   |
| 0x023D | Warning        | "Cannot communicate with feature key; features disabled" }                   | Currently not logged.   |
| 0x023E | Information    | "Active firmware image flash programming successful" }                       | Logged when the firmware update on the active firmware region is successful.                              |
| 0x023F | Information    | "Backup firmware image flash programming successful" }                       | Logged when the firmware update on the backup firmware region is successful.                              |



| Number | Severity Level | Event Text   | Generic Conditions when Each Event Occurs  |
|--------|----------------|--|--|
| 0x0240 | Warning        | "Active and backup firmware image versions do not match" }           | Logged when both the active and the backup firmware regions mismatch.  |
| 0x0241 | Information    | "Backup firmware package version %s" }                               | Indicates the firmware package version.  |
| 0x0242 | Critical       | "Critical error occurred while restoring the offloaded cache data" } | Logged when a critical error occurs while restoring the offloaded cache data.                                |
| 0x0243 | Information    | "Drive security key from escrow, %s is unlocked" }                   | Currently not logged.  |
| 0x0244 | Warning        | %s temperature (%d C) is above fatal threshold }                     | Logged when the controller temperature is above the fatal threshold.   |
| 0x0245 | Information    | "The controller was reset to recover from a memory access error" }   | Logged when the controller resets the firmware to recover from a memory access error.                        |
| 0x0246 | Warning        | "Running firmware not compatible with profile id %s" }               | Logged when the current firmware version is not compatible with the profile ID that is selected by the user. |
| 0x0247 | Critical       | "%s is installed but failing to link up"                             | Currently not logged.  |
| 0x0248 | Critical       | "Enclosure %s temperature sensor %d above critical threshold"        | Currently not logged.  |
| 0x0249 | Critical       | "Enclosure %s EMM %d indicates critical condition"                   | Currently not logged.  |
| 0x024A | Warning        | "Enclosure %s EMM %d indicates warning condition"                    | Currently not logged.  |
| 0x024B | Critical       | "Enclosure %s element %d indicates critical condition"               | Currently not logged.  |
| 0x024C | Warning        | "Enclosure %s element %d indicates warning condition"                | Currently not logged.  |
| 0x024D | Warning        | "Enclosure %s SAS connector %d has link errors"                      | Currently not logged.  |
| 0x024E | Information    | "Number of valid snapdump available is %s"                           | Logged when valid snapdumps are available.   |
| 0x024F | Warning        | "VDs missing drives and will go offline at boot"                     | Logged when the VD is missing drives and goes offline at boot.   |
| 0x0250 | Warning        | "VDs missing at boot"  | Currently not logged.  |
| 0x0251 | Information    | "Controller cache auto discarded for VDs: %s"                        | Currently not logged.  |
| 0x0252 | Critical       | "Sanitize failed on %s (Error %02x)"                                 | Logged when a sanitize failure occurs (SAS3108 controllers only).  |
| 0x0253 | Progress       | "Sanitize progress on %s is %s"                                      | Logged when sanitize is in progress on the drive (SAS3108 controllers only).                                 |
| 0x0254 | Information    | "Sanitize started on %s"   | Logged when sanitize started on the drive (SAS3108 controllers only).  |
| 0x0255 | Information    | "Sanitize completed on %s"   | Logged when Sanitize has completed on the drive (SAS3108 controllers only).                                  |
| 0x0256 | Information    | "%s Cannot be secured in future due to non-SED drive"                | Logged when the LD cannot be secured in the future.  |

| Number | Severity Level | Event Text  | Generic Conditions when Each Event Occurs  |
|--------|----------------|---|--|
| 0x0257 | Warning        | "System shutdown required"  | Logged when shutdown is required.  |
| 0x0258 | Warning        | "%s Contains one or more unmap not capable PD(s)"   | Currently not logged.  |
| 0x0259 | Information    | "LD %s unmap support cannot be enabled"   | Logged when unmap support cannot be enabled on the LD.   |
| 0x025A | Information    | "SSD Wear Gauge values on %s"   | Logged when SSD wear gauge values changed .  |
| 0x025B | Warning        | "Secure Boot key update pending, power cycle the system."                                 | Logged when key update requires system power cycle.  |
| 0x025C | Warning        | "Dedicated Hot Spare %s is not unmap capable and no longer useful for one or more arrays" | Logged when firmware finds an unmap capable VDs with a dedicated hot spare that is not unmap capable.                      |
| 0x025D | Critical       | "Rebuild not possible as Firmware did not find suitable unmap capable drive"              | Logged when firmware attempts to start a rebuild but did not find unmap capable PD since the VD or array is unmap capable. |
| 0x025E | Critical       | "Replace not possible as Firmware did not find suitable unmap capable drive"              | Logged when firmware attempts to start replace but did not find unmap capable PD since the VD/Array is unmap capable.      |
| 0x025F | Information    | "Secure Boot key update complete."  | Logged when the key update is complete.  |
| 0x0260 | Information    | "Snapdump properties changed."  | Logged when snapdump properties have changed.  |
| 0x0261 | Warning        | "Controller detected in configurable secure mode"   | Logged when secure mode controller is found.   |
| 0x0262 | Warning        | "Secure Boot key update pending, firmware download not allowed"                           | Logged when a firmware update is not allowed due to key update pending.  |
| 0x0263 | Critical       | "CacheVault is not available, SLC Format in progress."                                    | Logged when CacheVault is not available and SLC format is in progress.   |
| 0x0264 | Information    | "CacheVault is available, SLC Format has completed."                                      | Logged when CacheVault is not available and SLC format is completed.   |
| 0x0265 | Information    | "Snapdump images cleared"   | Logged when the user clears the Snapdump images.   |
| 0x0266 | Warning        | "DDF Config clear failed on %s"   | Logged when attempts to clear DDF configuration failed.  |
| 0x0267 | Critical       | "PCIe Hot reset failed on %s"   | Logged when a hot reset attempt failed.  |
| 0x0268 | Critical       | "Unexpected change in drive identifier for PD %s"   | Logged when the drive identifier changes unexpectedly.   |
| 0x0269 | Critical       | "NVMe Initialization error detected on drive %s"  | Logged when an NVMe drive fails to initialize.   |
| 0x026A | Information    | "NVMe Repair started on drive %s"   | Logged when an NVMe drive starts a repair operation.   |
| 0x026B | Information    | "NVMe Repair completed successfully on drive %s"  | Logged when an NVMe drive completes a repair operation.  |
| 0x026C | Critical       | "NVMe Repair failed on drive %s"  | Logged when an NVMe drive fails a repair operation.  |
| 0x026D | Information    | "NVMe Repair aborted on drive %s"   | Logged when an NVMe repair is aborted.   |
| 0x026E | Information    | "Certificate chain loaded in %s"  | Logged when certificate chain loaded.  |
| 0x026F | Information    | "Certificate chain invalidated in %s"   | Logged when certificate chain invalidated.   |

| <b>Number</b> | <b>Severity Level</b> | <b>Event Text</b>  | <b>Generic Conditions when Each Event Occurs</b>       |
|---------------|-----------------------|--|--|
| 0x0270        | Information           | "Certificate slot %s sealed"                                       | Logged when certificate slot sealed.                   |
| 0x0271        | Critical              | "Certificate chain import failed."                                 | Currently not logged.                                  |
| 0x0272        | Critical              | "Certificate is bad %s "   | Logged when certificate is bad.                        |
| 0x0273        | Critical              | "Key pair is bad."   | Logged when a key pair is bad.                         |
| 0x0274        | Information           | "Drive security is in enterprise key management mode"              | Logged when enterprise key management mode is enabled. |
| 0x0275        | Warning               | "Drive security failed to communicate with enterprise key manager" | Logged when communication with the key manager failed. |

## Unsupported Commands in Embedded MegaRAID

The commands in the following table are not supported in Embedded MegaRAID.

**Table 64: Unsupported Commands in Embedded MegaRAID**

| Command Group     | Command   |
|-------------------|---|
| ASO               | <code>storcli /cx(x all) set aso key=&lt;keyvalue&gt; preview</code>                      |
|                   | <code>storcli /cx(x all) set aso key=&lt;key value&gt;</code>                             |
|                   | <code>storcli /cx(x all) set aso rehostcomplete</code>                                    |
|                   | <code>storcli /cx(x all) set aso deactivatetrialsec</code>                                |
|                   | <code>storcli /cx(x all) show safeid</code>   |
|                   | <code>storcli /cx(x all) show rehostinfo</code>   |
|                   | <code>storcli /c0 set time =&lt;yyyymmdd hh:mm:ss   system&gt;</code>                     |
|                   | <code>storcli /c0 show cc consistencycheck</code>   |
|                   | <code>storcli /c0/vall show expansion</code>  |
|                   | <code>storcli /c0 set jbod</code>   |
|                   | <code>storcli /cx download src=&lt;filepath&gt; [forceActivate]</code>                    |
| BBU               | <code>storcli /cx/bbu show</code>   |
|                   | <code>storcli /cx/bbu show all</code>   |
|                   | <code>storcli /cx/bbu set [ learnDelayInterval=&lt;val&gt;   bbuMode=&lt;val&gt;</code>   |
|                   | <code>storcli /cx/bbu start learn</code>  |
| Cache             | <code>storcli /cx/v(x all) set ssdcaching=on off</code>                                   |
|                   | <code>storcli /cx(x all) show preservedcache</code>                                       |
|                   | <code>storcli /cx/v(x all) delete preservedcache[force]</code>                            |
| Controller        | <code>storcli /cx show cc</code>  |
| Copy back         | <code>storcli /cx[/ex]/sx show copyback</code>  |
|                   | <code>storcli /cx[/ex]/sx start copyback target=eID:sID</code>                            |
|                   | <code>storcli /cx[/ex]/sx stop copyback</code>  |
|                   | <code>storcli /cx[/ex]/sx pause copyback</code>   |
|                   | <code>storcli /cx[/ex]/sx resume copyback</code>  |
| Consistency check | <code>storcli /cx show cc/ConsistencyCheck</code>   |
| DS                | <code>storcli /cx(x all) set ds=OFF type=1 2 3 4</code>                                   |
|                   | <code>storcli /cx(x all) set ds=ON type=1 2 [properties]</code>                           |
|                   | <code>storcli /cx(x all) set ds=ON type=3 4 DefaultLdType=&lt;val&gt; [properties]</code> |
|                   | <code>storcli /cx(x all) set ds [properties]</code>                                       |
|                   | <code>storcli /cx/v(x all) set ds=Default Auto None Max MaxNoCache</code>                 |

| Command Group | Command  |
|---------------|--|
| Jbod          | storcli /c0 set jbod=<on off>  |
|               | storcli /c0/s2 set jbod  |
|               | storcli /c0/s2 set bootdrive=<on off>  |
| Migrate       | storcli /cx/v(x all) show migrate  |
|               | storcli /cx/vx start migrate type=raidx [option=add remove drives=[e:]s [e:]s-x [e:]s-x,y] [Force] |
| Security      | storcli /cx delete security key  |
|               | storcli /cx set securitykey=xxxxxxxx {passphrase=xxxx} {keyid=xxx}                                 |
|               | storcli /cx set securitykey keyid=xxx  |
|               | storcli /cx compare securitykey=xxxxxxxx   |
|               | storcli /cx set securitykey=xxxxxxxx oldsecuritykey=xxxxxxxx                                       |
| Secure erase  | storcli /cx/sx secureerase [force]   |
|               | storcli /cx/sx start erase [simple  normal  thorough] [erasepatternA=<val>]                        |
|               | storcli /cx/sx stop erase  |
|               | storcli /cx/sx show erase  |

## CLI Error Messages

This appendix lists the software error messages for the Storage Command Line Tool (StorCLI).

The StorCLI configuration utility is a command line interface application you can use to manage MegaRAID SAS RAID controllers.

### Error Messages and Descriptions

Each message that appears in the event log has an error level that indicates the severity of the event, as shown in the following table.

**Table 65: Error Messages and Descriptions**

| Decimal Number | Hex Number | Event Text   |
|----------------|------------|--|
| 0              | 0x00       | Command completed successfully   |
| 1              | 0x01       | Invalid command  |
| 2              | 0x02       | DCMD opcode is invalid   |
| 3              | 0x03       | Input parameters are invalid   |
| 4              | 0x04       | Invalid sequence number  |
| 5              | 0x05       | Abort isn't possible for the requested command                           |
| 6              | 0x06       | Application 'host' code not found  |
| 7              | 0x07       | Application already in use - try later                                   |
| 8              | 0x08       | Application not initialized  |
| 9              | 0x09       | Given array index is invalid   |
| 10             | 0x0a       | Unable to add missing drive to array, as row has no empty slots          |
| 11             | 0x0b       | Some of the CFG resources conflict with each other or the current config |
| 12             | 0x0c       | Invalid device ID / select-timeout                                       |
| 13             | 0x0d       | Drive is too small for requested operation                               |
| 14             | 0x0e       | Flash memory allocation failed   |
| 15             | 0x0f       | Flash download already in progress                                       |
| 16             | 0x10       | Flash operation failed   |
| 17             | 0x11       | Flash image was bad  |
| 18             | 0x12       | Downloaded flash image is incomplete                                     |
| 19             | 0x13       | Flash OPEN was not done  |
| 20             | 0x14       | Flash sequence is not active   |
| 21             | 0x15       | Flush command failed   |
| 22             | 0x16       | Specified application doesn't have host-resident code                    |
| 23             | 0x17       | LD operation not possible - CC is in progress                            |
| 24             | 0x18       | LD initialization in progress  |
| 25             | 0x19       | LBA is out of range  |
| 26             | 0x1a       | Maximum LDs are already configured                                       |

| Decimal Number | Hex Number | Event Text   |
|----------------|------------|--|
| 27             | 0x1b       | LD is not OPTIMAL  |
| 28             | 0x1c       | LD Rebuild is in progress  |
| 29             | 0x1d       | LD is undergoing reconstruction  |
| 30             | 0x1e       | LD RAID level is wrong for requested operation   |
| 31             | 0x1f       | Too many spares assigned   |
| 32             | 0x20       | Scratch memory not available - try command again later                                   |
| 33             | 0x21       | Error writing MFC data to SEEPROM  |
| 34             | 0x22       | Required HW is missing (i.e. Alarm or BBU)   |
| 35             | 0x23       | Item not found   |
| 36             | 0x24       | LD drives are not within an enclosure  |
| 37             | 0x25       | PD CLEAR operation is in progress  |
| 38             | 0x26       | Unable to use SATA(SAS) drive to replace SAS(SATA)                                       |
| 39             | 0x27       | Patrol Read is disabled  |
| 40             | 0x28       | Given row index is invalid   |
| 45             | 0x2d       | SCSI command done, but non-GOOD status was received-see mf.hdr.extStatus for SCSI_STATUS |
| 46             | 0x2e       | IO request for MFI_CMD_OP_PD_SCSI failed - see extStatus for DM error                    |
| 47             | 0x2f       | Matches SCSI RESERVATION_CONFLICT  |
| 48             | 0x30       | One or more of the flush operations failed   |
| 49             | 0x31       | Firmware real-time currently not set   |
| 50             | 0x32       | Command issues while firmware in wrong state (i.e., GET RECON when op not active)        |
| 51             | 0x33       | LD is not OFFLINE - IO not possible  |
| 52             | 0x34       | Peer controller rejected request (possibly due to resource conflict)                     |
| 53             | 0x35       | Unable to inform peer of communication changes (retry might be appropriate)              |
| 54             | 0x36       | LD reservation already in progress   |
| 55             | 0x37       | I2C errors were detected   |
| 56             | 0x38       | PCI errors occurred during XOR/DMA operation   |
| 57             | 0x39       | Diagnostics failed - see event log for details   |
| 58             | 0x3a       | Unable to process command as boot messages are pending                                   |
| 59             | 0x3b       | Returned in case if foreign configurations are incomplete                                |
| 61             | 0x3d       | Returned in case if a command is tried on unsupported hardware                           |
| 62             | 0x3e       | CC scheduling is disabled  |
| 63             | 0x3f       | PD CopyBack operation is in progress   |
| 64             | 0x40       | Selected more than one PD per array  |
| 65             | 0x41       | Microcode update operation failed  |
| 66             | 0x42       | Unable to process command as drive security feature is not enabled                       |
| 67             | 0x43       | Controller already has a lock key  |
| 68             | 0x44       | Lock key cannot be backed-up   |
| 69             | 0x45       | Lock key backup cannot be verified   |
| 70             | 0x46       | Lock key from backup failed verification   |

| Decimal Number | Hex Number | Event Text  |
|----------------|------------|---|
| 71             | 0x47       | Rekey operation not allowed, unless controller already has a lock key           |
| 72             | 0x48       | Lock key is not valid, cannot authenticate                                      |
| 73             | 0x49       | Lock key from escrow cannot be used   |
| 74             | 0x4a       | Lock key backup (pass-phrase) is required                                       |
| 75             | 0x4b       | Secure LD exist   |
| 76             | 0x4c       | LD secure operation is not allowed  |
| 77             | 0x4d       | Reprovisioning is not allowed   |
| 78             | 0x4e       | Drive security type (FDE or non-FDE) is not appropriate for requested operation |
| 79             | 0x4f       | LD encryption type is not supported   |
| 80             | 0x50       | Cannot mix FDE and non-FDE drives in same array                                 |
| 81             | 0x51       | Cannot mix secure and unsecured LD in same array                                |
| 82             | 0x52       | Secret key not allowed  |
| 83             | 0x53       | Physical device errors were detected  |
| 84             | 0x54       | Controller has LD cache pinned  |
| 85             | 0x55       | Requested operation is already in progress                                      |
| 86             | 0x56       | Another power state set operation is in progress                                |
| 87             | 0x57       | Power state of device is not correct  |
| 88             | 0x58       | No PD is available for patrol read  |
| 89             | 0x59       | Controller reset is required  |
| 90             | 0x5a       | No EKM boot agent detected  |
| 91             | 0x5b       | No space on the snapshot repository VD  |
| 92             | 0x5c       | For consistency SET PiTs, some PiT creations might fail and some succeed        |
| 255            | 0xFF       | Invalid status - used for polling command completion                            |
| 93             | 0x5d       | Secondary iButton cannot be used and is incompatible with controller            |
| 94             | 0x5e       | PFK doesn't match or cannot be applied to the controller                        |
| 95             | 0x5f       | Maximum allowed unconfigured (configurable) PDs exist                           |
| 96             | 0x60       | IO metrics are not being collected  |
| 97             | 0x61       | AEC capture needs to be stopped before proceeding                               |
| 98             | 0x62       | Unsupported level of protection information                                     |
| 99             | 0x63       | PDs in LD have incompatible EEDP types  |
| 100            | 0x64       | Request cannot be completed because protection information is not enabled       |
| 101            | 0x65       | PDs in LD have different block sizes  |
| 102            | 0x66       | LD Cached data is present on a (this) SSCD                                      |
| 103            | 0x67       | Config sequence number mismatch   |
| 104            | 0x68       | Flash image is not supported  |
| 105            | 0x69       | Controller cannot be online-reset   |
| 106            | 0x6a       | Controller booted to safe mode, command is not supported in this mode           |
| 107            | 0x6b       | SSC memory is unavailable to complete the operation                             |
| 108            | 0x6c       | Peer node is incompatible   |
| 109            | 0x6d       | Dedicated hot spare assignment is limited to array(s) with same LDs.            |



| Decimal Number | Hex Number | Event Text  |
|----------------|------------|---|
| 110            | 0x6e       | Signed component is not part of the image   |
| 111            | 0x6f       | Authentication failure of the signed firmware image   |
| 112            | 0x70       | Flashing was ok but FW restart is not required, ex: No change in FW from current                            |
| 113            | 0x71       | Firmware is in some form of restricted mode, example: passive in A/P HA mode                                |
| 114            | 0x72       | The maximum number of entries are exceed.   |
| 115            | 0x73       | Cannot start the subsequent flush because the previous flush is still active.                               |
| 116            | 0x74       | Status is ok but a reboot is need for the change to take effect.  |
| 117            | 0x75       | Cannot perform the operation because the background operation is still in progress.                         |
| 118            | 0x76       | Operation is not possible.  |
| 119            | 0x77       | Firmware update on the peer node is in progress.  |
| 120            | 0x78       | Hidden policy is not set for all of the virtual drives in the drive group that contains this virtual drive. |
| 121            | 0x79       | Indicates that there are one or more secure system drives in the system.                                    |

## 240 Virtual Drive Feature Limitations

This appendix provides information about limitations and known issues for the 240 virtual drives (VDs) feature in the MegaRAID 12Gb/s SAS RAID controller.

### Host Software Utility

The following host software utilities support matrix provides the support information on the target IDs that are supported.

**Table 66: Host Software Utilities Support Matrix**

| MegaRAID SAS RAID Utilities          | 0–63 VD Target IDs Support | 240 VD Target IDs Support  |
|--------------------------------------|----------------------------|--|
| StorCLI                              | Yes                        | Yes  |
| LSA                                  | Yes                        | Yes  |
| SNMP                                 | Yes                        | No   |
| Providers                            | Yes                        | No   |
| Human Interface Infrastructure (HII) | Yes                        | Yes  |
| StoreLib/StoreLib Test               | Yes                        | Yes  |
| StoreLib/StoreLib Test (OOB)         | Yes                        | Yes  |
| Legacy BIOS                          | Yes                        | Yes<br>The Option ROM builds INT 13H for the boot VD, which is followed by INT 13H for the first 63 VDs reported in the VD list. |

### BIOS Known Limitations

The Legacy Option ROM displays only the first 64 VDs during the power-on self-test (POST). The following example describes the POST behavior when there are 90 VDs in the configuration.

**Example:**

- The Option ROM displays the first 64 VDs in the POST.
- 90 VDs are found on the host adapter.
- 64 VDs are handled by the BIOS.

On iMegaRAID controllers, special tasks, such as consistency check, rebuild rate, and background operations will not progress in an EFI environment. However, they still progress in pre-boot environment because you will be rebooting the system while exiting from the applications.

### JBOD Converting to UGOOD

JBOD drives may be marked as UGOOD on the next controller boot (OCR or system reboot) when the following conditions are met:

- The combination of virtual drives and JBODs is close to the 240 limit.
- There are foreign configurations connected to the controller.
- The `autoEnhancedImport` is 1, or control is configured in headless mode.
- There are JBODs configured on the controller.
- The total device count of native virtual drives plus foreign virtual drives plus the JBOD count exceeds the controller limit of 240.

To recover the JBOD drive, complete the following recovery option:

1. Remove the drives that were marked as foreign drives in the previous boot.  
Obtain the list of foreign drives from the events logged during the foreign import process.
2. Reset the controller or power cycle the system.

**NOTE**

SAS339x controllers support a total of 240 PDs and RAID VDs. Use the `MR_DCMD_LD_LIST_QUERY` command with the query type `MR_LD_QUERY_TYPE_USED_TGT_IDS` to obtain the list of target IDs currently used by the firmware. Subtract the total number of target IDs from 240 to determine the number of new RAID VDs or JBOD drives that can be created.

## Virtual Drives Converting to UGOOD

When a configuration is created on a spin-down drive and a controller failure occurs before the configuration is written to the drive (DDF update), on the next boot new configurations may be lost and the drive could show up as unconfigured good.

**NOTE**

The following is an example of virtual drives converting to UGOOD.

1. Create a VD using spin-down drives by using the firmware command `storcli64.exe /c0 add vd r60 drives=247:1-8 pdperarray=4`.
2. Once the drive is created, stimulate controller failure by issuing an immediate OCR using the command `storcli64.exe /c0 restart`.
3. After the OCR, the configured R60 drives are moved to UGOOD.

## Online Firmware Upgrade and Downgrade

---

This appendix provides information about known issues when using the online firmware update feature of the MegaRAID 12Gb/s SAS RAID controller.

The following sections and table describe some of the known limitations when using the Online Firmware Upgrade feature.

### **Known Limitations with Online Firmware Upgrade**

- Once you have upgraded to any MegaRAID 7.6 firmware or later, downgrading to MegaRAID 7.5 or older is not allowed. This is due to minor hardware changes on the internal clock source.
- Once you have upgraded to MegaRAID 7.3 firmware or later, downgrading to MegaRAID 7.2 or MegaRAID 7.1 is not allowed.
- The UNMAP implementation was modified in MegaRAID 7.7 firmware to ensure all SSDs in the VD support UNMAP. When updating a controller that has firmware prior to MegaRAID 7.7 through an online method (only restarting the MegaRAID controller), VDs created on prior firmware where all members are not complaint will generate errors to the `syslog` until the server reboot is performed. After the reboot, the VD will not be reported as supporting UNMAP.

#### **NOTE**

UNMAP is supported on SAS SSDs only.

- From MegaRAID 7.x firmware GCA and later, it is recommended that you back up the logical drive before initiating a reconstruction operation on the logical drive.
- You must not perform any firmware upgrade or downgrade when the reconstruction operation is in progress.
- To avoid data loss from the dirty cache on the controller, the utility forces the virtual disks into Write Through mode after a firmware upgrade. The virtual disks remains in this mode until the server reboots. In Write Through mode, the controller sends a data transfer completion signal to the host when the disk subsystem receives all the data in a transaction. This prevents the controller from discarding the dirty cache in a power outage.
- When you flash a new firmware, you should not start a reconstruction operation until the system reboots or an OCR is performed.

#### **NOTE**

The user must reboot or perform an online controller reset of the system for the flashed firmware to take effect.

### **Consistency Check, Background Initialization, and Secure EraseCryptographic Erase Limitation**

When you downgrade from a 240-virtual drive supported firmware (MR 6.6 and later) to a non-240 virtual drive supported firmware (MR 6.5 and earlier), **Consistency Check**, **Background Initialization**, and **Secure EraseCryptographic Erase** operations are not resumed.

Upgrading across multiple versions of MegaRAID must be done in an incremental manner. For additional information on upgrading and downgrading, access the Broadcom Support website at <https://www.broadcom.com/support>.

#### **NOTE**

Due to the limitation of KIOXIA, support only starts at MegaRAID 7.16. Downgrading for KIOXIA drives to 7.15 is not available. Downgrading from 7.17 to 7.16 for KIOXIA would result in the drive being classified as Opal drives. Other non-KIOXIA dual-featured drives (Opal and Ruby) would be listed as Opal in 7.16 and earlier firmware programs. When upgraded to 7.17, they would be listed as Ruby drives.

For controllers with only non-KIOXIA drives, downgrading from 7.17 to 7.15 or earlier is blocked if there is a secured Ruby drive used in the configuration. If no secured drive is present, then downgrading is allowed.

## Boot Messages and BIOS Error Messages

This appendix provides the boot messages and BIOS error messages present in the MegaRAID firmware.

### Displaying Boot Messages

In platforms that load the UEFI driver first, the noncritical boot messages are discarded. To display a critical boot message, the platform should support driver health, and it should load the driver health formset when the UEFI driver returns health status as `configuration required`.

In some systems, the platform supports the driver health protocol and calls the `GetHealthStatus` function automatically during boot time. In such platforms, if a critical boot problem exists, the platform shows a critical message dialog.


If the controller's boot mode is set to Stop on Errors or Pause on Errors, and if the controller has pinned cache present, you need to correct the problem through HII before booting to the operating system. Until you resolve this problem, the UEFI driver reports the health status as "Configuration Required".

In some systems, you have to turn on the option in the system BIOS setup to enable the platform to call the `GetHealthStatus` function during boot time to check the health of the controller. To ensure that the platform supports driver health protocol and checks health during boot time, perform the following steps:

1. Set the controller's boot mode to SOE using CLI or RAID management/configuration application.
2. Connect one drive to the controller.
3. Create a RAID 0 volume.
4. Shut down the system, and remove the drive.
5. Boot the system.

The following dialog should appear.

**Figure 82: Driver Health Protocol Dialog**

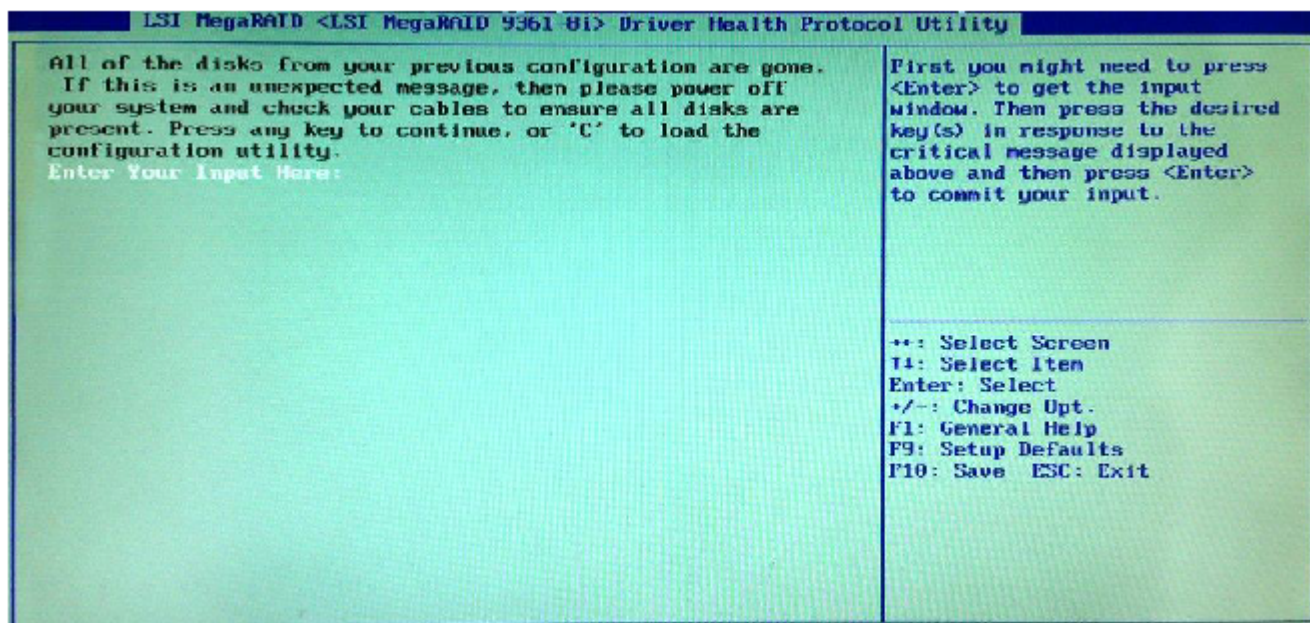




6. Press **C**.

The following dialog appears.

**Figure 83: Critical Message Completion Dialog**

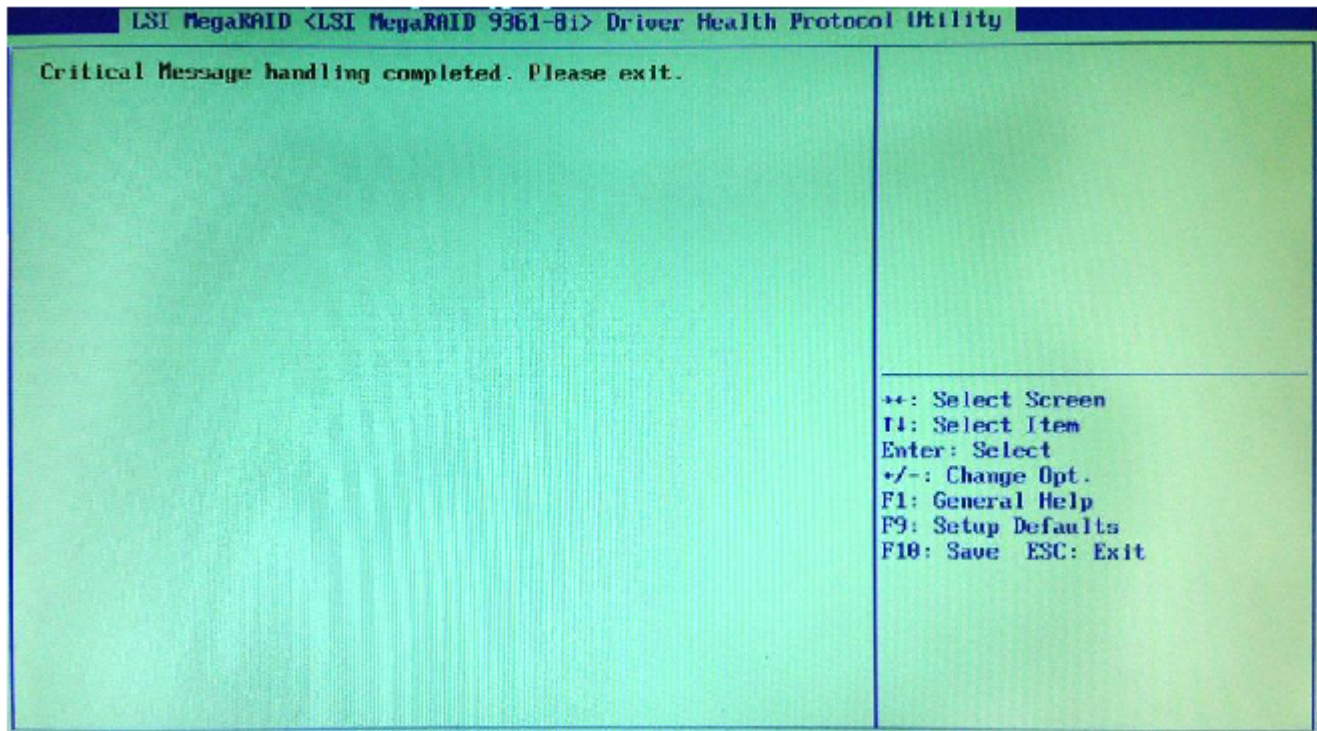7. Press **Esc** to exit the browser.

The critical message handling completion, the security password, and the confirm message displayed on the screen are all part of the boot messages handled by the controller firmware. The password validation is also done by the controller firmware. The maximum attempt to enter the password is also handled by the firmware.

## Differences in the System Boot Mode

There is a behavioral differences in the controller boot mode (SOE, COE, HCOE, and HSM) and system boot mode (legacy or UEFI). Critical boot messages are reported through events for HSM. Both critical messages and warnings are reported in HCOE mode. The behavioral differences of system boot mode is because of the following:

- Some platforms might load both OpROMs (UEFI and legacy)
- Some platforms might load legacy first, and then the UEFI driver, or vice versa
- Some platforms might load only one OpROM depending upon the system boot mode (legacy versus UEFI)

On a hybrid system that loads the UEFI driver first, the noncritical boot messages are discarded and cannot be read if controller boot mode is set to SOE or COE. If the boot mode is set to HCOE or HSM, you can see the messages in the event log.

The following table describes the boot error messages present in the MegaRAID firmware.

- **Boot Message Type:** Name or type of the boot message on the firmware.
- **Wait Time:** A time value in seconds where the system waits for the user's input. If the wait time is elapsed, BIOS continues with default options.

- For example, `BOOT_WAIT_TIME`, where the BIOS waits for the user's input for a default period of time (in seconds) and then continues with the default option if no user input is received.
- For example, `BOOT_TIME_CRITICAL`, where the BIOS waits for the user's input until an input from the user is received.
- **Event Log:** When any event occurs, the firmware logs that particular event in its database.
- **Boot Message Description:** Boot message displayed on the console.
- **Comments:** Whether the message is associated with any specific controller settings or configuration settings related to the firmware.
- **Troubleshooting Actions:** If applicable, the user can take action to identify, diagnose, and resolve problems associated with the firmware. This can also be best practices, recommendations, and so on.

#### NOTE

Starting from MegaRAID 7.0, the controller supports HII in an UEFI environment. No preboot utilities are available for legacy environment. If you are booting the system in a legacy mode, then you may see a different message as preboot utilities do not exist for legacy environment. You can resolve this by booting the system in an UEFI mode.

For example, if a preboot utility is supported by the firmware and is present in your firmware package, for boot message type `BOOT_MSG_CACHE_DISCARD`, the boot message displayed on your console may read `Memory or battery problems were detected. The adapter has recovered, but cached data was lost. Press any key to continue.`

If preboot utility is not supported by the firmware, for boot message type `BOOT_MSG_CACHE_DISCARD`, the boot message displayed on your console may read `Memory or battery problems were detected. The adapter has recovered, but cached data was lost. Press any key to continue.`

The only difference here is, with preboot utilities being present, you need to press the `C` key to continue; in the absence of preboot utilities, you need to press any key of your choice to continue.

**Table 67: Boot Messages**

| Message Number | Boot Message Type                   | Wait Time                   | Event Log                                | Boot Message Description  | Comments | Troubleshooting Actions  |
|----------------|-------------------------------------|-----------------------------|--|---|----------|--|
| 0              | <code>BOOT_MSG_CACHE_DISCARD</code> | <code>BOOT_TIME_WAIT</code> | <code>MR_EVT_CTRL_CACHE_DISCARDED</code> | Memory or battery problems were detected. The adapter has recovered, but cached data was lost. Press any key to continue.                         | —        | <b>Cause:</b> The cached data is lost and cannot be retrieved.<br><b>Action:</b> Perform memory and battery test. If needed, replace the memory card or the battery. |
| 1              | <code>BOOT_MSG_TEST</code>          | 5                           | Test boot message                        | This is a test message. You can press a key to ignore it, or you can wait five seconds. No further action is required. Press any key to continue. | —        | N/A  |

| Message Number | Boot Message Type      | Wait Time      | Event Log                          | Boot Message Description   | Comments | Troubleshooting Actions   |
|----------------|------------------------|----------------|------------------------------------|--|----------|---|
| 2              | BOOT_MSG_CACHE_VERSION | BOOT_TIME_WAIT | MR_EVT_CTRL_CACHE_VERSION_MISMATCH | Firmware version inconsistency was detected. The adapter has recovered, but cached data was lost. Press any key to continue. | —        | <p><b>Causes:</b></p> <p>The cached data is lost and cannot be retrieved. This boot message is displayed when dirty data needs to be flushed during boot.</p> <p>The version of the cache header with which dirty data was generated is different from the current version of the cache header. The version of the cache header is incremented when the cache layout is changed.</p> <p>On a single controller, during firmware upgrade, firmware ensures that there is no dirty data.</p> <p>This message occurs only when dirty cache or pinned cache is migrated and is stored by ONFI from one controller to another controller where firmware versions on the both the controllers are different.</p> <p><b>Action:</b> Ensure that the other controller also has the same firmware version.</p> |



| Message Number | Boot Message Type          | Wait Time | Event Log                   | Boot Message Description   | Comments                         | Troubleshooting Actions   |
|----------------|----------------------------|-----------|-----------------------------|--|----------------------------------|---|
| 3              | BOOT_MSG_DDF_FOREIGN_FOUND | 10        | MR_EVT_FOREIGN_CFG_IMPORTED | Foreign configuration(s) found on adapter. Press any key to continue or press F to import foreign configuration(s) and continue. | Use property autoEnhancedImport. | <b>Cause:</b> A storage device was inserted with the metadata that does not belong to any RAID volumes recognized by the controller.<br><b>Action:</b> Either import the configuration settings of the inserted storage device or delete the RAID volume. |
| 4              | BOOT_MSG_DDF_IMPORT        | 10        | NULL                        | Previous configuration cleared or missing. Importing configuration created on %02d/%02d %2d: %02d. Press any key to continue.    | Not supported.                   | <b>Cause:</b> The controller is not able to recognize the current RAID volume configuration.<br><b>Action:</b> Either import the configuration settings or delete the foreign configuration found on storage device.                                      |
| 5              | BOOT_MSG_PACKAGE_VERSION   | 0         | MR_EVT_PACKAGE_VERSION      | Firmware package: %s   | —                                | N/A   |
| 6              | BOOT_MSG_FIRMWARE_VERSION  | 0         | NULL                        | Firmware version: %s   | —                                | N/A   |
| 7              | BOOT_MSG_FIRMWARE_TEST     | 1         | NULL                        | This firmware is a TEST version. It has not completed any validation.  | —                                | <b>Cause:</b> The controller is not able to recognize the current RAID volume configuration.<br><b>Action:</b> Update the firmware to the correct version.  |
| 8              | BOOT_MSG_FIRMWARE_ALPHA    | 1         | NULL                        | This firmware is an ALPHA version – It has not completed all validation. The validation stamp is: %s""                           | —                                | <b>Cause:</b> The controller is not able to recognize the current RAID volume configuration.<br><b>Action:</b> Update the firmware to the correct version.  |

| Message Number | Boot Message Type                  | Wait Time      | Event Log                            | Boot Message Description  | Comments | Troubleshooting Actions   |
|----------------|------------------------------------|----------------|--------------------------------------|---|----------|---|
| 9              | BOOT_MSG_FIRMWARE_BETA             | 1              | NULL                                 | This firmware is BETA version – It has not completed all validation.<br>The validation stamp is: %s""   | —        | <b>Cause:</b> The controller is not able to recognize the current RAID volume configuration.<br><b>Action:</b> Update the firmware to the correct version.  |
| 10             | BOOT_MSG_SAS_SATA_MIXING_VIOLATION | BOOT_TIME_WAIT | MR_EVT_ENCL_SAS_SATA_MIXING_DETECTED | An enclosure was found that contains both SAS and SATA drives, but this controller does not allow mixed drive types in a single enclosure.<br>Correct the problem then restart your system.<br>Press any key to continue. | —        | <b>Cause:</b> A single enclosure that has both SAS and SATA drives cannot be used as the controller does not support mixed drive types in a single enclosure.<br><b>Actions:</b><br>Use only one type of drive, either SAS or SATA drive.<br>Replace the controller with a controller that supports mixed drive types in a single enclosure.<br>Contact Technical Support to enable this feature. |
| 11             | BOOT_MSG_SAS_NOT_SUPPORTED         | BOOT_TIME_WAIT | SAS drives are not supported.        | SAS drives were detected, but this controller does not support SAS drives.<br>Remove the SAS drives then restart your system.<br>Press any key to continue.   | —        | <b>Cause:</b> This controller does not support SAS drives.<br><b>Action:</b><br>Replace the SAS drives with SATA drives and restart the system.   |
| 12             | BOOT_MSG_SATA_NOT_SUPPORTED        | BOOT_TIME_WAIT | SATA drives are not supported.       | SATA drives were detected, but this controller does not support SATA drives.<br>Remove the SATA drives then restart your system.<br>Press any key to continue.  | —        | <b>Cause:</b> This controller does not support SATA drives.<br><b>Action:</b><br>Replace the SATA drives with SAS drives and restart the system.  |

| Message Number | Boot Message Type                     | Wait Time      | Event Log                         | Boot Message Description   | Comments       | Troubleshooting Actions   |
|----------------|---------------------------------------|----------------|-----------------------------------|--|----------------|---|
| 13             | BOOT_MSG_ENCL_COUNT_PER_PORT_EXCEEDED | BOOT_TIME_WAIT | MR_EVT_ENCL_MAX_PER_PORT_EXCEEDED | There are %d enclosures connected to connector %s, but only maximum of %d enclosures can be connected to a single SAS connector. Remove the extra enclosures then restart your system.   | —              | <b>Cause:</b> This controller supports only a particular number of enclosures.<br><b>Action:</b> Remove extra enclosures or insert a controller that supports your enclosure requirements.                      |
| 14             | BOOT_MSG_SAS_TOPOLOGY_ERROR           | BOOT_TIME_WAIT | SAS discovery error               | Invalid SAS topology detected. Check your cable configurations, repair the problem, and restart your system.   | —              | <b>Cause:</b> The controller has detected an invalid SAS topology.<br><b>Action:</b> Check the cables or reconfigure the attached devices to create a valid SAS topology.                                       |
| 15             | BOOT_MSG_BBU_BAD                      | 10             | NULL                              | The battery is currently discharged or disconnected. Verify the connection and allow 30 minutes for charging. If the battery is properly connected and it has not returned to operational state after 30 minutes of charging then contact technical support for additional assistance. | Not supported. | <b>Actions:</b> Check the battery cable to ensure that it is connected properly. Ensure that the battery is charging properly. Contact Technical Support to replace the battery if the battery is draining out. |

| Message Number | Boot Message Type           | Wait Time | Event Log                              | Boot Message Description   | Comments                             | Troubleshooting Actions   |
|----------------|-----------------------------|-----------|--|--|--------------------------------------|---|
| 16             | BOOT_MSG_BBU_MSG_DISABLE    | 10        | MR_EVT_BBU_NOT_PRESENT                 | The battery hardware is missing or malfunctioning, or the battery is unconnected, or the battery could be fully discharged.<br>If you continue to boot the system, the battery-backed cache will not function. If battery is connected and has been allowed to charge for 30 minutes and this message continues to appear, contact technical support for assistance.<br>Press D to disable this warning (if your controller does not have a battery) | Use property disable Battery Warning | <b>Action:</b><br>Check the battery cable to ensure that it is connected properly.<br>Ensure that the battery is charging properly.<br>Contact Technical Support to replace the battery if the battery is draining out.   |
| 17             | BOOT_MSG_BAD_MFC_SASADDRESS | 10        | MFC data error!<br>Invalid SAS address | Invalid SAS Address present in MFC data.<br>Program a valid SAS Address and restart your system.   | —                                    | <b>Cause:</b><br>Invalid SAS address may be present.<br><b>Actions:</b><br>1. Power off the system and remove the controller.<br>2. Find the SAS address label and re-program the SAS address.<br>Contact Technical Support if you are unable to re-program the SAS address.<br>OEMs can access the StorCLI and re-program the SAS address. |

| Message Number | Boot Message Type    | Wait Time      | Event Log                            | Boot Message Description   | Comments | Troubleshooting Actions  |
|----------------|----------------------|----------------|--------------------------------------|--|----------|--|
| 18             | BOOT_MSG_PDS_MISSING | BOOT_TIME_WAIT | MR_EVT_CTRL_BOOT_MISSING_PDS         | Some configured disks have been removed from your system, or are no longer accessible. Check your cables and also make sure all disks are present. Press any key to continue.  | —        | <p><b>Cause:</b><br/>The controller is unable to find the configured drives.</p> <p><b>Actions:</b><br/>Check if the configured drives are present and they are properly connected. Go to BIOS and check if the devices are displayed. Ensure that the drives are spun-up and have power supplied to them. If there is a backplane, check the connector to ensure that power is being supplied to the drive.</p> |
| 19             | BOOT_MSG_LDS_OFFLINE | BOOT_TIME_WAIT | MR_EVT_CTRL_BOOT_LDS_WILL_GO_OFFLINE | The following VD's have missing disks: %s. If you proceed (or load the configuration utility), these VD's will be marked OFFLINE and will be inaccessible. Check your cables and make sure all disks are present. Press any key to continue. | —        | <p><b>Cause:</b><br/>The controller is unable to find the configured drives.</p> <p><b>Actions:</b><br/>Check if the configured drives are present and they are properly connected. Go to BIOS and check if the devices are displayed. Ensure that the drives are spun-up and have power supplied to them. If there is a backplane, check the connector to ensure that power is being supplied to the drive.</p> |

| Message Number | Boot Message Type          | Wait Time      | Event Log                    | Boot Message Description   | Comments | Troubleshooting Actions  |
|----------------|----------------------------|----------------|------------------------------|--|----------|--|
| 20             | BOOT_MSG_LDS_MISSING       | BOOT_TIME_WAIT | MR_EVT_CTRL_BOOT_LDS_MISSING | <p>The following VD's are missing: %s.</p> <p>If you proceed (or load the configuration utility), these VD's will be removed from your configuration.</p> <p>If you wish to use them at a later time, they will have to be imported. If you believe these VD's should be present, power off your system and check your cables to make sure all disks are present. Press any key to continue.</p>   | —        | <p><b>Cause:</b><br/>The controller is unable to find the configured drives.</p> <p><b>Actions:</b><br/>Check if the configured drives are present and they are properly connected. Go to BIOS and check if the devices are displayed. Ensure that the drives are spun-up and have power supplied to them. If there is a backplane, check the connector to ensure that power is being supplied to the drive.</p> |
| 21             | BOOT_MSG_LDS_MISSING_SPANS | BOOT_TIME_WAIT | MR_EVT_CTRL_BOOT_LDS_MISSING | <p>The following VD's are missing complete spans: %s. If you proceed (or load the configuration utility), these VD's will be removed from your configuration and the remaining drives marked as foreign.</p> <p>If you wish to use them at a later time, restore the missing span(s) and use a foreign import to recover the VD's.</p> <p>If you believe these VD's should be present, please power off your system and check your cables to make sure all disks are present. Press any key to continue.</p> | —        | <p><b>Cause:</b><br/>The controller is unable to find the configured drives.</p> <p><b>Actions:</b><br/>Check if the configured drives are present and they are properly connected. Go to BIOS and check if the devices are displayed. Ensure that the drives are spun-up and have power supplied to them. If there is a backplane, check the connector to ensure that power is being supplied to the drive.</p> |

| Message Number | Boot Message Type                 | Wait Time          | Event Log                       | Boot Message Description  | Comments   | Troubleshooting Actions  |
|----------------|-----------------------------------|--------------------|---------------------------------|---|--|--|
| 22             | BOOT_MSG_CONFIG_MISSING           | BOOT_TIME_WAIT     | MR_EVT_CTRL_BOOT_CONFIG_MISSING | All of the disks from your previous configuration are gone. If this is an unexpected message, power off your system and check your cables to make sure all disks are present. Press any key to continue.  | Headless mode – should not appear, if autoEnhancedImport is set. | <p><b>Cause:</b><br/>The controller is unable to find the configured drives.</p> <p><b>Actions:</b><br/>Check if the configured drives are present and they are properly connected. Go to BIOS and check if the devices are displayed. Ensure that the drives are spun-up and have power supplied to them. If there is a backplane, check the connector to ensure that power is being supplied to the drive.</p> |
| 23             | BOOT_MSG_CACHE_FLUSH_NOT_POSSIBLE | BOOT_TIME_CRITICAL | NULL                            | The cache contains dirty data, but some VD's are missing or will go offline, so the cached data can not be written to disk. If this is an unexpected error, power off your system and check your cables to make sure all disks are present. If you continue, the data in cache will be permanently discarded. Press X to acknowledge and permanently destroy the cached data. | Not supported  | <p><b>Cause:</b><br/>The controller is unable to find the configured drives.</p> <p><b>Actions:</b><br/>Check if the configured drives are present and they are properly connected. Go to BIOS and check if the devices are displayed. Ensure that the drives are spun-up and have power supplied to them. If there is a backplane, check the connector to ensure that power is being supplied to the drive.</p> |

| Message Number | Boot Message Type                | Wait Time          | Event Log                   | Boot Message Description  | Comments  | Troubleshooting Actions  |
|----------------|----------------------------------|--------------------|-----------------------------|---|---|--|
| 24             | BOOT_MSG_LDS_WILL_RUN_WRITE_THRU | 5                  | NULL                        | Your VD's that are configured for Write-Back are temporarily running in Write-Through mode. This is caused by the battery being charged, missing, or bad. Allow the battery to charge for 24 hours before evaluating the battery for replacement. The following VD's are affected: %s<br>Press any key to continue. | No event is logged, information for the user                                  | <b>Actions:</b><br>Check the battery cable to ensure that it is connected properly. Ensure that the battery is charging properly. Contact Technical Support to replace the battery if the current supplied by the battery is draining out. |
| 25             | BOOT_MSG_MEMORY_INVALID          | BOOT_TIME_CRITICAL | NULL                        | Invalid memory configuration detected. Contact your system support. System has halted.  | Not supported   | <b>Action:</b><br>Reseat or replace the DIMM.  |
| 26             | BOOT_MSG_CACHE_DISCARD_WARNING   | BOOT_TIME_WAIT     | MR_EVT_CTRL_CACHE_DISCARDED | Cache data was lost due to an unexpected power-off or reboot during a write operation, but the adapter has recovered. This could be because of memory problems, bad battery, or you might not have a battery installed. Press any key to continue or C to load the configuration utility.                           | Posted only when disableBatteryWarning is set, same as BOOT_MSG_CACHE_DISCARD | <b>Actions:</b><br>Check the battery cable to ensure that it is connected properly. Ensure that the battery is charging properly. Contact Technical Support to replace the battery if power supplied by the battery is draining out.       |



| Message Number | Boot Message Type                    | Wait Time          | Event Log  | Boot Message Description   | Comments  | Troubleshooting Actions  |
|----------------|--------------------------------------|--------------------|--|--|---|--|
| 27             | BOOT_MSG_CONFIG_CHANGE_WARNING       | BOOT_TIME_CRITICAL | NULL   | Entering the configuration utility in this state will result in drive configuration changes.<br>Press Y to continue loading the configuration utility or power off your system and check your cables to make sure all disks are present and reboot the system. | Posted from other messages like BOOT_MSG_LDS_MISSING, when the user clicks C. | <p><b>Cause:</b><br/>The controller is unable to find the configured drives.</p> <p><b>Actions:</b><br/>Check if the configured drives are present and they are properly connected.<br/>Go to BIOS and check if the devices are displayed.<br/>Ensure that the drives are spun-up and have power supplied to them.<br/>If there is a backplane, check the connector to ensure that power is being supplied to the drive.<br/>If the controller is being used to create a new configuration by reusing the drives, purge the existing data and then continue.</p> |
| 28             | BOOT_MSG_EMBEDDED_MULTIBIT_ECC_ERROR | BOOT_TIME_CRITICAL | Multibit ECC error - memory or controller needs replacement. | Multibit ECC errors were detected on the RAID controller. If you continue, data corruption can occur. Contact technical support to resolve this issue.<br>Press X to continue, otherwise power off the system, replace the controller, and reboot.             | OEM Specific, see BOOT_MSG_HBA_MULTIBIT_ECC_ERROR for Avago Generic message   | <p><b>Action:</b></p> <ol style="list-style-type: none"> <li>1. Reseat or replace the DIMM.</li> <li>2. Restart system.</li> </ol> <p>If the problem persists, contact Technical Support.</p>  |

| Message Number | Boot Message Type                               | Wait Time          | Event Log  | Boot Message Description  | Comments  | Troubleshooting Actions   |
|----------------|---|--------------------|--|---|---|---|
| 29             | BOOT_MSG_EMBEDDED_SINGLE_BIT_ECC_ERROR          | BOOT_TIME_CRITICAL | MR_EVT_CTRL_MEM_ECC_SINGLE_BIT_CRITICAL or WARNING           | Single-bit ECC errors were detected on the RAID controller. Contact technical support to resolve this issue. Press X to continue or else power off the system, replace the controller, and reboot.  | OEM Specific, see BOOT_MSG_HBA_SINGLE_BIT_ECC_ERROR for Avago Generic message | <b>Action:</b><br>1. Reseat or replace the DIMM.<br>2. Restart system.<br>If the problem persists, contact Technical Support. |
| 30             | BOOT_MSG_EMBEDDED_SINGLE_BIT_OVERFLOW_ECC_ERROR | BOOT_TIME_CRITICAL | NULL   | Single-bit overflow ECC errors were detected on the RAID controller. If you continue, data corruption can occur. Contact technical support to resolve this issue. Press X to continue or else power off the system, replace the controller, and reboot.   | Not supported   | <b>Action:</b><br>1. Reseat or replace the DIMM.<br>2. Restart system.<br>If the problem persists, contact Technical Support. |
| 31             | BOOT_MSG_HBA_MULTIBIT_ECC_ERROR                 | BOOT_TIME_CRITICAL | Multibit ECC error – memory or controller needs replacement. | Multibit ECC errors were detected on the RAID controller. The DIMM on the controller needs replacement. Contact technical support to resolve this issue. If you continue, data corruption can occur. Press X to continue, otherwise power off the system and replace the DIMM module and reboot. If you have replaced the DIMM press X to continue. | —   | <b>Action:</b><br>1. Reseat or replace the DIMM.<br>2. Restart system.<br>If the problem persists, contact Technical Support. |

| Message Number | Boot Message Type                      | Wait Time          | Event Log  | Boot Message Description  | Comments      | Troubleshooting Actions   |
|----------------|--|--------------------|--|---|---------------|---|
| 32             | BOOT_MSG_HBA_SINGLE_BIT_ECC_ERROR      | BOOT_TIME_CRITICAL | MR_EVT_CTRL_MEM_ECC_SINGLE_BIT_CRITICAL or WARNING | Single-bit ECC errors were detected during the previous boot of the RAID controller. The DIMM on the controller needs replacement. Contact technical support to resolve this issue. Press X to continue, otherwise power off the system and replace the DIMM module and reboot. If you have replaced the DIMM press X to continue.  | —             | <b>Action:</b> <ol style="list-style-type: none"> <li>Reseat or replace the DIMM.</li> <li>Restart system.</li> </ol> If the problem persists, contact Technical Support. |
| 33             | BOOT_MSG_HBA_SINGLE_BIT_OVERFLOW_ERROR | BOOT_TIME_CRITICAL | NULL   | Single-bit overflow ECC errors were detected during the previous boot of the RAID controller. The DIMM on the controller needs replacement. Contact technical support to resolve this issue. If you continue, data corruption can occur. Press X to continue, otherwise power off the system and replace the DIMM module and reboot. If you have replaced the DIMM press X to continue. | Not supported | <b>Action:</b> <ol style="list-style-type: none"> <li>Reseat or replace the DIMM.</li> <li>Restart system.</li> </ol> If the problem persists, contact Technical Support. |

| Message Number | Boot Message Type                   | Wait Time          | Event Log         | Boot Message Description  | Comments  | Troubleshooting Actions   |
|----------------|-------------------------------------|--------------------|-------------------|---|---|---|
| 34             | BOOT_MSG_ENCL_VIOLATION_MODE        | BOOT_TIME_CRITICAL | MR_EVT_CTRL_CRASH | The attached enclosure does not support in controller's Direct mapping mode. Contact your system support.<br>The system has halted because of an unsupported configuration.                     | Should be able to enter HSM   | <b>Causes:</b> Too many chained enclosures may be present.<br>May also be related to a security feature in the drive.<br><b>Actions:</b><br>Remove the drives that are not supported.<br>Reduce the number of drives.<br>Replace the enclosure with an other one.<br>Ensure that the firmware version is updated.<br>Contact Technical Support if the problem persists. |
| 35             | BOOT_MSG_EXP_VIOLATION_FORCE_REBOOT | 10                 | MR_EVT_CTRL_CRASH | Expander detected in controller with direct mapping mode. Reconfiguring automatically to persistent mapping mode. Automatic reboot would happen in 10 seconds.                                  | OEM Specific action, see BOOT_MSG_ENCL_VIOLATION_MODE for LSI generic | <b>Action:</b> No action required. The controller will configure itself to a persistent mapping mode and then reboot.<br>Contact Technical Support if problem persists.   |
| 36             | BOOT_MSG_8033X_ATOM_ISSUE           | BOOT_TIME_CRITICAL | NULL              | Your controller's I/O processor has a fault that can potentially cause data corruption. Your controller needs replacement. Contact your system support.<br>To continue, press Y to acknowledge. | DEPRECATED  | <b>Action:</b> Contact Technical Support for replacement of the controller.   |

| Message Number | Boot Message Type                    | Wait Time          | Event Log  | Boot Message Description  | Comments      | Troubleshooting Actions   |
|----------------|--------------------------------------|--------------------|--|---|---------------|---|
| 37             | BOOT_MSG_MAX_DISKS_EXCEEDED          | BOOT_TIME_CRITICAL | MR_EVT_PD_NOT_SUPPORTED  | The number of disks exceeded the maximum supported count of %d disks. Remove the extra drives and reboot system to avoid losing data. Press Y to continue with extra drives.                  | —             | <b>Actions:</b> Power off the system and remove the controller. Remove the extra drives to reduce the size of the topology. Replace the controller with a controller that supports a larger topology.   |
| 38             | BOOT_MSG_MAX_DISKS_EXCEEDED_PER_QUAD | BOOT_TIME_CRITICAL | NULL   | The number of devices exceeded the maximum limit of devices per quad. Remove the extra drives and reboot the system to avoid losing data. System has halted due to unsupported configuration. | Not supported | <b>Actions:</b> Power off the system and remove the controller. Remove the extra drives to reduce the size of the topology. Replace the controller with a controller that supports a larger topology.   |
| 39             | BOOT_MSG_DISCOVERY_ERROR             | BOOT_TIME_CRITICAL | Discovery errors – power cycle system and drives, and try again. | A discovery error has occurred, power cycle the system and all the enclosures attached to this system.  | —             | <b>Actions:</b> Shutdown and restart the system as well as all the enclosures attached to the system. Ensure that all the cables are connected and connected properly. Reduce the topology in case of a bad drive. If the problem persists, collect the logs of the system, driver, and firmware and contact Technical Support. |

| Message Number | Boot Message Type                       | Wait Time      | Event Log                        | Boot Message Description   | Comments  | Troubleshooting Actions   |
|----------------|---|----------------|----------------------------------|--|---|---|
| 40             | BOOT_MSG_CTRL_SEC_RET_KEY_FIRST         | BOOT_TIME_WAIT | NULL                             | Drive security is enabled on this controller and a pass phrase is required. Enter the pass phrase.   | Requires user input, if undesired, change Security binding                  | <b>Action:</b> Enter the pass phrase.   |
| 41             | BOOT_MSG_CTRL_SEC_RET_KEY_RETRY         | BOOT_TIME_WAIT | NULL                             | Invalid pass phrase. Enter the pass phrase.  | opRom must be enabled for user input, if undesired, change Security binding | <b>Action:</b> Enter the pass phrase.   |
| 42             | BOOT_MSG_CTRL_LOCK_KEY_INVALID          | BOOT_TIME_WAIT | MR_EVT_CTRL_LOCK_KEY_FAILED      | There was a drive security key error. All secure drives will be marked as foreign. Press any key to continue, or C to load the configuration utility.  | —   | <b>Action:</b> Check if the controller supports self-encrypting drives.                                 |
| 43             | BOOT_MSG_KEY_MISSING_REBOOT_OR_CONTINUE | BOOT_TIME_WAIT | MR_EVT_CTRL_LOCK_KEY_FAILED      | Invalid pass phrase. If you continue, a drive security key error will occur and all secure configurations will be marked as foreign. Reboot the machine to retry the pass phrase or press any key to continue.   | —   | <b>Action:</b> Restart the system to retry the pass phrase or press any key to continue.                |
| 44             | BOOT_MSG_KEY_EKMS_FAILURE               | BOOT_TIME_WAIT | MR_EVT_CTRL_LOCK_KEY_EKM_FAILURE | Unable to communicate to EKMS. If you continue, there will be a drive security key error and all secure configurations will be marked as foreign. Check the connection with the EKMS, reboot the machine to retry the EKMS or press any key to continue. | —   | <b>Action:</b> Check the connection of EKMS, restart the system to re-establish the connection to EKMS. |

| Message Number | Boot Message Type                      | Wait Time          | Event Log                                      | Boot Message Description   | Comments   | Troubleshooting Actions  |
|----------------|--|--------------------|--|--|--|--|
| 45             | BOOT_MSG_REKEY_TO_EKMS_FAILURE         | BOOT_TIME_WAIT     | MR_EVT_CTRL_LOCK_KEY_REKEY_FAILED              | Unable to change security to EKMS as not able to communicate to EKMS. If you continue, the drive security will remain to existing security mode.<br>Check the connection with the EKMS, reboot the machine to retry the EKMS or press any key to continue. | —  | <b>Action:</b> Check the connection of EKMS, restart the system to re-establish the connection to EKMS.  |
| 46             | BOOT_MSG_KEY_EKMS_FAILURE_MERCURY      | 20                 | MR_EVT_CTRL_LOCK_KEY_EKM_FAILURE               | DKM existing key request failed; existing secure configurations will be labeled foreign and will not be accessible. Reboot the server to retry.  | OEM Specific, see BOOT_MSG_KEY_EKMS_FAILURE for Avago generic      | <b>Action:</b> Check the connection of EKMS, restart the system to re-establish the connection to EKMS.  |
| 47             | BOOT_MSG_REKEY_TO_EKMS_FAILURE_MERCURY | BOOT_TIME_CRITICAL | MR_EVT_CTRL_LOCK_KEY_REKEY_FAILED              | DKM new key request failed; controller security mode transition was not successful. Reboot the server to retry request, or press any key to continue.  | OEM Specific, see BOOT_MSG_REKEY_TO_EKMS_FAILURE for Avago generic | <b>Action:</b> Check the connection of EKMS, restart the system to re-establish the connection to EKMS.  |
| 48             | BOOT_MSG_NVDATA_IMAGE_MISSING          | BOOT_TIME_WAIT     | NVDATA image is invalid – reflash NVDATA image | Firmware did not find valid NVDATA image. Program a valid NVDATA image and restart your system. Press any key to continue.   | —  | <b>Actions:</b> Flash the correct firmware package that has proper NV Data image.<br>Check the current firmware version, and if needed, updated to the latest firmware version. Updating to the latest firmware version may require importing foreign volumes. |

| Message Number | Boot Message Type               | Wait Time      | Event Log                         | Boot Message Description  | Comments                              | Troubleshooting Actions  |
|----------------|---------------------------------|----------------|-----------------------------------|---|---------------------------------------|--|
| 49             | BOOT_MSG_IR_MR_MIGRATION_FAILED | BOOT_TIME_WAIT | IR to MR migration failed.        | IR to MR Migration failed.<br>Press any key to continue with MR defined NVDATA values   | —                                     | N/A  |
| 50             | BOOT_MSG_DUAL_BATTERY_PRSENT    | 10             | NULL                              | Two BBUs are connected to the adapter. This is not a supported configuration. Battery and caching operations are disabled. Remove one BBU and reboot to restore battery and caching operations. If dirty cache is lost in this boot, that could have been because of dual battery presence. | Not supported                         | <b>Actions:</b> Remove one BBU and restart the system to restore battery and caching operations. Due to the presence of a dual battery, you may lose the data in dirty cache while restarting the system.  |
| 51             | BOOT_MSG_LDS_CACHE_PINNED       | 10             | MR_EVT_CTRL_BOOT_LDS_CACHE_PINNED | Offline or missing virtual drives with preserved cache exist.<br>Check the cables and make sure that all drives are present.<br>Press any key to continue, or C to load the configuration utility.  | Use property allowBootWithPinnedCache | <b>Cause:</b> The controller is unable to find the configured drives.<br><b>Actions:</b> Check if the configured drives are present and they are properly connected. Go to BIOS and check if the devices are displayed. Ensure that the drives are spun-up and have power supplied to them. If there is a backplane, check the connector to ensure that power is being supplied to the drive. Cache offload occurs if the missing drive is restored. |



| Message Number | Boot Message Type                       | Wait Time          | Event Log                               | Boot Message Description  | Comments   | Troubleshooting Actions   |
|----------------|---|--------------------|---|---|--|---|
| 52             | BOOT_MSG_LDS_CACHE_PINNED_HALT          | BOOT_TIME_CRITICAL | MR_EVT_CTRL_BOOT_LDS_CACHE_PINNED       | Offline or missing virtual drives with preserved cache exist.<br>Check the cables and make sure that all drives are present.<br>Press any key to enter the configuration utility. | If property allowBootWithPinnedCache is disabled | <b>Cause:</b> The controller is unable to find the configured drives.<br><b>Actions:</b> Check if the configured drives are present and they are properly connected.<br>Go to BIOS and check if the devices are displayed. Ensure that the drives are spun-up and have power supplied to them.<br>If there is a backplane, check the connector to ensure that power is being supplied to the drive.<br>Cache offload occurs if the missing drive is restored. |
| 53             | BOOT_MSG_BAD_SBR_SASADDRESS             | BOOT_TIME_CRITICAL | NULL                                    | Invalid SAS Address present in SBR.<br>Contact your system support.<br>Press any key to continue with Default SAS Address.  | Not supported                                    | <b>Cause:</b> Invalid SAS address present in the SBR.<br><b>Action:</b> Contact Technical Support to restore to the factory default values.   |
| 54             | BOOT_MSG_INCOMPATIBLE_SECONDARY_IBUTTON | BOOT_TIME_CRITICAL | Incompatible secondary iButton detected | Incompatible secondary iButton present!<br>Insert the correct iButton and restart the system.<br>Press any key to continue but OEM specific features will not be upgraded!        | —  | <b>Actions:</b> Insert the correct iButton or key-vault and restart the system.<br>If problem persists, contact Technical Support for replacement of the iButton or key-vault.  |

| Message Number | Boot Message Type                | Wait Time          | Event Log   | Boot Message Description   | Comments  | Troubleshooting Actions  |
|----------------|----------------------------------|--------------------|---|--|---|--|
| 55             | BOOT_MSG_CTRL_DOWNGRADE_DETECTED | BOOT_TIME_CRITICAL | NULL  | Upgrade Key Missing!<br>An upgrade key was present on a previous power cycle, but it is not connected.<br>This can result in inaccessible data unless it is addressed.<br>Re-attach the upgrade key and reboot.  | Not supported   | <b>Cause:</b> An upgrade key that was present on a previous power cycle may not be connected.<br><b>Actions:</b> Reattach the upgrade key and restart the system. If the problem persists, contact Technical Support for replacement of the upgrade key. |
| 56             | BOOT_MSG_DDF_MFC_INCOMPATIBLE    | BOOT_TIME_WAIT     | Native configuration is not supported, check MFC. | The native configuration is not supported by the controller.<br>Check the controller, iButton or key-vault.<br>If you continue the configuration will be marked foreign.<br>Press any key to continue.   | —   | <b>Actions:</b> Insert the correct iButton or key-vault and restart the system. If problem persists, contact Technical Support for replacement of the iButton or key-vault.  |
| 57             | BOOT_MSG_BBU_MSG_DISABLE_PERC    | 10                 | MR_EVT_BBU_NOT_PRESENT or REMOVED                 | The battery is currently discharged or disconnected.<br>Verify the connection and allow 30 minutes for charging. If the battery is properly connected and it has not returned to operational state after 30 minutes of charging, contact technical support for additional assistance.<br>Press D to disable this warning (if your controller does not have a battery). | Use property disable Battery Warning, OEM Specific, also see BOOT_MSG_BBU_MSG_DISABLE | <b>Actions:</b> Check the battery cable to ensure that it is connected properly. Ensure that the battery is charging properly. Contact Technical Support to replace the battery if power supplied by the battery is draining out.                        |

| Message Number | Boot Message Type                     | Wait Time      | Event Log                   | Boot Message Description  | Comments                                     | Troubleshooting Actions  |
|----------------|---------------------------------------|----------------|-----------------------------|---|--|--|
| 58             | BOOT_MSG_LDS_WILL_RUN_WRITE_THRU_PERC | 5              | NULL                        | The battery is currently discharged or disconnected. VD's configured in Write-Back mode will run in Write-Through mode to protect your data and will return to the Write-Back policy when the battery is operational. If VD's have not returned to Write-Back mode after 30 minutes of charging then contact technical support for additional assistance. The following VD's are affected: %s. Press any key to continue. | No event is logged, information for the user | <b>Actions:</b><br>Check the battery cable to ensure that it is connected properly. Ensure that the battery is charging properly. Contact Technical Support to replace the battery if the battery is draining out. |
| 59             | BOOT_MSG_CACHE_DISCARD_WARNING_PERC   | BOOT_TIME_WAIT | MR_EVT_CTRL_CACHE_DISCARDED | Cache data was lost, but the controller has recovered. This could be because your controller had protected cache after an unexpected power loss and your system was without power longer than the battery backup time. Press any key to continue or C to load the configuration utility.  | Property disableBatteryWarning is set        | <b>Actions:</b><br>Check the memory and the battery. Check the voltage levels and cache offload timing in case of power loss. If necessary, replace the memory or battery.   |
| 60             | BOOT_MSG_CFG_CMD_LOST                 | BOOT_TIME_WAIT | MR_EVT_CFG_CMD_LOST         | The most recent configuration command could not be committed and must be retried. Press any key to continue, or C to load the configuration utility.  | —  | N/A  |

| Message Number | Boot Message Type                     | Wait Time          | Event Log  | Boot Message Description  | Comments | Troubleshooting Actions  |
|----------------|---------------------------------------|--------------------|--|---|----------|--|
| 61             | BOOT_MSG_CFG_CHANGES_LOST             | 10                 | Configuration command was not committed, please retry          | Firmware could not synchronize the configuration or property changes for some of the VD's/PD's.<br>Press any key to continue, or C to load the configuration utility.   | —        | <b>Actions:</b><br>If the same problem persists, contact Technical Support.  |
| 62             | BOOT_MSG_CFG_ONBOARD_EXP_NOT_DETECTED | BOOT_TIME_CRITICAL | On-board expander FW or mfg image is corrupted – reflash image | On-board expander firmware or manufacturing image is corrupted. The flash expander firmware and manufacturing image use the recovery tools.   | —        | <b>Actions:</b><br>Contact Technical Support for factory-only tools to assist in recovery of the expander.   |
| 63             | BOOT_MSG_PFK_INCOMPATIBLE             | BOOT_TIME_WAIT     | MFC record not found, ensure you have the correct FW version   | The native configuration is not supported by the current firmware. Make sure that the correct controller firmware is being used. If you continue, the configuration will be marked as foreign. Press any key to continue. | —        | <b>Actions:</b><br>Collect the logs of the system, driver, and firmware. Ensure that the firmware version corrected and is updated to the latest version. Contact Technical Support if the problem persists. |
| 64             | BOOT_MSG_INVALID_FOREIGN_CFG_IMPORT   | 5                  | MR_EVT_FOREIGN_CFG_AUTO_IMPORT_NONE                            | Foreign configuration import did not import any drives. Press any key to continue.  | —        | <b>Actions:</b><br>Check the firmware version of the controller. Replace the controller and try again. If the problem persists, contact Technical Support.   |
| 65             | BOOT_MSG_UPGRADED_I_MR_TO_MR          | 2                  | Reboot required to complete the iMR to MR upgrade              | Valid memory detected. Firmware is upgraded from iMR to MR.<br>Reboot the system for the MR firmware to run.  | —        | N/A  |
| 66             | BOOT_MSG_PFK_ENABLED_AT_BOOT_TIME     | BOOT_TIME_WAIT     | BOOT_MSG_EVENT_USE_BOOT_MSG                                    | Advanced software options keys were detected, features activated – %s.  | —        | N/A  |

| Message Number | Boot Message Type                       | Wait Time          | Event Log   | Boot Message Description  | Comments | Troubleshooting Actions   |
|----------------|---|--------------------|---|---|----------|---|
| 67             | BOOT_MSG_PFK_DISABLED_AT_BOOT_TIME      | BOOT_TIME_WAIT     | BOOT_MSG_EVENT_USE_BOOT_MSG   | Advanced software options keys were missing, features deactivated – %s.   | —        | <b>Actions:</b><br>Check the cable connection.<br>Check for the Advanced Software Options key.<br>If the problem persists, contact Technical Support.   |
| 68             | BOOT_MSG_EEPROM_ERROR_FEATURES_DISABLED | BOOT_TIME_CRITICAL | Cannot communicate with iButton, possible extreme temps.                | Cannot communicate with iButton to retrieve premium features. This is probably because of extreme temperatures. The system has halted!                                  | —        | <b>Actions:</b><br>Check the cable connection.<br>Ensure that iButton is present.<br>Check the ambient temperature near the iButton.<br>If the problem persists, contact Technical Support.     |
| 69             | BOOT_MSG_DC_ON_DEGRADED_LD              | BOOT_TIME_CRITICAL | Multiple power loss detected with I/O transactions to non optimal VD's. | Consecutive power loss detected during I/O transactions on nonoptimal write-back volumes. This might have resulted in data integrity issues. Press <b>X</b> to proceed. | —        | <b>Actions:</b><br>Check if the controller is securely locked in the PCI slot.<br>Check the power supply, battery, and Supercap.<br>If you find any hardware defect, contact Technical Support. |
| 70             | BOOT_MSG_CACHE_ERROR                    |                    |   |   | —        |   |
| 71             | BOOT_MSG_SUPERCAP_CHARGING_IN_PROCESS   |                    |   |   | —        |   |
| 72             | BOOT_MSG_SUPERCAP_CHARGING_COMPLETED    |                    |   |   | —        |   |
| 73             | BOOT_MSG_SUPERCAP_CHARGING_INCOMPLETE   |                    |   |   | —        |   |

| Message Number | Boot Message Type                     | Wait Time          | Event Log  | Boot Message Description  | Comments | Troubleshooting Actions  |
|----------------|---------------------------------------|--------------------|--|---|----------|--|
| 74             | BOOT_MSG_DOWNGRADE_MR_TO_IMR          | BOOT_TIME_CRITICAL | Bad or missing RAID controller memory module detected. | Bad or missing RAID controller memory module detected.<br>Press D to downgrade the RAID controller to iMR mode.<br><b>Warning!</b><br>Downgrading to iMR mode, might result in incompatible Logical drives.<br>Press any other key to continue, controller shall boot to safe mode. | —        | <b>Actions:</b><br>1. Reseat or replace the DIMM.<br>2. Restart system.<br><br>If the problem persists, contact Technical Support for repair or replacement. |
| 75             | BOOT_MSG_CACHE_OFFLOAD_DISABLE        |                    |  | Disable cache offload message.  | —        |  |
| 76             | BOOT_MSG_NVCACHE_BACKUP_CAPACITY_OVER |                    |  | The online backup capacity has exceeded the limit.  | —        |  |
| 77             | BOOT_MSG_NVCACHE_CONSIDER_REPLACEMENT |                    |  | Consider replacing the offline NVcache.   | —        |  |
| 78             | BOOT_MSG_NVCACHE_INVALID              |                    |  | The offline flash is no longer working properly.  | —        |  |
| 79             | BOOT_MSG_SUPERCAP_LEARN_IN_PROGRESS   |                    |  | A supercap learn is in process.   | —        |  |
| 80             | BOOT_MSG_SUPERCAP_LEARN_COMPLETED     |                    |  | The supercap learn is complete.   | —        |  |
| 81             | BOOT_MSG_NVCACHE_COMPONENT_MISMATCH   |                    |  | The NVcache has an incompatible combination of DDR, NAND flash and supercap.  | —        |  |
| 82             | BOOT_MSG_TEMP_THRESHOLD_ERROR         |                    |  | The controller maximum temperature threshold has been exceeded.   | —        |  |
| 83             | BOOT_MSG_FLASH_BAD_WARNING            |                    |  | <b>Warning!</b> Flash memory is bad.  | —        |  |
| 84             | BOOT_MSG_CACHE_RESTORE_ERROR          |                    |  | <b>Warning!</b> A fatal error occurred when restoring the image from flash.   | —        |  |

| Message Number | Boot Message Type                     | Wait Time          | Event Log | Boot Message Description   | Comments | Troubleshooting Actions   |
|----------------|---------------------------------------|--------------------|-----------|--|----------|---|
| 85             | BOOT_MSG_NVME_NOT_SUPPORTED           |                    |           | NVMe drivers were discovered, but are not supported.   | —        |   |
| 86             | BOOT_MSG_FW_INCOMPATIBLE_WITH_PROFILE |                    |           | Firmware is running that is not compatible with the current profile ID.  | —        |   |
| 87             | BOOT_MSG_FIRMWARE_RELEASE_CANDIDATE   |                    |           | Firmware is running that is not compatible with the current profile ID.  | —        |   |
| 88             | BOOT_MSG_NO_DRIVES_SUPPORTED          |                    |           | Drives are not supported because disable SAS is set.   | —        |   |
| 89             | BOOT_MSG_HEADLESS_DUMMY               | 0                  | NULL      | —  | —        | N/A   |
| 90             | BOOT_MSG_LIST_TERMINATOR              | 0                  | NULL      | —  | —        | N/A   |
| 91             | BOOT_MSG_MAX_DEVICE_EXCEEDED          | BOOT_TIME_CRITICAL |           | Number of devices exceeded the maximum supported count of %d devices. Remove the extra devices and reboot the system to avoid losing data. Press 'Y' to continue with extra devices. | —        | <b>Actions:</b> Power off the system and remove the controller. Remove the extra devices (disks/enclosures devices/initiator devices/virtual devices) to reduce the size of the topology. Replace the controller with a controller that supports a larger topology. |

# Glossary

---

This glossary defines the terms used in this document.

## A

|                          |  |
|--------------------------|--|
| Absolute state of charge | Predicted remaining battery capacity expressed as a percentage of Design Capacity. Note that the Absolute State of Charge operation can return values greater than 100 percent.  |
| Access policy            | A virtual drive property indicating what kind of access is allowed for a particular virtual drive. The possible values are <i>Read/Write</i> , <i>Read Only</i> , or <i>Blocked</i> .  |
| Alarm enabled            | A controller property that indicates whether the controller's onboard alarm is enabled.  |
| Alarm present            | A controller property that indicates whether the controller has an onboard alarm. If present and enabled, the alarm is sounded for certain error conditions.   |
| Array                    | See <i>drive group</i> .   |
| Auto learn mode          | The controller performs the learn cycle automatically in this mode. This mode offers the following options: <ul style="list-style-type: none"> <li>• BBU Auto Learn: Firmware tracks the time since the last learn cycle and performs a learn cycle when due.</li> <li>• BBU Auto Learn Disabled: Firmware does not monitor or initiate a learn cycle. You can schedule learn cycles manually.</li> <li>• BBU Auto Learn Warn: Firmware warns about a pending learn cycle. You can initiate a learn cycle manually. After the learn cycle is complete, the firmware resets the counter and warns you when the next learn cycle time is reached.</li> </ul> |
| Auto learn period        | Time between learn cycles. A learn cycle is a battery calibration operation performed periodically by the controller to determine the condition of the battery.  |
| Average time to empty    | One-minute rolling average of the predicted remaining battery life.  |
| Average time to full     | Predicted time to charge the battery to a fully charged state based on the one minute rolling average of the charge current.   |

## B

|             |   |
|-------------|---|
| BBU present | A controller property that indicates whether the controller has an onboard supercapacitors backup unit to provide power in case of a power failure.   |
| BGI rate    | A controller property indicating the rate at which the background initialization of virtual drives will be carried out.   |
| BIOS        | Basic Input/Output System. The computer BIOS is stored on a flash memory chip. The BIOS controls communications between the microprocessor and peripheral devices, such as the keyboard and the video controller, and miscellaneous functions, such as system messages. |

## C

|                      |  |
|----------------------|--|
| Cache                | Fast memory that holds recently accessed data. Use of cache memory speeds subsequent access to the same data. When data is read from or written to main memory, a copy is also saved in cache memory with the associated main memory address. The cache memory software monitors the addresses of subsequent reads to see if the required data is already stored in cache memory. If it is already in cache memory (a cache hit), it is read from cache memory immediately and the main memory read is aborted (or not started). If the data is not cached (a cache miss), it is fetched from main memory and saved in cache memory. |
| Cache flush interval | A controller property that indicates how often the data cache is flushed.  |
| Caching              | The process of using a high speed memory buffer to speed up a computer system's overall read/write performance. The cache can be accessed at a higher speed than a drive subsystem. To improve read performance, the cache usually contains the most recently accessed data, as well as data from adjacent drive sectors. To improve write performance, the cache can temporarily store data in accordance with its write back policies.   |



|                                  |  |
|----------------------------------|--|
| Capacity                         | A property that indicates the amount of storage space on a drive or virtual drive.   |
| Coerced capacity                 | A drive property indicating the capacity to which a drive has been coerced (forced) to make it compatible with other drives that are nominally the same capacity. For example, a 4-GB drive from one manufacturer might be 4196 MB, and a 4-GB from another manufacturer might be 4128 MB. These drives could be coerced to a usable capacity of 4088 MB each for use in a drive group in a storage configuration.   |
| Coercion mode                    | A controller property indicating the capacity to which drives of nominally identical capacity are coerced (forced) to make them usable in a storage configuration.   |
| Consistency check                | An operation that verifies that all stripes in a virtual drive with a redundant RAID level are consistent and that automatically fixes any errors. For RAID 1 drive groups, this operation verifies correct mirrored data for each stripe.   |
| Consistency check rate           | The rate at which consistency check operations are run on a computer system.   |
| Controller                       | A chip that controls the transfer of data between the microprocessor and memory or between the microprocessor and a peripheral device such as a drive. RAID controllers perform RAID functions such as striping and mirroring to provide data protection.  |
| Copyback                         | The procedure used to copy data from a source drive of a virtual drive to a destination drive that is not a part of the virtual drive. The copyback operation is often used to create or restore a specific physical configuration for a drive group (for example, a specific arrangement of drive group members on the device I/O buses). The copyback operation can be run automatically or manually. Typically, a drive fails or is expected to fail, and the data is rebuilt on a hot spare. The failed drive is replaced with a new drive. Then the data is copied from the hot spare to the new drive, and the hot spare reverts from a rebuild drive to its original hot spare status. The copyback operation runs as a background activity, and the virtual drive is still available online to the host. |
| Current                          | Measure of the current flowing to (+) or from (-) the supercapacitors, reported in milliamperes.   |
| Current write policy             | A virtual drive property that indicates whether the virtual drive currently supports Write Back mode (write caching enabled) or Write Through mode (write caching disabled). <ul style="list-style-type: none"> <li>• In Write Back mode, the controller sends a data transfer completion signal to the host when the controller cache has received all of the data in a transaction.</li> <li>• In Write Through mode, the controller sends a data transfer completion signal to the host when the drive subsystem has received all of the data in a transaction.</li> </ul>  |
| Cycle count                      | The count is based on the number of times the near fully charged supercapacitors has been discharged to a level below the cycle count threshold.   |
| <b>D</b>                         |  |
| Default write policy             | A virtual drive property indicating whether the default write policy is Write Through or Write Back. In Write Back mode the controller sends a data transfer completion signal to the host when the controller cache has received all of the data in a transaction. In Write Through mode the controller sends a data transfer completion signal to the host when the drive subsystem has received all of the data in a transaction.   |
| Design capacity                  | Designed charge capacity of the supercapacitors, measured in milliampere-hour units (mAh).   |
| Design charge capacity remaining | Amount of the charge capacity remaining, relative to the supercapacitors design capacity.  |
| Design voltage                   | Designed voltage capacity of the supercapacitors, measured in millivolts (mV).   |
| Device ID                        | A controller or drive property indicating the manufacturer-assigned device ID.   |
| Device port count                | A controller property indicating the number of ports on the controller.  |
| Drive cache policy               | A virtual drive property indicating whether the virtual drive cache is enabled, disabled, or unchanged from its previous setting.  |
| Drive group                      | A group of drives attached to a RAID controller on which one or more virtual drives can be created. All virtual drives in the drive group use all of the drives in the drive group.  |

|                             |  |
|-----------------------------|--|
| Drive state                 | <p>A physical drive or a virtual drive property indicating the status of the appropriate drive.</p> <p><b>Physical Drive State</b></p> <p>A physical drive can be in any one of the following states:</p> <ul style="list-style-type: none"> <li>• <b>Unconfigured Good</b> – A drive accessible to the RAID controller but not configured as a part of a virtual drive or as a hot spare.<br/>In the output of the StorCLI commands, <b>Unconfigured Good</b> is displayed as <b>UGood</b>.</li> <li>• <b>Hot Spare</b> – A drive that is configured as a hot spare.</li> <li>• <b>Online</b> – A drive that can be accessed by the RAID controller and will be part of the virtual drive.<br/>In the output of the StorCLI commands, <b>Online</b> is displayed as <b>onln</b>.</li> <li>• <b>Rebuild</b> – A drive to which data is being written to restore full redundancy for a virtual drive.</li> <li>• <b>Failed</b> – A drive that was originally configured as Online or Hot Spare, but on which the firmware detects an unrecoverable error.</li> <li>• <b>Unconfigured Bad</b> – A drive on which the firmware detects an unrecoverable error; the drive was Unconfigured Good or the drive could not be initialized.<br/>In the output of the StorCLI commands, <b>Unconfigured Bad</b> is displayed as <b>UBad</b>.</li> <li>• <b>Missing</b> – A drive that was Online, but which has been removed from its location.</li> <li>• <b>Offline</b> – A drive that is part of a virtual drive but which has invalid data as far as the RAID configuration is concerned.<br/>In the output of the StorCLI commands, <b>Offline</b> is displayed as <b>offln</b>.<br/>An amber LED no longer indicates the drive is offline.</li> </ul> <p><b>Virtual Drive State</b></p> <p>A virtual drive can be in any one of the following states:</p> <ul style="list-style-type: none"> <li>• <b>Optimal</b> – A virtual drive whose members are all online.<br/>In the output of the StorCLI commands, <b>Optimal</b> is displayed as <b>optl</b>.</li> <li>• <b>Partially Degraded</b> – A virtual drive with a redundant RAID level that is capable of sustaining more than one member drive failure. This state also applies to the virtual drive's member drives. Currently, a RAID 6 or RAID 60 virtual drive is the only virtual drive that can be partially degraded.<br/>In the output of the StorCLI commands, <b>Partially Degraded</b> is displayed as <b>Pdgd</b>.</li> <li>• <b>Degraded</b> – A virtual drive with a redundant RAID level with one or more member failures and can no longer sustain a subsequent drive failure.<br/>In the output of the StorCLI commands, <b>Degraded</b> is displayed as <b>dgrd</b>.</li> <li>• <b>Offline</b> – A virtual drive with one or more member failures that make the data inaccessible.<br/>In the output of the StorCLI commands, <b>Offline</b> is displayed as <b>OfLn</b>.</li> </ul> |
| Drive state drive subsystem | <p>A collection of drives and the hardware that controls them and connects them to one or more controllers. The hardware can include an intelligent controller, or the drives can attach directly to a system I/O bus controller.</p>  |
| Drive type                  | <p>A drive property indicating the characteristics of the drive.</p>   |
| EKM                         | <p><b>E</b></p> <p>External Key Management.</p>  |
| Estimated time to recharge  | <p>Estimated time necessary to complete recharge of the supercapacitors at the current charge rate.</p>  |
| Expected margin of error    | <p>Indicates how accurate the reported supercapacitors capacity is in terms of percentage.</p>   |
| Fast initialization         | <p><b>F</b></p> <p>A mode of initialization that quickly writes zeroes to the first and last sectors of the virtual drive. This allows you to immediately start writing data to the virtual drive while the initialization is running in the background.</p>   |
| Fault tolerance             | <p>The capability of the drive subsystem to undergo a single drive failure per drive group without compromising data integrity and processing capability. The SAS RAID controllers provides fault tolerance through redundant drive groups in RAID levels 1, 5, 6, 10, 50, and 60. They also support hot spare drives and the auto-rebuild feature.</p>  |

|                       |   |
|-----------------------|---|
| Firmware              | Software stored in read-only memory (ROM) or programmable ROM (PROM). Firmware is often responsible for the behavior of a system when it is first turned on. A typical example would be a monitor program in a system that loads the full operating system from drive or from a network and then passes control to the operating system.  |
| Foreign configuration | A RAID configuration that already exists on a replacement set of drives that you install in a computer system. LSI Storage Authority software allows you to import the existing configuration to the RAID controller, or you can clear the configuration so you can create a new one.   |
| Formatting            | The process of writing a specific value to all data fields on a drive, to map out unreadable or bad sectors. Because most drives are formatted when manufactured, formatting is usually done only if a drive generates many media errors.   |
| Full charge capacity  | Amount of charge that can be placed in the supercapacitors. This value represents the last measured full discharge of the supercapacitors. This value is updated on each learn cycle when the supercapacitors undergo a qualified discharge from nearly full to a low level.  |
| <b>G</b>              |   |
| Gas gauge status      | Hexadecimal value that represents the status flag bits in the gas gauge status register.  |
| <b>H</b>              |   |
| Hole                  | In LSI Storage Authority, a <i>hole</i> is a block of empty space in a drive group that can be used to define a virtual drive.  |
| Host interface        | A controller property indicating the type of interface used by the computer host system: for example, <i>PCIX</i> .   |
| Host port count       | A controller property indicating the number of host data ports currently in use.  |
| Host system           | Any computer system on which the controller is installed. Mainframes, workstations, and standalone desktop systems can all be considered host systems.  |
| Hot spare             | A standby drive that can automatically replace a failed drive in a virtual drive and prevent data from being lost. A hot spare can be dedicated to a single redundant drive group or it can be part of the global hot spare pool for all drive groups controlled by the controller. When a drive fails, LSI Storage Authority software automatically uses a hot spare to replace it and then rebuilds the data from the failed drive to the hot spare. Hot spares can be used in RAID 1, 5, 6, 10, 50, and 60 storage configurations. |
| <b>I</b>              |   |
| Initialization        | The process of making a redundant virtual drive consistent. Foreground initialization writes zeros to the data fields, erasing all existing data.<br>Background Initialization (BGI) makes a virtual drive redundant by reading the other drives in the VD, calculating parity, and writing it to the drives. BGI does not erase user data. A user can use the VD while BGI is active.  |
| IO policy             | A virtual drive property indicating whether Cached I/O or Direct I/O is being used. In Cached I/O mode, all reads are buffered in cache memory. In Direct I/O mode, reads are not buffered in cache memory. Data is transferred to cache and the host concurrently. If the same data block is read again, it comes from cache memory. (The IO Policy applies to reads on a specific virtual drive. It does not affect the read ahead cache.)  |
| <b>L</b>              |   |
| LDBBM                 | Logical drive bad block management.   |
| Learn delay interval  | Length of time between automatic learn cycles. You can delay the start of the learn cycles for up to 168 hours (7 days).  |
| Learning cycle        | A battery calibration operation performed by a RAID controller periodically to determine the condition of the battery. You can start battery learn cycles manually or automatically.  |
| Learn mode            | Mode for the battery auto learn cycle. Possible values are Auto, Disabled, and Warning.   |
| Learn state           | Indicates that a learn cycle is in progress.  |
| LKM                   | Local Key Management.   |

|   |  |  |
|---|--|--|
| Load-balancing                              |  | A method of spreading work between two or more computers, network links, CPUs, drives, or other resources. Load balancing is used to maximize resource use, throughput, or response time.  |
| Low-power storage mode                      |  | Storage mode that causes the battery pack to use less power, which save battery power consumption.   |
| <b>M</b>                                    |  |  |
| Manufacturing date                          |  | Date on which the battery pack assembly was manufactured.  |
| Manufacturing name                          |  | Device code that indicates the manufacturer of the components used to make the battery assembly.   |
| Max error                                   |  | Expected margin of error (percentage) in the state of charge calculation. For example, when Max Error returns 10 percent and Relative State of Charge returns 50 percent, the Relative State of charge is more likely between 50 percent and 60 percent. The gas gauge sets Max Error to 100 percent on a full reset. The gas gauge sets Max Error to 2 percent on completion of a learn cycle, unless the gas gauge limits the learn cycle to the +512/-256-mAh maximum adjustment values. If the learn cycle is limited, the gas gauge sets Max Error to 8 percent unless Max Error was already below 8 percent. In this case Max Error does not change. The gas gauge increments Max Error by 1 percent after four increments of Cycle Count without a learn cycle. |
| Maximum learn delay from current start time |  | Maximum length of time between automatic learn cycles. You can delay the start of a learn cycle for a maximum of 168 hours (7 days).   |
| Media error count                           |  | A drive property indicating the number of errors that have been detected on the drive media.   |
| Migration                                   |  | The process of moving virtual drives and hot spare drives from one controller to another by disconnecting the drives from one controller and attaching them to another one. The firmware on the new controller will detect and retain the virtual drive information on the drives.   |
| Mirroring                                   |  | The process of providing complete data redundancy with two drives by maintaining an exact copy of one drive's data on the second drive. If one drive fails, the contents of the other drive can be used to maintain the integrity of the system and to rebuild the failed drive.   |
| Multipathing                                |  | The firmware provides support for detecting and using multiple paths from the RAID controllers to the SAS devices that are in enclosures. Devices connected to enclosures have multiple paths to them. With redundant paths to the same port of a device, if one path fails, another path can be used to communicate between the controller and the device. Using multiple paths with load balancing, instead of a single path, can increase reliability through redundancy.   |
| <b>N</b>                                    |  |  |
| Name  |  | A virtual drive property indicating the user-assigned name of the virtual drive.   |
| Next learn time                             |  | Time at which the next learn cycle starts.   |
| Non-redundant configuration                 |  | A RAID 0 virtual drive with data striped across two or more drives but without drive mirroring or parity. This provides for high data throughput but offers no protection in case of a drive failure.  |
| NVMe  |  | Acronym for nonvolatile memory express. NVMe is a logical device interface specification for accessing NVM storage media attached by means of a PCI Express (PCIe) bus, which removes SCSI from the I/O stack.   |
| NVRAM                                       |  | Acronym for nonvolatile random access memory. A storage system that does not lose the data stored on it when power is removed. NVRAM is used to store firmware and configuration data on the RAID controller.  |
| NVRAM present                               |  | A controller property indicating whether an NVRAM is present on the controller.  |
| NVRAM size                                  |  | A controller property indicating the capacity of the controller's NVRAM.   |
| <b>O</b>                                    |  |  |
| Offline                                     |  | A drive is offline when it is part of a virtual drive but its data is not accessible to the virtual drive.   |
| <b>P</b>                                    |  |  |
| Patrol read                                 |  | A process that checks the drives in a storage configuration for drive errors that could lead to drive failure and lost data. The patrol read operation can find and sometimes fix any potential problem with drives before host access. This enhances overall system performance because error recovery during a normal I/O operation might not be necessary.  |

|  |  |
|--|--|
| Patrol read rate                                     | The user-defined rate at which patrol read operations are run on a computer system.  |
| Predicted battery capacity status (hold 24hr charge) | Indicates whether the battery capacity supports a 24-hour data retention time.   |
| Product info   | A drive property indicating the vendor-assigned model number of the drive.   |
| Product name   | A controller property indicating the manufacturing name of the controller.   |
| <b>R</b>   |  |
| RAID   | A group of multiple, independent drives that provide high performance by increasing the number of drives used for saving and accessing data. A RAID drive group improves input/output (I/O) performance and data availability. The group of drives appears to the host system as a single storage unit or as multiple virtual drives. Data throughput improves because several drives can be accessed simultaneously. RAID configurations also improve data storage availability and fault tolerance. Redundant RAID levels (RAID levels 1, 5, 6, 10, 50, and 60) provide data protection. |
| RAID 0   | Uses data striping on two or more drives to provide high data throughput, especially for large files in an environment that requires no data redundancy.   |
| RAID 00  | Uses data striping on two or more drives in a spanned drive group to provide high data throughput, especially for large files in an environment that requires no data redundancy.  |
| RAID 1   | Uses data mirroring on pairs of drives so that data written to one drive is simultaneously written to the other drive. RAID 1 works well for small databases or other small applications that require complete data redundancy.  |
| RAID 1E  | Uses two-way mirroring on two or more drives. RAID 1E provides better performance than a traditional RAID 1 array.   |
| RAID 5   | Uses data striping and parity data across three or more drives (distributed parity) to provide high data throughput and data redundancy, especially for applications that require random access.   |
| RAID 6   | Uses data striping and parity data across three or more drives (distributed parity) to provide high data throughput and data redundancy, especially for applications that require random access. RAID 6 can survive the failure of two drives.   |
| RAID 10  | A combination of RAID 0 and RAID 1 that uses data striping across two mirrored drive groups. It provides high data throughput and complete data redundancy.  |
| RAID 50  | A combination of RAID 0 and RAID 5 that uses data striping across two drive groups with parity data. It provides high data throughput and complete data redundancy.  |
| RAID 60  | A combination of RAID 0 and RAID 6 that uses data striping across two drive groups with parity data. It provides high data throughput and complete data redundancy. RAID 60 can survive the failure of two drives in each RAID set in the spanned drive group.   |
| RAID level   | A virtual drive property indicating the RAID level of the virtual drive. The SAS RAID controllers support RAID levels 0, 1, 5, 6, 10, 50, and 60.  |
| RAID Migration                                       | A feature in RAID subsystems that allows changing a RAID level to another level without powering down the system.  |
| Raw capacity   | A drive property indicating the actual full capacity of the drive before any coercion mode is applied to reduce the capacity.  |
| Read policy  | A controller attribute indicating the current Read Policy mode. Always Read Ahead Permits the controller to read sequentially ahead of the requested data and allows the controller to store the additional data in the cache memory. Here, the controller anticipates that the data is required frequently. Even though Always Read Ahead policy speeds up the reads for sequential data, but little improvement is seen when accessing the random data.<br>No Read Ahead (also known as Normal mode in WebBIOS), the Always Read Ahead capability of the controller is disabled.         |
| Rebuild  | The regeneration of all data to a replacement drive in a redundant virtual drive after a drive failure. A drive rebuild normally occurs without interrupting normal operations on the affected virtual drive, though some degradation of performance of the drive subsystem can occur.   |
| Rebuild rate   | The percentage of central processing unit (CPU) resources devoted to rebuilding data onto a new drive after a drive in a storage configuration has failed.   |

|                           |          |  |
|---------------------------|----------|--|
| Reclaim virtual drive     |          | A method of undoing the configuration of a new virtual drive. If you highlight the virtual drive in the Configuration Wizard and click Reclaim, the individual drives are removed from the virtual drive configuration.  |
| Reconstruction rate       |          | The user-defined rate at which a drive group modification operation is carried out.  |
| Redundancy                |          | A property of a storage configuration that prevents data from being lost when one drive fails in the configuration.  |
| Redundant configuration   |          | A virtual drive that has redundant data on drives in the drive group that can be used to rebuild a failed drive. The redundant data can be parity data striped across multiple drives in a drive group, or it can be a complete mirrored copy of the data stored on a second drive. A redundant configuration protects the data in case a drive fails in the configuration.  |
| Relative state of charge  |          | Predicted remaining battery capacity expressed as a percentage of Full Charge Capacity.  |
| Remaining capacity        |          | Amount of remaining charge capacity of the battery as stated in milliamp hours. This value represents the available capacity or energy in the battery at any given time. The gas gauge adjusts this value for charge, self-discharge, and leakage compensation factors.  |
| Reversible hot spare      |          | When you use the Replace Member procedure, after data is copied from a hot spare to a new drive, the hot spare reverts from a rebuild drive to its original hot spare status.  |
| Revision level            |          | A drive property that indicates the revision level of the drive's firmware.  |
| Run time to empty         |          | Predicted remaining battery life at the present rate of discharge in minutes.  |
|                           | <b>S</b> |  |
| SAS                       |          | Acronym for Serial-Attached SCSI. SAS is a serial, point-to-point, enterprise-level device interface that leverages the Small Computer System Interface (SCSI) protocol set. The SAS interface provides improved performance, simplified cabling, smaller connectors, lower pin count, and lower power requirements when compared to parallel SCSI.  |
| SATA                      |          | Acronym for Serial Advanced Technology Attachment. A physical storage interface standard. SATA is a serial link that provides point-to-point connections between devices. The thinner serial cables allow for better airflow within the system and permit smaller chassis designs.   |
| SCSI device type          |          | A drive property indicating the type of the device, such as drive.   |
| Serial no.                |          | A controller property indicating the manufacturer-assigned serial number.  |
| Stripe size               |          | A virtual drive property indicating the length of the interleaved data segments that the RAID controller writes across multiple drives, not including parity drives. For example, consider a stripe that contains 1 MB of drive space and has 64 KB of data residing on each drive in the stripe. In this case, the stripe size is 1 MB and the strip size is 64 KB. The user can select the stripe size.  |
| Striping                  |          | A technique used to write data across all drives in a virtual drive. Each stripe consists of consecutive virtual drive data addresses that are mapped in fixed-size units to each drive in the virtual drive using a sequential pattern. For example, if the virtual drive includes five drives, the stripe writes data to drives one through five without repeating any of the drives. The amount of space consumed by a stripe is the same on each drive. Striping by itself does not provide data redundancy. Striping in combination with parity does provide data redundancy. |
| Strip size                |          | The portion of a stripe that resides on a single drive in the drive group.   |
| Subvendor ID              |          | A controller property that lists additional vendor ID information about the controller.  |
|                           | <b>T</b> |  |
| Temperature               |          | Degree of heat present in the supercapacitors, measured in Celsius.  |
|                           | <b>U</b> |  |
| Uncorrectable error count |          | A controller property that lists the number of uncorrectable errors detected on drives connected to the controller. If the error count reaches a certain level, a drive will be marked as failed.  |
|                           | <b>V</b> |  |
| Vendor ID                 |          | A controller property indicating the vendor-assigned ID number of the controller.  |
| Vendor info               |          | A drive property listing the name of the vendor of the drive.  |

---

|                     |   |
|---------------------|---|
| Virtual drive       | A storage unit created by a RAID controller from one or more drives. Although a virtual drive can be created from several drives, it is seen by the operating system as a single drive. Depending on the RAID level used, the virtual drive can retain redundant data in case of a drive failure.   |
| Virtual drive state | A virtual drive property indicating the condition of the virtual drive. Examples include Optimal and Degraded.  |
| <b>W</b>            |   |
| Write-back          | <p>In Write-Back Caching mode, the controller sends a data transfer completion signal to the host when the controller cache has received all of the data in a drive write transaction. Data is written to the drive subsystem in accordance with policies set up by the controller. These policies include the amount of dirty/clean cache lines, the number of cache lines available, and elapsed time from the last cache flush.</p> <p>Write-back cache is used when write caching is enabled.</p> |
| Write policy        | See <i>Default Write Policy</i> .   |
| Write-through       | <p>In Write-Through Caching mode, the controller sends a data transfer completion signal to the host when the drive subsystem has received all of the data and has completed the write transaction to the drive.</p> <p>Write-through cache is used when write caching is disabled.</p>   |



## Revision History

---

### **Version 1.10, June 4, 2021**

The following changes were made:

- Updated [Hot Spares](#).
- Updated [RAID 6 Drive Groups](#).
- Updated [RAID 60 Drive Groups](#).
- Updated [Placing a Drive Offline](#).
- Updated [Changing Power Save Settings](#).
- Updated [StorCLI Tool Command Syntax](#).
- Updated [Show and Set Controller Properties Commands](#).
- Updated [Set Drive State Commands](#).
- Updated [Profile Management](#).
- Updated [Controller Security Commands](#).
- Added [Flashing Controller Firmware Command while the Firmware Is Nonoperational](#).
- Added [Erase Command](#).
- Updated [Windows Driver RTTrace](#).
- Updated [Modifying SnapDump Properties Command](#).
- Updated [Temperature Command](#).
- Updated [Drive Copyback Commands](#).
- Updated [Drive Firmware Download Commands](#).
- Updated [JBOD Operations](#).
- Updated [Delete JBODs or Volumes](#).
- Updated [Foreign Configuration Commands](#).
- Updated [Drive Group Show Commands](#).
- Added [Recovery Commands \(UEFI Only\)](#).
- Added [Switching Between I2C and PCIe Mode Command](#).
- Added [Recovery Commands \(UEFI Only\)](#).
- Updated [Differences in the System Boot Mode](#).

### **Version 1.9, February 9, 2021**

The following changes were made:

- Updated [Virtual Drive](#).
- Added [autoSecureSED](#).
- Updated [Show and Set Controller Properties Commands](#).
- Updated [Controller Configuration Commands](#).
- Updated [Windows Driver RTTrace](#).
- Updated [Enclosure Commands](#).
- Added [JBOD Converting to UGOOD](#).
- Added [Virtual Drives Converting to UGOOD](#).
- Updated [Online Firmware Upgrade and Downgrade](#).
- Updated [Event Messages](#)
- Updated [Glossary](#).



### **Version 1.8, September 9, 2020**

The following changes were made:

- Updated [RAID 60 Drive Groups](#).
- Updated [Modifying SnapDump Properties Command](#).
- Updated [Clearing SnapDump Data Commands](#).
- Updated 0x005E, 0x0060, and 0x0071 events in [Table 63: Event Messages](#).
- Updated `storcli /cx set autoconfig` in [Automated Physical Drive Configurations](#).
- Added `forceclose` input option to [Flashing Controller Firmware Command while the Firmware Is Operational](#).
- Added new `sanitize` command in [Drive Sanitize Command](#).
- Added virtual drive information to [Previewing and Importing a Foreign Configuration](#).
- Added new `SPDM` commands to [SPDM Commands](#).
- Added new `Drive Performance Monitoring` command to [Drive Performance Monitoring Commands](#).
- Update `storcli/cx/cv show all` command in [CacheVault Commands](#).
- Update Virtual Drive Status table in [Virtual Drive States](#).

### **Version 1.7, March 31, 2020**

The following changes were made:

- Removed JBOD object identifier from [Table 39, Object Identifiers in the StorCLI Command Syntax](#).
- Changed `personality` commands to `autoconfig` commands in [Show and Set Controller Properties Commands](#).
- Changed `personality` commands to `autoconfig` commands and added R0 option to [Table 42, Properties for Show and Set Commands](#).
- Added [SnapDump Commands](#).
- Updated `autoconfig` commands in [Automated Physical Drive Configurations](#).

### **Version 1.6, February 16, 2018**

The following changes were made:

- Added a note regarding PDs to [Table 28, Profile Management Dialog Details](#) and [Profile Management](#).

### **Version 1.5, February 16, 2018**

The following changes were made:

- Updated [Managing Profiles](#).
- Updated [Add Virtual Drives Commands](#).
- Updated [Virtual Drive Erase Commands](#)
- Updated [RAID Configuration Commands](#).

### **Version 1.4, November 30, 2017**

The following changes were made:

- Updated [Profile Management](#).
- Updated [Manually Creating a Virtual Drive](#).
- Updated [Viewing Advanced Controller Management Options](#).
- Updated [Changing Security Settings](#).
- Updated [Managing Profiles](#).
- Updated [Adding Drives to a Configuration](#).

**Version 1.3, September 11, 2017**

The following changes were made:

- Added [Creating a RAID 10 Volume from the Database](#).
- Updated [Managing Profiles](#).
- Added [Downgrading the Firmware When Profiles Are Selected](#).
- Updated [Manually Creating a Virtual Drive](#) with [Table 23, Emulation Settings](#).
- Updated [Preserved Cache Commands](#).

**Version 1.2, June 21, 2017**

The following changes were made:

- Updated [HII Dashboard View](#).
- Updated [Displaying Boot Messages](#).

**Version 1.1, March 24, 2017**

The following changes were made:

- Updated [Viewing Advanced Controller Management Options](#).
- Updated [Managing SAS Storage Link Speeds](#).
- Added [Managing PCIe Storage Interface](#).
- Updated [Viewing Advanced Drive Properties](#).
- Added [PCIe Storage Interface Commands](#), and [Lane Speed Commands](#).

**Preliminary, Version 1.0, October 28, 2016**

Initial document release.

